


使用說明書

微波爐

輕觸式平板燒烤微波爐 (26公升)

MV2-EG26PEI(BK)

在操作前請先審閱本說明書。

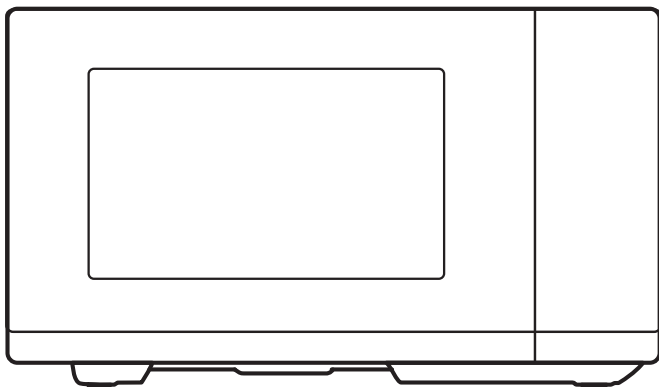

TOSHIBA

目錄

產品安全

避免接觸過量微波能量的預防措施	CN-01
規格	CN-02
重要安全須知	CN-03
降低對接地裝置人員造成傷害的風險	CN-07
清潔	CN-09
器皿	CN-10
可用於微波爐的物料	CN-11
不可用於微波爐的物料	CN-13

產品設置

微波爐安裝	CN-14
-------------	-------

使用說明

首次使用前	CN-16
控制面板和功能	CN-17
1. 微波烹調	CN-18
2. 燒烤烹調	CN-19
3. 組合烹調	CN-19
4. 按時間解凍	CN-20
5. 按重量解凍	CN-20
6. 多階段烹調	CN-21
7. 快速烹調	CN-22
8. 查詢功能	CN-22
9. 節能功能	CN-23
10. 兒童鎖功能	CN-23

11. 自動功能	CN-24
----------------	-------

清潔和維護

清潔	CN-26
----------	-------

故障排除	CN-28
------------	-------




注意

在操作本產品之前，請閱讀、理解並遵循這些說明。請務必保存此手冊以備將來參考。

產品安全

避免接觸過量微波能的預防措施

- (a). 禁止在門打開的情況下操作該微波爐，因為這可能會接觸到微波能量而造成傷害。不得破壞或篡改安全聯鎖裝置。
- (b). 禁止在微波爐正面和門之間放置任何物體，密封面上不得有任何土壤或清潔劑殘留物。
- (c). 警告：如果微波爐的門或門密封條有損，須待專業技術人員修好後，方可使用微波爐。

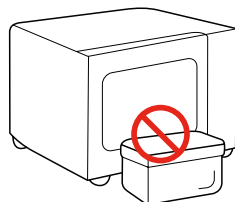

補充說明

如果本電器未能保持良好的清潔狀態，其表面可能會退化，使用壽命也會縮短，導致危險情況。

規範

型號	MV2-EG26PEI(BK)
額定電壓/ 頻率	220-230V~ 50Hz
額定微波輸入功率	1380 W
額定微波輸出功率	900 W
燒烤功率	900-1000 W
爐腔尺寸 (闊 x 深 x 高)	335x348x226.4 mm
產品尺寸 (闊 x 深 x 高)	495x385x302 mm



本手冊中的所有圖片僅用於說明目的；這些可能與購買的設備略有不同，請以實際產品為準。

重要安全須知



警告

為降低使用本電器時發生火災、觸電、人身傷害或暴露於過量微波能量的風險，請遵循以下基本預防措施：




閱讀並遵循以下具體內容：“避免接觸過量微波能量的預防措施”



本電器不適合體力、感官或智力不佳或缺乏經驗和知識的人員（包括兒童）使用，除非有負責其安全的人員對其使用進行監督或指導。



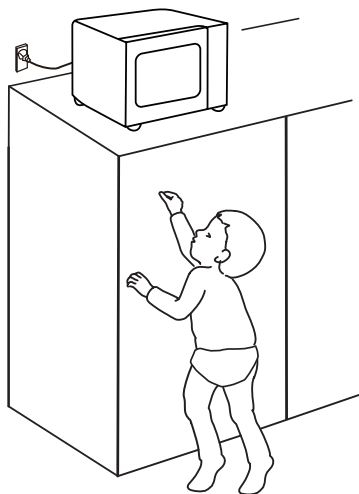

請看管好兒童，切勿讓兒童玩耍本電器。





如果電源線受到損壞，必須由製造商、其服務代理商或類似合格人員更換，以免發生危險。

 
重要安全須知


 **警告：** 為避免發生觸電，在更換燈泡前，請確保本電器已關閉。


 **警告：** 必須由合資格人員執行與拆卸微波能量蓋（此蓋可防止人員暴露於微波能量之中）相關的任何服務或維修操作，否則會造成危險。


 **警告：** 不得將液體和其他食物置於密封容器中加熱，否則易造成爆炸。


 使用塑膠或紙質容器加熱食物時，請注意觀察微波爐，以防著火。




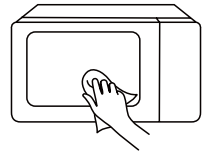
 只能使用適用於微波爐的器皿。


 如果冒煙，請關閉本電器或拔下插頭，並保持門關閉，以撲滅火焰。

 用微波爐加熱飲料會導致延遲噴發沸騰，因此在拿取容器時必須小心。


 為避免燙傷，在飲用前，應攪拌或搖動奶瓶和嬰兒食物罐的內容物，並檢查溫度。


 應定期清潔微波爐，並清除食物殘渣。請保持波導區域清潔。當波導區域或爐腔有食物飛濺的殘留物時，用柔軟濕布將其清理乾淨。如果不清理食物殘留物，可能會導致微波爐腔內產生無害火花、煙霧，或者腔體變色。




 未能保持微波爐清潔可能導致表面退化，從而可能影響本電器的壽命，並造成危險。


重要安全須知


 僅使用本微波爐推薦的溫度探頭。（適用於配有溫度感測探頭設施的微波爐。）


 必須在裝飾門打開的情況下操作微波爐。（適用於帶裝飾門的微波爐。）


 本設備擬用於家用和下列類似用途：


1. 車間、辦公室和其他工作環境中的員工廚房區域；
2. 酒店、汽車旅館和其他居住場所中的客戶；
3. 農舍；
4. 住宿加早餐旅館之類的环境。


 微波爐的用途是加熱食物和飲料。如果將其用於烘乾食物或衣物以及加熱電熱墊、拖鞋、海綿、濕布和類似物品，可能會導致受傷、著火或起火的危險。


 本電器的背面應靠牆放置。


 設備運行期間表面溫度可能較高。


 **警告：**當本電器以組合模式運行時，由於會產生高溫，故兒童只能在成人監督下使用微波爐


 本電器為獨立式設備。

 不得將帶殼的雞蛋和全熟雞蛋放在微波爐中加熱，因為即使在微波加熱結束後，它們也可能爆開。

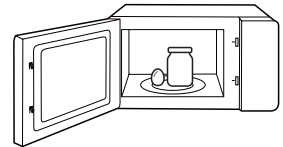



 除非已在櫥櫃中開展測試，否則不得將微波爐放置在機櫃中。

 微波烹飪時，不得使用金屬容器盛裝食物和飲料。

 不得使用蒸汽清潔器清潔本電器。

重要安全須知

 請勿通過外部計時器或單獨的遙控系統操作本電器。

 為避免過熱，禁止將本電器安裝在裝飾門後。

(該要求不適用於帶裝飾門的電器。)

仔細閱讀並保存，僅供將來參考
(僅供家用，不適用於商業用途)

降低對接地裝置人員造成傷害的風險

本電器必須接地。發生電氣短路時，接地通過為電流提供逃逸線來降低觸電風險。

本電器配有一根帶接地線和接地插頭的電源線。插頭必須插入正確安裝並接地的插座中。

警告 - 接地使用不當會導致觸電風險。如果不完全理解接地說明，或者如果對本電器是否正確接地存在疑問，請諮詢合格的電工或維修人員。

如果需要使用延長線，僅使用三芯延長線。



危險

觸電危險：

觸摸某些內部元件可能會造成嚴重的人身傷害或死亡。請勿拆卸本電器。

降低對接地裝置人員造成傷害的風險



警告

觸電危險：

接地不當會導致觸電。在本電器正確安裝和接地之前，請勿將插頭插入插座。

1. 提供短電源線，以減少被長電源線纏住或絆倒的風險。
2. 如果使用長線或延長線：
 - (1).線組或延長線的標記電氣額定值應至少與本電器的電氣額定值相等。
 - (2).延長線必須是接地型三芯線。
 - (3).長線的佈置應確保其不會懸垂在臺面或桌面上，以免被兒童拉扯或無意中絆倒他人。

清潔

請確保把本設備的插頭從電源上拔下。

1. 使用後，用微濕的布清潔微波爐腔體。
2. 按常規方法用肥皂水清洗配件。
3. 門框、密封條和相鄰部件髒污時，必須用濕布仔細清潔。
4. 切勿使用粗糙的擦洗劑或鋒利的金屬刮刀來清潔微波爐門玻璃，因為它們會劃傷表面，從而可能導致玻璃破碎。
5. 清潔提示 — 為了方便清潔熟食可能接觸到的爐腔壁：將半個檸檬放入碗中，加入 300ml (1/2 品脫) 水，並在 100% 微波功率下加熱 10 分鐘。用柔軟的乾布將微波爐擦拭乾淨。

器皿



注意


人身傷害危險：

必須由合格人員執行與拆卸微波能量蓋（此蓋可防止人員暴露於微波能量之中）相關的任何服務或維修操作，否則會造成危險。參見說明「**可用於微波爐的材料**」或「**不可用於微波爐的材料**」。

在微波爐中使用某些非金屬器具也可能不安全。如有疑問，您可以按照以下程序對相關器具進行測試。


器皿測試：

1. 在微波安全容器中加入 1 杯冷水（250ml），將該容器和待測試器皿一起放入微波爐。
2. 在最大功率下烹飪 1 分鐘。
3. 仔細觸摸器皿。如果該器皿在空置時是溫熱的，請勿將其用於微波烹飪。
4. 烹飪時間不得超過 1 分鐘。

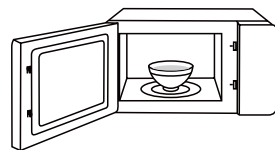

注意



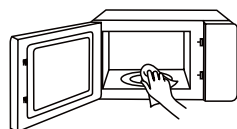





保持微波爐爐腔和波導區域清潔



可用於微波爐的物料

器皿	備註	
 烤架盤	遵循製造商的說明。 烤架盤的底部必須至少高於轉盤 3/16 英寸 (5mm) 。 使用不當可能導致轉盤破裂。	
 餐盤	僅限微波安全材料。遵循製造商的說明。切勿使用有裂紋或缺口的盤子。	
 玻璃罐	務必取下蓋子。只能將食物加熱至剛剛變溫熱的程度。 大多數玻璃罐不耐熱，可能會破裂。	
 玻璃器皿	僅限微波爐耐熱玻璃器皿。確保沒有金屬飾件。切勿使用有裂紋或缺口的盤子。	
 微波爐烹飪袋	遵循製造商的說明。切勿使用金屬扎帶封口。 留出縫隙使蒸氣逸出。	
 紙盤和紙杯	僅用於短時間烹飪 / 加熱。烹飪時，微波爐必須有人看管。	
 紙巾	用來覆蓋食物，以重新加熱和吸收脂肪。僅在監督下用於短時間烹飪。	
 烤盤紙	用作蓋子防止飛濺，或用作包裝防止蒸氣溢出。	

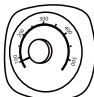可用於微波爐的物料

器皿	備註
 塑膠	僅限微波安全材料。遵循製造商的說明。應貼上“微波安全”的標籤。一些塑膠容器會隨著內置食物變熱而軟化。應按照包裝上的說明，對“可煮袋”和密封塑膠袋進行開口、穿孔或通風處理。 
 保鮮膜	僅限微波安全材料。烹飪時用來覆蓋食物以保持水分。切勿將保鮮膜接觸食物。 
 溫度計	僅微波專用（肉類和糖果溫度計）。 
 蠟紙	用作蓋子防止飛濺並保持水分。 


不可用於微波爐的物料

器皿	備註	
 鋁託盤	可能導致電弧放電。將食物轉移到可以微波安全使用的盤子中。	⊗
 帶金屬把手的食物紙箱	可能導致電弧放電。將食物轉移到可以微波安全使用的盤子中。	⊗
 金屬或金屬裝飾器皿	金屬會阻隔食物受微波能作用。金屬飾件可能導致擊穿。	⊗
 金屬扎帶	金屬扎帶可能導致電弧放電，並導致微波爐起火。	⊗
 紙袋	紙袋可能會導致微波爐起火。	⊗
 發泡膠	在高溫下，發泡膠可能會熔化或污染容器內液體。	⊗
 木製品	木製品在微波爐中使用時會變乾，並可能開裂。	⊗


微波爐安裝

微波爐零配件名稱

 
從紙箱和微波爐腔體中取出微波爐和所有材料。



使用說明書

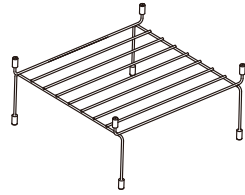

烤架（不能用於微波功能，必須放置在爐腔底部）

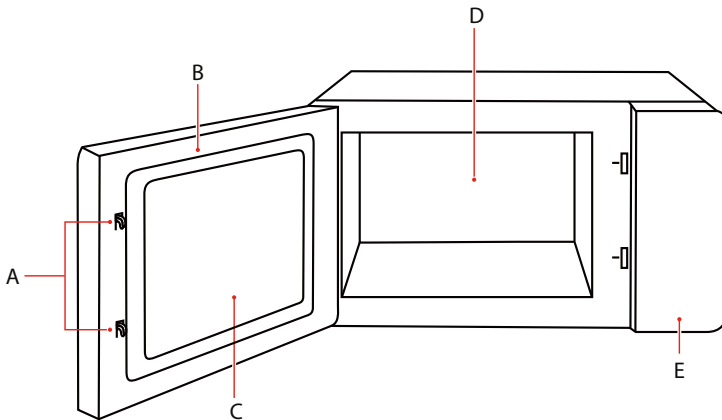

- A) 安全聯鎖系統
- B) 門組件
- C) 觀察窗
- D) 微波爐腔體

- E) 控制面板



注意

若產品實物與本手冊中圖片有差異，請以實物為準。


枱面安裝

拆除所有包裝材料和配件。檢查微波爐是否存在凹陷或門破裂等損壞情況。如果微波爐損壞，請勿安裝。

機櫃：去除微波爐機櫃表面的所有保護膜。請勿取下粘在微波爐腔體上保護磁控管的波導蓋。

安裝

1. 選擇一個水平面，為進氣口和 / 或排氣口留出足夠的開放空間。
 - a. 最小安裝高度為 85 cm。
 - b. 設備的背面應靠牆放置。微波爐上方至少留出 30cm 間隙。微波爐與鄰近牆面之間的距離不得少於 10cm。
 - c. 請勿取下微波爐底部的支腳。
 - d. 堵塞進氣口和 / 或排氣口會損壞微波爐。
 - e. 將微波爐放置在盡可能遠離收音機和電視的地方。微波爐運行時可能會干擾收音機或電視接收信號。

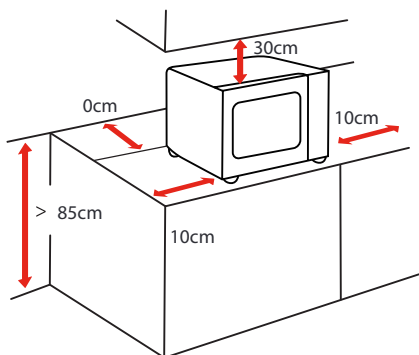


側面	距離 (cm)
頂部	30cm
左側	10cm
右側	10cm
後面	0cm
正面	開放

2. 將微波爐插頭插入標準家用插座。請確保微波爐的電壓和頻率與標籤上的額定電壓和頻率相同。



注意

- 請勿將微波爐安裝在爐竈或其他發熱電器上方。
如果安裝在熱源附近或上方，微波爐易損壞，此類情況不在保固範圍內。

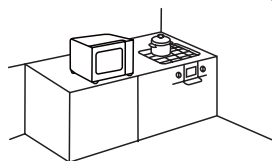

微波爐運行時，可接觸表面可能很燙

使用說明

首次使用前

首次使用微波爐時，可能會出現異味，屬於正常現象。

本節介紹了首次使用微波爐製備食物前需要完成的事項。

使用前，請先閱讀“產品安全”一節。

使用新電器前，需要把轉盤放置在正確位置。必須清潔爐腔和附件。




注意

- 切勿在沒有轉盤的情況下使用本電器。
- 確保各部件啮合就位。轉盤可順時針或逆時針轉動。

操作

控制面板和功能

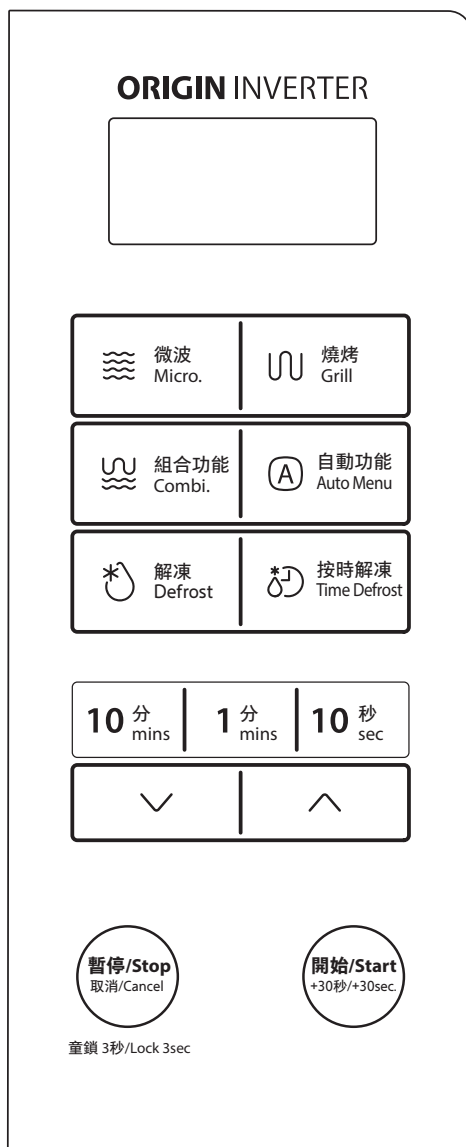

1. 微波烹調

個可用的微波功率等級

功率	100%	80%	50%	30%	10%
顯示	PL10	PL08	PL05	PL03	PL01

a 按  微波 Micro. 一次，顯示“PL10”。



b 按  微波 Micro. 重複地，
或者按  或  設置功率
級別。有5個功率等級可供選擇。



c 按 **開始/Start** 確認。
+30秒/+30sec.




d 按 10 ^分_{mins} , 1 ^分_{mins} , 10 ^秒_{sec} , 或  , 
設置烹飪時間。
最大時間值為“99:50”。



e 按 **開始/Start**
+30秒/+30sec. 開始烹飪。



2. 燒烤烹調

a 按  燒烤 Grill 一次，顯示「G-1」。

 燒烤 Grill

b 按 **開始/Start** +30秒/+30sec. 確認。

開始/Start
+30秒/+30sec.

c 按 10 分 mins, 1 分 mins, 10 秒 sec, 或 ,  10 分 mins 1 分 mins 10 秒 sec 設置烹飪時間。
最大時間值為“99:50”。


10 分 mins 1 分 mins 10 秒 sec

d 按 **開始/Start** +30秒/+30sec. 開始烹飪。

開始/Start
+30秒/+30sec.

3. 組合烹調

a 按  組合功能 Combi. 一次或兩次，顯示「C-1」或“C-2”。

 組合功能 Combi.

b 按 **開始/Start** +30秒/+30sec. 確認。

開始/Start
+30秒/+30sec.

c 按 10 分 mins, 1 分 mins, 10 秒 sec, , 或  10 分 mins 1 分 mins 10 秒 sec 或 設置烹飪時間。
最大時間值為“99:50”。

10 分 mins 1 分 mins 10 秒 sec 或

d 按 **開始/Start** +30秒/+30sec. 開始烹飪。

開始/Start
+30秒/+30sec.

組合烹飪圖表

功能	顯示	微波	燒烤
組合1	C-1	55%	45%
組合2	C-2	34%	66%

4. 按時間解凍

a 按  按時解凍 Time Defrost 一次，顯示“dEF1”。

 按時解凍 Time Defrost

b 按 **開始/Start** +30秒/+30sec. 確認。

開始/Start
+30秒/+30sec.

c 按 10 ^分_{mins} , 1 ^分_{mins} , 10 ^秒_{sec} , 或  ,  設置所需的解凍時間。
最大時間值為“99:50”。

10 ^分_{mins} 1 ^分_{mins} 10 ^秒_{sec} 或

d 按 **開始/Start** +30秒/+30sec. 開始解凍。

開始/Start
+30秒/+30sec.



注意

• 預設功率級別是PL03，無法更改。

5. 按重量解凍


a 按  解凍 Defrost 一次，顯示“dEF2”。

 解凍 Defrost

b 按 **開始/Start** +30秒/+30sec. 確認。

開始/Start
+30秒/+30sec.

c 按  或  設置食物的重量。
重量範圍為100-2000g。

d 按 **開始/Start** +30秒/+30sec. 開始解凍。

開始/Start
+30秒/+30sec.



注意

• 解凍期間，蜂鳴器會響起提醒翻轉食物。
如果沒有操作，微波爐將繼續工作。

6. 多階段烹調

示例：解凍500g的食物，然後以80%微波功率烹飪7分鐘。

a 按  解凍 Defrost 一次，顯示“dEF2”。



b 按 **開始/Start** 確認。
+30秒/+30sec.



c 按  或  設置食物重量為500g。



d 按  微波 Micro. 一次，顯示“PL10”。



e 按  微波 Micro. 重複地，
或者按  或  設置功率
等級至PL08。






或



f 按 **開始/Start** 確認。
+30秒/+30sec.



g 按  1 分 mins , ,  , 
或設置烹飪時間為7分鐘。



或



h 按 **開始/Start** 開始烹飪。
+30秒/+30sec.



注意

- 在多階段烹飪中可以設置兩個烹飪階段。
- 如果您設置解凍功能，它將在第一階段工作。
- 自動功能和快速烹調不能設置為多階段之一。

7. 快速烹調

- a 在待機模式下，按 **開始/Start** $+30\text{秒}/+30\text{sec.}$ 以 100% 的功率水平烹飪 30 秒。每次按下同一鍵可以增加 30 秒，最大時間值為“99:50”。

開始/Start
 $+30\text{秒}/+30\text{sec.}$

- b 在待機模式下，按 $10\text{分}\text{mins}$ ， $1\text{分}\text{mins}$ ，或 $10\text{秒}\text{sec}$ 以 100% 的功率設置烹飪時間。然後按 **開始/Start** $+30\text{秒}/+30\text{sec.}$ 來開始烹飪。

$10\text{分}\text{mins}$ $1\text{分}\text{mins}$ $10\text{秒}\text{sec}$


開始/Start
 $+30\text{秒}/+30\text{sec.}$




注意

- 在烹飪狀態下，每多按一次 **開始/Start** $+30\text{秒}/+30\text{sec.}$ ， $10\text{分}\text{mins}$ ， $1\text{分}\text{mins}$ ，或 $10\text{秒}\text{sec}$ 可以增加相應的烹飪時間。或者按 \vee 或 \wedge 可以更改烹飪時間（除了按重量解凍和自動功能）。


8. 查詢功能

- a 在微波爐烹調狀態下，按  **微波** **Micro.** 以查詢功率等級。它將顯示三秒鐘。

 **微波**
Micro.

- b 在燒烤烹調狀態下，按  **燒烤** **Grill** 以查詢烹調模式。它將顯示三秒鐘。

 **燒烤**
Grill

- c 在組合烹調狀態下，按  **組合功能** **Combi.** 以查詢烹調模式。它將顯示三秒鐘。

 **組合功能**
Combi.

9. 節能功能

- a 要進入ECO模式：
在待機模式且烤箱門關閉時，按 **暫停/Stop** 一次。
取消/Cancel
童鎖 3秒/Lock 3sec
或如果在5分鐘內無任何操作，螢幕將關閉。

暫停/Stop
取消/Cancel
童鎖 3秒/Lock 3sec

- b 要取消ECO模式：
在ECO模式下，按任意鍵或打開門將取消ECO模式。

暫停/Stop
取消/Cancel
童鎖 3秒/Lock 3sec

10. 兒童鎖功能

您可以使用此功能禁用屏幕按鈕，防止您的小孩意外開啟烤箱。

- a 要開啟兒童鎖：
在待機模式下，按住 **暫停/Stop** 三秒鐘。
取消/Cancel
童鎖 3秒/Lock 3sec
發出蜂鳴聲，並顯示鎖定圖標。

暫停/Stop
取消/Cancel
童鎖 3秒/Lock 3sec

- b 要停用鎖定：
在鎖定狀態下，按住 **暫停/Stop** 三秒鐘。
取消/Cancel
童鎖 3秒/Lock 3sec
發出蜂鳴聲。

暫停/Stop
取消/Cancel
童鎖 3秒/Lock 3sec

11. 自動功能

a 按  自動功能 Auto Menu 一次，顯示“01”。

 自動功能 Auto Menu

b 按下  自動功能 Auto Menu 重複或按下
 或  選擇菜單。
有12個自動菜單可供使用。

 自動功能 Auto Menu

或

c 按 **開始/Start**
+30秒/+30sec. 以確認。

開始/Start
+30秒/+30sec.

d 按  或  設置食物的重量。

e 按 **開始/Start**
+30秒/+30sec. 開始烹飪。

開始/Start
+30秒/+30sec.



注意

- 對於“05, 11, 12”菜單，蜂鳴器會發出聲音，提醒您轉動烹飪過程中食物溢出來。如果沒有操作，烤箱將繼續工作（當菜單“05”的重量是一個馬鈴薯時，沒有提示。）
- 對於菜單“09”，請跳過步驟d。

自動功能圖表

菜單	重量	顯示	功率
01 翻熱	200g 400g	200g 400g	PL10
02 肉類	200g 300g 400g	200g 300g 400g	PL08
03 冷凍蔬菜	200g 300g 400g	200g 300g 400g	PL10
04 意粉	50g 100g	50g 100g	PL08
05 薯仔	1(220g-240g) 2(440g-480g)	1 2	PL10
06 魚肉	200g 300g 400g	200g 300g 400g	PL08
07 飲品	1 杯 (120ml) 2 杯 (240ml) 3 杯 (360ml)	1 2 3	PL10
08 爆谷	50g 100g	50g 100g	PL10
09 除味	-	10:00	PL0
10 冷凍薄批	100g 200g 400g	100g 200g 400g	C-1/G-1
11 牛肉	300g 500g 1000g	300g 500g 1000g	C-1
12 豬肉	300g 500g 1000g	300g 500g 1000g	C-1

清潔和維護

清潔

精心護理和清潔可以保持設備外觀嶄新，使設備有更長的使用壽命。請按照以下說明，妥善安排微波爐保養和清潔。



警告

- 門板玻璃刮傷可能會發展成裂縫。請勿使用玻璃刮刀、鋒利的或研磨性的清潔工具或清潔劑。
- 如果清潔不當可能會損壞設備表面。會造成微波能量逸出。定期清潔設備。如有任何食物殘渣，需立即清除。
- 請勿將設備浸入水中或用流水清洗。

清潔劑

清潔劑使用不當會造成電器各表面損壞，因此，使用清潔劑時請參考下表信息。使用全新海綿或布，使用前徹底清洗。

請勿使用：



粗糙或磨蝕性清潔劑



金屬或玻璃刮刀清潔門板



金屬或玻璃刮刀清潔門封



硬百潔布或海綿




酒精含量高的清潔劑

電器正面

熱肥皂水：

用洗碗布清洗，然後用軟布擦乾。

請勿使用金屬或玻璃刮刀進行清潔。

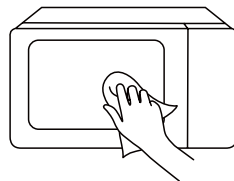


不銹鋼電器正面

熱肥皂水：

用洗碗布清洗，然後用軟布擦乾。


立即清除水垢、油脂、澱粉和白蛋白的飛濺物和斑塊。這些斑塊或飛濺物下會產生腐蝕。請勿使用玻璃清潔劑或金屬或玻璃刮刀進行清潔。

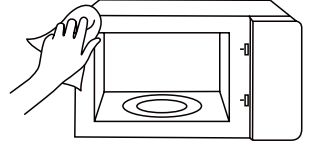

不銹鋼烹飪腔

熱肥皂水或醋溶液：

用洗碗布清洗，然後用軟布擦乾。請勿使用微波爐噴霧或任何其他刺激性微波爐清潔劑或研磨材料。百潔布、粗糙的海綿以及平底鍋清潔劑也不適用。這些東西會損傷內腔表面。內腔表面需要充分乾燥。

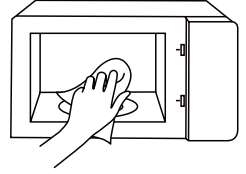

門板

玻璃清潔劑：

用洗碗布清洗。請勿使用玻璃刮刀。

故障排除

根據下圖查看問題，並嘗試每種方法解決問題。
若微波爐仍不能正常工作，請聯繫最近的授權服務中心。

故障	可能原因	可能的補救辦法
微波爐無法啟動	a. 微波爐未連接電源。 b. 門未關。 c. 設置錯誤。	a. 插入插座。 b. 關上門，再試一次。 c. 查看說明
有擊穿	a. 使用不適用於微波爐的器皿。 b. 微波爐沒有放任何食物。 c. 溢出的食物殘留在爐腔。	a. 僅使用微波安全的器皿。 b. 放入食物。 c. 用柔軟的濕布清潔爐腔。
食物烹飪不均勻	a. 使用不適用於微波爐的器皿。 b. 食物沒有完全解凍。 c. 烹飪時長、功率等級不合適。 d. 沒有翻動或攪拌食物。	a. 僅使用微波安全的器皿。 b. 完全解凍食物。 c. 使用正確的烹飪時長、功率等級。 d. 翻動或攪拌食物。
食物過熟	烹飪時長、功率等級不合適。	使用正確的烹飪時長、功率等級。
食物未熟	a. 使用不適用於微波爐的器皿。 b. 食物沒有完全解凍。 c. 微波爐通風口受阻。 d. 烹飪時長、功率等級不適合。	a. 僅使用微波安全的器皿。 b. 食物完全解凍。 c. 檢查微波爐通風口不受阻。 d. 使用正確的烹飪時長、功率等級。
解凍不當	a. 使用不適用於微波爐的食材。 b. 烹飪時長、功率等級不適合。 c. 沒有翻動或攪拌食物。	a. 僅使用微波安全的炊具。 b. 使用正確的烹飪時長、功率等級。 c. 翻動或攪拌食物。



根據廢棄電氣電子設備 (WEEE) 指令，廢棄電氣電子設備應單獨收集和處理。日後如需處理本產品，請勿將本產品與生活垃圾放在一起處理。請將本產品送至廢棄電氣電子設備收集點 (如有)。


#DetailsMatter

INSTRUCTION MANUAL

MICROWAVE OVEN

Flatbed Microwave Oven With Grill Function (26L)
MV2-EG26PEI(BK)

Please review this instruction manual before operating.

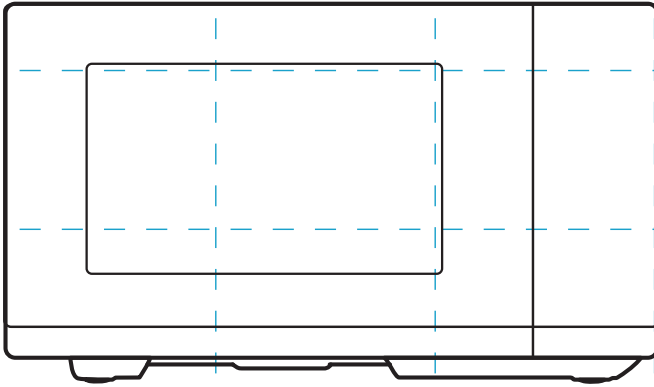

CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	EN-01
Specifications	EN-02
Important safety instructions	EN-03
To reduce the risk of injury to persons grounding installation.....	EN-08
Cleaning.....	EN-10
Utensils.....	EN-11
Materials you can use in microwave oven	EN-12
Materials can not be used in microwave oven	EN-14

PRODUCT SETTING

Setting up your oven	EN-15
----------------------------	-------

INSTRUCTION FOR USE

Before using for the first time	EN-17
Control panel and features	EN-18
1. Microwave cooking	EN-19
2. Grill cooking	EN-20
3. Combination cooking	EN-20
4. Defrost by time	EN-21
5. Defrost by weight	EN-21
6. Multi-stage cooking	EN-22
7. Speedy cooking	EN-23
8. Inquiring function.....	EN-23
9. Eco function	EN-23

10. Lock function for children	EN-24
11. Auto menu	EN-24

CLEANING AND MAINTENANCE

Cleaning.....	EN-26
Trouble shooting	EN-28




NOTE

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c). **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

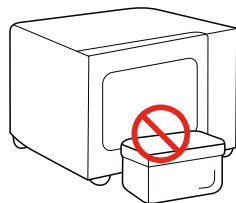

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

SPECIFICATIONS

MODEL	MV2-EG26PEI(BK)
RATED VOLTAGE/FREQUENCY	220-230 V~ 50 Hz
MICROWAVE RATED INPUT	1380 W
MICROWAVE RATED OUTPUT	900 W
GRILL RATED INPUT	900-1000 W
CAVITY DIMENSIONS(W x D x H)	335x348x226.4 mm
PRODUCT SIZE(W x D x H)	495x385x302 mm



NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:




Read and follow the specific: "**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**".



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



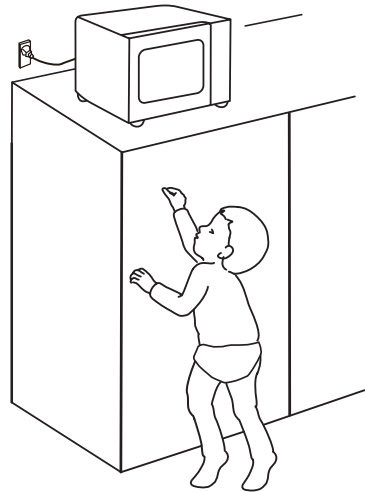

Keep the appliance and its cord out of reach of children less than 8 years.





If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

IMPORTANT SAFETY INSTRUCTIONS


 **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.


 **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.


 **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.


 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.




 Only use utensils that are suitable for use in microwave ovens.


 If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.


 Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.


 The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature


IMPORTANT SAFETY INSTRUCTIONS

 The oven should be cleaned regularly and any food deposits removed. Please keep the waveguide area clean. Use soft damp cloth to clean it up when there is food splash residue on the waveguide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.

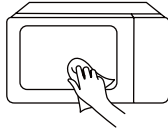


 Only use the temperature probe recommended for this oven. (For ovens provided with a facility to use a temperature-sensing probe.)


 The microwave oven must be operated with the decorative door open. (For ovens with a decorative door.)


 This appliance is intended to be used in household and similar applications such as:


1. staff kitchen areas in shops, offices and other working environments;
2. by clients in hotels, motels and other residential type environments;
3. farm houses;
4. bed and breakfast type environments.


 The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.


IMPORTANT SAFETY INSTRUCTIONS

 The appliance is intended to be used freestanding.


 The rear surface of appliances shall be placed against a wall.


 The temperature of accessible surfaces may be high when the appliance is operating.


 **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.


 Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating


has ended.

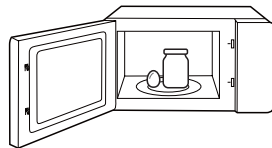


 The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)

 The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

 Metallic containers for food and beverages are not allowed during microwave cooking.

 The appliance shall not be cleaned with a steam cleaner.

IMPORTANT SAFETY INSTRUCTIONS

 The appliances are not intended to be operated by means of an external timer or separate remote-control system.

READ CAREFULLY AND KEEP FOR
FUTURE REFERENCE
HOUSEHOLD USE ONLY
(NOT FOR COMMERCIAL USE)

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.



DANGER

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



WARNING

Electric Shock Hazard:

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS



CAUTION

Personal Injury Hazard:


It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven**".

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.


Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

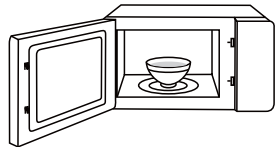





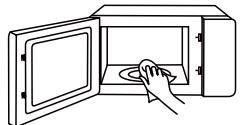







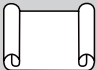



NOTE





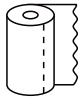



KEEP THE CAVITY AND
WAVEGUIDE AREA CLEAN







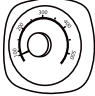









MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. 
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. 
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. 
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. 
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. 
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking. 
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. 
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming. 

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 <p data-bbox="169 454 240 478">Plastic</p>	<p data-bbox="349 351 900 494">Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.</p> 
 <p data-bbox="147 638 262 662">Plastic wrap</p>	<p data-bbox="349 550 900 638">Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.</p> 
 <p data-bbox="131 805 278 829">Thermometers</p>	<p data-bbox="349 750 889 774">Microwave-safe only (meat and candy thermometers).</p> 
 <p data-bbox="152 965 256 989">Wax paper</p>	<p data-bbox="349 901 819 957">Use as a cover to prevent splattering and retain moisture.</p> 

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS
 <p>Aluminum tray</p>	May cause arcing. Transfer food into microwave-safe dish. 
 <p>Food carton with metal handle</p>	May cause arcing. Transfer food into microwave-safe dish. 
 <p>Metal or metal trimmed utensils</p>	Metal shields the food from microwave energy. Metal trim may cause arcing. 
 <p>Metal twist ties</p>	May cause arcing and could cause a fire in the oven. 
 <p>Paper bags</p>	May cause a fire in the oven. 
 <p>Plastic foam</p>	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. 
 <p>Wood</p>	Wood will dry out when used in the microwave oven and may split or crack. 

 
PRODUCT SETTING

SETTING UP YOUR OVEN


(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)

NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES


Remove the oven and all materials from the carton and oven cavity.



Instruction Manual

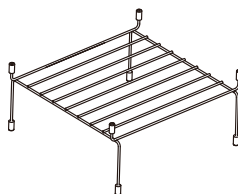

Grill Rack (Can not be used in microwave function.)

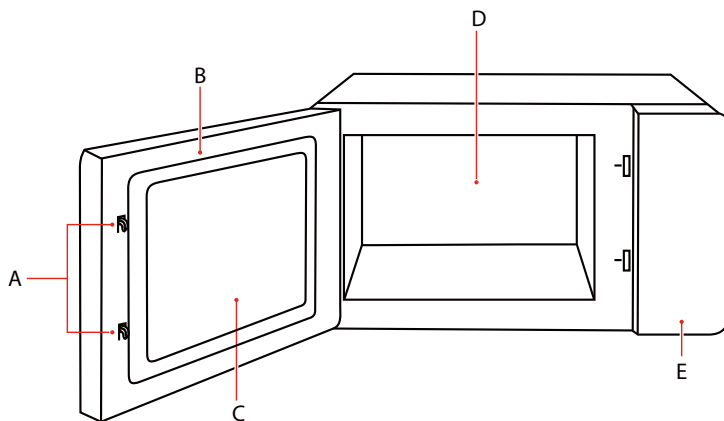

- A. Safety interlock system
- B. Door assembly
- C. Observation window

- D. Oven cavity
- E. Control panel


COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - a. The minimum installation height is 85cm.
 - b. The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 10cm is required between the oven and any adjacent walls.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Place the oven as far away from radios and TV as possible.
Operation of microwave oven may cause interference to your radio or TV reception.

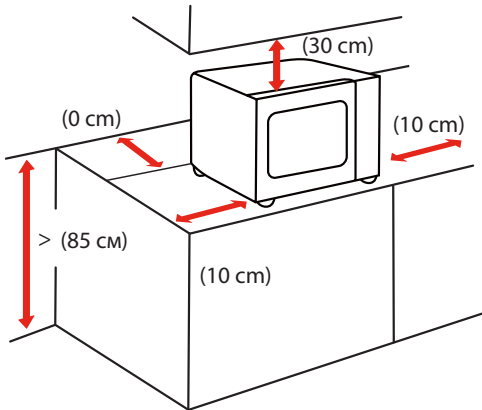


SIDE	DISTANCE (INCHES/CM)
Top	30cm
Left	10cm
Right	10cm
Behind	0cm
Front	Open

2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



NOTE

- Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

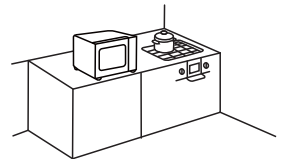

The accessible surface may be hot during operation

INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME


It is normal that the oven may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**PRODUCT SAFETY**" beforehand.

Before you can use your new appliance, you must clean the cooking compartment and accessories.

OPERATION

CONTROL PANEL AND FEATURES

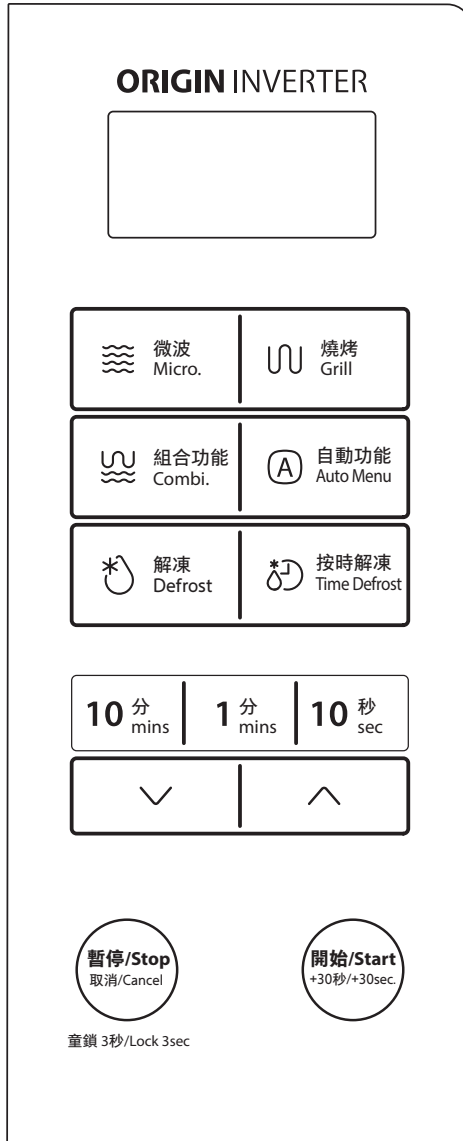

1. MICROWAVE COOKING

The 5 power levels are available

POWER	100%	80%	50%	30%	10%
DISPLAY	PL10	PL08	PL05	PL03	PL01

a Press  微波 Micro. once, "PL10" will display.



b Press  微波 Micro. repeatedly, or press  or  to set the power level. The 5 power levels are available.





Or



c Press **開始/Start** +30秒/+30sec. confirm.

開始/Start
+30秒/+30sec.

d Press **10** ^分 mins, **1** ^分 mins, **10** ^秒 sec, , or  to set the cooking time. The maximum time value is "99:50".

10 ^分 mins **1** ^分 mins **10** ^秒 sec

Or



e Press **開始/Start** +30秒/+30sec. to start cooking.

開始/Start
+30秒/+30sec.



2. GRILL COOKING

a Press  燒烤 Grill once, "G-1" will display.

 燒烤 Grill

b Press **開始/Start** +30秒/+30sec. confirm.

開始/Start +30秒/+30sec.

c Press **10** mins, **1** mins, **10** sec, , or  to set the cooking time. The maximum time value is "99:50".

10 mins **1** mins **10** sec


Or

d Press **開始/Start** +30秒/+30sec. to start cooking.

開始/Start +30秒/+30sec.



3. COMBINATION COOKING

a Press  組合功能 Combi. once or twice, "C-1" or "C-2" will display.

 組合功能 Combi.

b Press **開始/Start** +30秒/+30sec. confirm.

開始/Start +30秒/+30sec.

c Press **10** mins, **1** mins, **10** sec, , or  to set the cooking time. The maximum time value is "99:50".

10 mins **1** mins **10** sec

Or

d Press **開始/Start** +30秒/+30sec. to start cooking.

開始/Start +30秒/+30sec.

Combination Cooking Chart

FUNCTION	DISPLAY	MICROWAVE	GRILL
Combi. 1	C-1	55%	45%
Combi. 2	C-2	34%	66%



4. DEFROST BY TIME

a Press  按時解凍 Time Defrost once, "dEF1" will display.



b Press **開始/Start** +30秒/+30sec. confirm.

開始/Start
+30秒/+30sec.

c Press **10** 分 mins, **1** 分 mins, **10** 秒 sec, , or  to set the desired defrosting time. The maximum time value is "99:50".

10 分 mins **1** 分 mins **10** 秒 sec

Or



d Press **開始/Start** +30秒/+30sec. to start defrosting.

開始/Start
+30秒/+30sec.



NOTE

• The default power level is PL03 and it cannot be changed.



5. DEFROST BY WEIGHT

a Press  解凍 Defrost once, "dEF2" will display



b Press **開始/Start** +30秒/+30sec. confirm.

開始/Start
+30秒/+30sec.

c Press  or  to set the weight of the food. The range of weight is 100-2000g.



d Press **開始/Start** +30秒/+30sec. to start defrosting.

開始/Start
+30秒/+30sec.




NOTE

• The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.

6. MULTI-STAGE COOKING



Example: Defrost food for 500g and then cook with 80% microwave power for 7 minutes.

a Press  解冻 Defrost once, "dEF2" will display


 解冻 Defrost

b Press **開始/Start** +30秒/+30sec. confirm.

開始/Start +30秒/+30sec.

c Press  or  to set the weight of the food to 500g.

d Press  微波 Micro. once, "PL10" will display.

 微波 Micro.

e Press  微波 Micro. repeatedly, or press  or  to set the power level to PL08.

 微波 Micro.

Or

f Press **開始/Start** +30秒/+30sec. confirm.

開始/Start +30秒/+30sec.

g Press **1** ^分 mins, , or  to set the cooking time to 7 minutes.

1 ^分 mins

Or

h Press **開始/Start** +30秒/+30sec. to start cooking.

開始/Start +30秒/+30sec.



NOTE

- Two cooking stages can be set in multi-stage cooking.
- If you set the defrost function, it will work in the first stage.
- The auto menu and speedy cooking can't be set as one of the multi-stage.

7. SPEEDY COOKING

- a In standby mode, press **開始/Start** ^{+30秒/+30sec.} to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "99:50".

開始/Start
+30秒/+30sec.

- b In standby mode, press **10** ^{分 mins}, **1** ^{分 mins}, or **10** ^{秒 sec} to set a cooking time at 100% power. Then press **開始/Start** ^{+30秒/+30sec.} to start cooking.

10 ^{分 mins} **1** ^{分 mins} **10** ^{秒 sec}


開始/Start
+30秒/+30sec.




NOTE

- In the microwave, grill, combination, and defrosting by time cooking state, each more press on **開始/Start** ^{+30秒/+30sec.}, **10** ^{分 mins}, **1** ^{分 mins}, or **10** ^{秒 sec} can increase the corresponding cooking time. Or press **∨** or **∧** can change the cooking time (except for the defrosting by weight and auto menu).


8. INQUIRING FUNCTION

- a In the microwave cooking state, press  **微波** **Micro.** to inquire about the power level. It will display for three seconds.

 **微波**
Micro.

- b In the grilling cooking state, press  **燒烤** **Grill** to inquire about the cooking mode. It will display for three seconds.

 **燒烤**
Grill

- c In the combination cooking state, press  **組合功能** **Combi.** to inquire about the cooking mode. It will display for three seconds.

 **組合功能**
Combi.

9. ECO FUNCTION

- a To enter ECO mode:
In standby mode and the oven door is closed, press **暫停/Stop** ^{取消/Cancel} **once.** or if there is no operation within 5 minutes, the screen will turn off.

暫停/Stop
取消/Cancel
童鎖 3秒/Lock 3sec

- b To cancel ECO mode:
In ECO mode, pressing any key or opening the door will cancel it.

暫停/Stop
取消/Cancel
童鎖 3秒/Lock 3sec

10. LOCK FUNCTION FOR CHILDREN

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.

- a To activate the lock:
In standby mode, press and hold **暫停/Stop** 取消/Cancel for three seconds.
A beep sounds and the locked icon will display.



- b To deactivate the lock:
In the locked state, press and hold **暫停/Stop** 取消/Cancel for three seconds.
A beep sounds.

 


11. AUTO MENU

- a Press **(A)** 自動功能 Auto Menu once, "01" will display.



- b Press **(A)** 自動功能 Auto Menu repeatedly or press **▽** or **△** to choose the menu.
The 12 auto menus are available.



- c Press **開始/Start** +30秒/+30sec. to confirm.



- d Press **▽** or **△** to set the weight of the food.



- e Press **開始/Start** +30秒/+30sec. to start cooking.



NOTE

- For the menus "05, 11, 12", the buzzer will sound to remind you to turn the food over during cooking. If no operation, the oven will continue working. (When the weight of menu "05" is one potato, there is no reminder.)
- For the menu "09", please skip the step d.

AUTO MENU CHART

MENU	WEIGHT	DISPLAY	POWER
01 Reheat	200g 400g	200g 400g	PL10
02 Meat	200g 300g 400g	200g 300g 400g	PL08
03 Frozen Vegetable	200g 300g 400g	200g 300g 400g	PL10
04 Pasta	50g 100g	50g 100g	PL08
05 Potato	1(220g-240g) 2(440g-480g)	1 2	PL10
06 Fish	200g 300g 400g	200g 300g 400g	PL08
07 Beverage	1cup(120ml) 2cups(240ml) 3cups(360ml)	1 2 3	PL10
08 Popcorn	50g 100g	50g 100g	PL10
09 Deodorization	-	-	PL0
10 Frozen Pizza	100g 200g 400g	100g 200g 400g	C-1/G-1
11 Beef	300g 500g 1000g	300g 500g 1000g	C-1
12 Pork	300g 500g 1000g	300g 500g 1000g	C-1

CLEANING AND MAINTENANCE

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



WARNING

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Wash new sponge cloths thoroughly before use.

Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

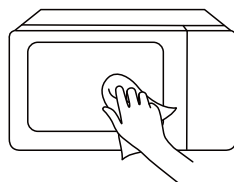

APPLIANCE FRONT WITH STAINLESS STEEL

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

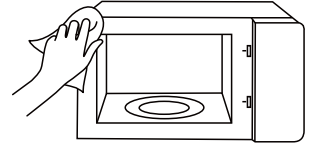

COOKING COMPARTMENT MADE OF STAINLESS STEEL

Hot soapy water or vinegar solution:

Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

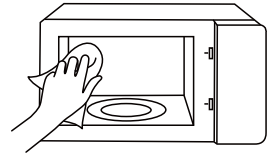

DOOR PANELS

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

TROUBLE SHOOTING

Normal

Microwave oven interfering
TV reception

Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.

Dim oven light

In low power microwave cooking, oven light may become dim. It is normal.

Steam accumulating on
door, hot air out of vents

In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.

Oven started accidentally
with no food in.

It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble

Possible Cause

Remedy

Oven cannot be started.	(1) Power cord is not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door is not closed well.	Close door well.

#DetailsMatter