


# 說明書

## 多功能健康氣炸焗爐

MW3-SAC24SE(BK)

請在操作前仔細閱讀本說明書。

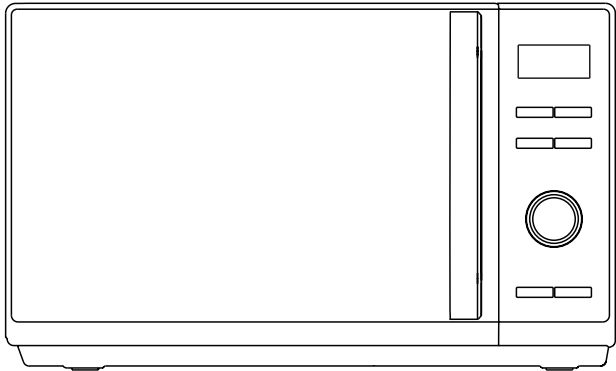

**TOSHIBA**

# 目錄

## IoT智能控制

產品無線網絡連接 .....	CN-01
如何將您的設備連接到 TSmartLife.....	CN-02

## 產品安全

避免接觸過量微波能量的預防措施.....	CN-04
重要安全說明 .....	CN-06
減少接地安裝人士受傷的風險.....	CN-11
器皿 .....	CN-14
可用於微波爐的物料 .....	CN-15
不可用於微波爐的物料 .....	CN-17

## 產品設置

安裝爐具.....	CN-18
-----------	-------

## 使用說明

首次使用前.....	CN-21
操作 .....	CN-22
1. 功率等級.....	CN-23
2. 時鐘設定 .....	CN-23
3. 廚房計時器.....	CN-24
4. 微波烹飪.....	CN-25

5. 燒烤或混合.....	CN-27
6. 預熱熱風.....	CN-28
7. 無預熱熱風.....	CN-29
8. 自動選單.....	CN-32
9. 按重量解凍.....	CN-35
10. 按時間解凍.....	CN-35
11. 多級烹飪.....	CN-38
12. 快速烹飪.....	CN-39
13. 查詢功能.....	CN-39
14. 鎖定功能.....	CN-40

## 清潔和保養

清潔.....	CN-42
故障排除.....	CN-44



**注意**



在使用本產品之前，請閱讀、理解並遵守這些安全說明。請務必妥善保存本說明書，以備日後使用。

# IoT智能控制

## 產品無線網絡連接


---

### a 連接網絡

長按 [  ] 3 秒鐘，直到聽見提示音"嗶"，顯示屏上顯示「AP」，[  ] 閃爍。如果出現故障，將顯示「N0」，30 秒後，氣炸焗爐將返回待機模式。



### b 斷開網絡連接


長按 [  ] 8 秒，蜂鳴一聲後，[ -- ] 閃爍數秒。如果已成功移除連結，屏幕將顯示「8888」。3 秒後，氣炸焗爐返回待機模式。如果出現故障，將顯示「FFFF」，3 秒後，氣炸焗爐將返回待機模式。



# 如何將您的設備連接到 TSmartLife


## 1 下載 TSmartLife 應用程式

掃描二維碼或在應用商店中找到我們。

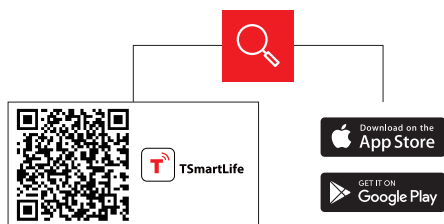

## 2 註冊或登入


請登入現有帳戶或註冊新帳戶

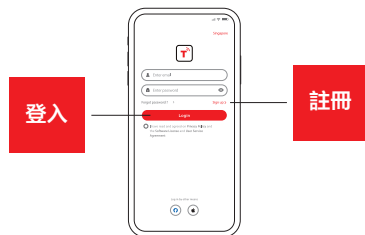

## 3 將您的設備連接到 TSmartLife


### 第 1 步:

連接無線網絡，開啟藍牙。

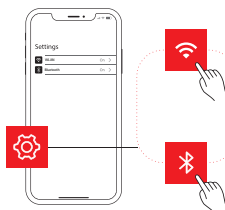

### 第 2 步:

打開 TSmartLife 應用程式。  
為所選設備連接電源。

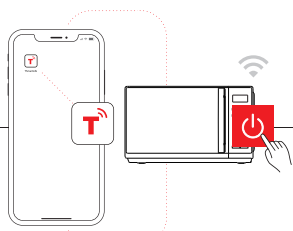

### 第 3 步:

使用以下方法之一加入您的設備：



### 第 4 步:

確保設備和 App 處於同一無線網絡下。

### 第 5 步:

按下面板上的 "Wi-Fi" 按鈕，  
保持 3 秒。根據說明進行  
設定，它將自動連接。

### 第 6 步:

重新命名您的設備並嘗試  
遠距離控制。



# 如何將您的設備連接到 TSmartLife

---


## 溫馨提示

- 確保您的設備已連接電源。
- 連接時，請保持手機靠近您的設備。
- 將手機連接到家中無線網絡。
- 啓用無線網絡路由器上的 2.4GHz 頻率。目前 5GHz Wi-Fi 網絡不可用。
- 設備無法連接需要認證的無線網絡，即酒店、餐廳等公共區域的無線網絡。
- 建議使用僅包含字母和數字的無線網絡名稱。如果您的無線網絡名稱包含特殊字符，請在路由器中修改。連接您的設備到網絡時，請禁用 WLAN + (Android) 或 WLAN 助手 (iOS)。
- 如需將設備重新連接無線網絡，請在 App 主界面點擊“+”，根據 App 提示，按類別和型號重新加入設備。

## 避免接觸過量微波能量的預防措施

---

- (a). 請勿在爐門打開的情況下操作該氣炸焗爐，因為這會導致有害的微波能量釋出。請勿破壞或更改安全連鎖。
- (b). 請勿在氣炸焗爐正面和爐門之間放置任何物品，或讓灰塵或清潔劑殘留物積聚在密封面上。
- (c). **警告：**如果氣炸焗爐的爐門或爐門密封條有損，須待合資格人士修好後，方可使用氣炸焗爐。

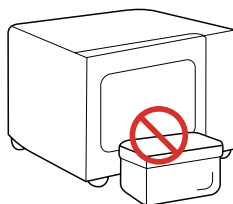

---

### 補充說明

如果本電器未能保持良好的清潔狀態，其表面可能會退化，影響設備的使用壽命，並導致危險情況。

## 規格

---

型號	MW3-SAC24SE(BK)
額定電壓	220-230 V~ 50 Hz
額定輸入 (微波)	1350-1450 W
額定輸出 (微波)	850-900 W
額定輸入 (燒烤)	900-1000 W
額定輸入 (熱風對流)	1500-1680 W

---



# 重要安全說明



**警告**

為減少使用本電器時發生火災、觸電、人身傷害或接觸過量微波能的風險，請遵循以下基本預防措施：



閱讀並遵循以下內容：  
「**避免接觸過量微波能的預防措施**」。



在缺乏負責其安全的人士監督或指導之下，身體感到不適、精神狀態不佳或缺乏相關經驗與知識的人士（包括兒童），均不適宜使用本產品。



請看管好兒童，切勿讓兒童把玩本電器。





如電源線出現損壞，必須由製造商、其服務代理或相關合資格專業人士進行更換，以免發生危險。




 
**警告：**為避免發生觸電，在更換燈泡前，請確保本電器已關閉。


# 重要安全說明


 **警告：**除合格人員外，任何人進行維修操作(例如拆除防止微波暴露的蓋子)時都是危險的。


 **警告：**切勿將液體和其他食物放在密封容器中進行加熱，否則可能會引發爆炸。


 加熱塑膠或紙質容器中的食物時，請注意氣炸焗爐，因為可能會著火。




 只能使用適用於微波爐的器皿。


 如果冒煙，請關閉本電器或拔下插頭，並使門閉合，以達到滅火目的。


 微波加熱飲料會導致延遲沸騰，因此在拿取容器時必須小心。


 在飲用前，應攪拌或搖動奶瓶和嬰兒食物罐的內容物，並檢查溫度，以免燙傷。


# 重要安全說明


-  應定期清潔氣炸焗爐，並清除食物沉積物。請保持微波引導區清潔。當微波引導區或腔體有食物飛濺的殘留物時，用柔軟濕布將其清理乾淨。如果不清理食物殘留物，可能會導致微波腔體內產生無害火花、煙霧，或者腔體變色。

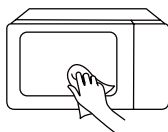


-  僅使用本氣炸焗爐推薦的溫度探頭。（適用於配有溫度感應探針設備。）


-  必須在裝飾門打開的情況下操作微波爐。（適用於帶有飾門的爐具。）


-  本電器可用於家用和下列類似用途：
1. 店舖、辦公室和其他工作環境中的員工廚房區域；
  2. 酒店、汽車旅館和其他居住環境；
  3. 農舍；
  4. 民宿類型環境。


-  微波爐用於加熱食物和飲料。如果用於烘乾食物或衣服，以及加熱保暖墊、拖鞋、海綿、濕布等，可能會導致受傷、著火或火災等風險。


# 重要安全說明


 本設備僅供獨立使用。


 設備的背面應靠牆放置。


 設備運行期間表面溫度可能較高。


 **警告：**當本電器以組合模式運行時，由於會產生高溫，故兒童只能在成人監督下使用氣炸焗爐。


 切勿將帶殼的雞蛋和全熟雞蛋放在微波爐中加熱，因為在微波加熱結束後，可能爆炸。

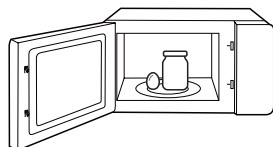


 為避免過熱，禁止將本設備安裝在裝飾門後。（該要求不適用於帶裝飾門的設備。）


 除非已在機櫃中開展測試，否則不得將微波爐放置在機櫃中。

 微波烹飪時，不得使用金屬容器盛載食物和飲料。

 不得使用蒸汽清潔器清潔本設備。

# 重要安全說明

 請勿透過外部計時器或第三方的遙控系統操作本電器。

 未能保持氣炸焗爐清潔可能導致表面退化，從而可能影響本電器的壽命，並造成危險。

仔細閱讀並妥善保存以備日後使用

# 減少接地安裝人士受傷的風險

本電器必須接地。如發生電氣短路時，接地通過為電流提供逃逸線來降低觸電風險。

本電器帶有接地插頭的接地線。插頭必須插入正確安裝並接地的插座中。

**警告**——接地使用不當會導致觸電風險。如果不完全理解接地說明，或者如果對本電器是否正確接地存在疑問，請諮詢合格的電工或維修人員。

如果需要使用延長線，只能使用三芯延長線。



觸電危險：

觸摸某些內部部件會造成嚴重的人身傷害或死亡。  
請勿拆卸本電器。

# 減少接地安裝人士受傷的風險



觸電危險：

接地不當會導致觸電。在本電器正確安裝和接地之前，請勿將插頭插入插座。

1. 提供短電源線，以減低被長電源線纏住或絆倒的風險。
2. 如果使用長線或延長線：
  - (1). 線組或延長線的標記電氣額定值應至少與本電器的電氣額定值相等。
  - (2). 延長線必須是接地型三芯線。
  - (3). 長線的佈置應確保其不會懸垂在台面或桌面上，以免被兒童拉扯或無意中絆倒他人。

# 清潔

確保斷開本電器的電源。

1. 使用後，用微濕的布清潔氣炸焗爐腔體。
2. 按常規方法用肥皂水清洗配件。
3. 門框、密封條和相鄰部件髒污時，必須用濕布仔細清潔。
4. 切勿使用粗糙的擦洗劑或鋒利的金屬刮刀來清潔氣炸焗爐門玻璃，因為它們會刮傷表面，從而可能導致玻璃破碎。
5. 清潔提示——為了方便清潔熟食可能接觸到的爐腔壁：將半個檸檬放入碗中，加入 300 ml ( 1/2 品脫 ) 水，並在 100% 微波功率下加熱 10 分鐘。用柔軟的乾布將氣炸焗爐擦拭乾淨。



# 器皿



小心


人身傷害危險：

除合格人員外，任何人進行維修操作（例如拆除防止微波暴露的蓋子）時都是危險的。參見「可用於微波爐的材料」或「不可用於微波爐的材料」。

在氣炸焗爐中使用某些非金屬器具可能也是不安全的。如有疑問，您可以按照以下程序對相關器皿進行測試。


## 器皿測試：

1. 向一個微波安全容器中加入 1 杯冷水（250 ml），將該容器和待測試器皿一起放入氣炸焗爐。
2. 在最大功率下烹飪 1 分鐘。
3. 仔細感受該器皿。如果該空器皿是溫熱的，請勿將其用於微波烹飪。
4. 烹飪時間不得超過 1 分鐘。

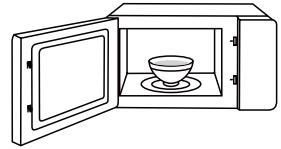

注意

保持烤箱內膽和波導罩清潔。

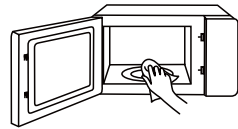

# 可用於微波爐的物料

器皿	備註	
 烤盤	遵循製造商的說明。 烤盤的底部必須至少高於轉盤 3/16 英寸 (5 mm)。 使用不當可能導致轉盤破裂。	
 餐具	僅限微波安全材料。遵循製造商的說明。切勿使用有裂紋或缺口的盤子。	
 玻璃罐	務必取下蓋子。只能將食物加熱至剛剛變溫熱的程度。 大多數玻璃罐不耐熱，可能會破裂。	
 玻璃器皿	僅限氣炸焗爐耐熱玻璃器皿。確保沒有金屬飾件。切勿使用有裂紋或缺口的盤子。	
 氣炸焗爐烹飪袋	遵循製造商的說明。切勿使用金屬紮帶封口。 留出縫隙使蒸汽逸出。	
 紙盤和紙杯	僅用於短時間烹飪 / 加熱。烹飪時，請勿讓氣炸焗爐無人看管。	
 紙巾	用來覆蓋食物，以重新加熱和吸收脂肪。僅在監督下用於短時間烹飪。	
 羊皮紙	用作蓋子防止飛濺，或用作包裝防止蒸汽冒出。	

# 可用於微波爐的物料

器皿

備註



塑料

僅限微波安全材料。遵循製造商的說明。應貼上「微波安全」的標籤。一些塑料容器會隨著內置食物變熱而軟化。應按照包裝上的說明，對「可煮袋」和密封塑料袋進行開口、穿孔或通風處理。



保鮮膜

僅限微波安全材料。烹飪時用來覆蓋食物以保持水分。切勿將保鮮膜接觸食物。



溫度計

僅限微波安全材料（肉類和糖果溫度計）。



蠟紙

用作蓋子防止飛濺並保持水分。



# 不可用於微波爐的物料

器皿	備註	
 鋁托盤	可能導致電弧放電。將食物轉移到可以微波安全使用的盤子中。	
 帶金屬手柄的食物紙箱	可能導致電弧放電。將食物轉移到可以微波安全使用的盤子中。	
 金屬或金屬裝飾器皿	金屬會妨礙食物受微波能作用。 金屬飾件可能導致電弧放電。	
 金屬紮帶	可能導致電弧放電，並可能導致氣炸焗爐起火。	
 紙袋	可能會導致氣炸焗爐起火。	
 塑料泡沫	塑料泡沫在遇到高溫時可能會熔化或污染內部液體。	
 木製品	木製品在微波爐中使用時會變乾，並可能開裂。	

## 氣炸焗爐安裝


(若產品實物與手冊中的圖片有差異，請以實物為準。)

### 微波爐零件和配件名稱


從紙箱和氣炸焗爐腔體中取出氣炸焗爐和所有材料。




烤架 (不能用於微波功能，  
必須放置在玻璃托盤上)

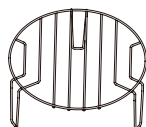

烤架 (不能用於微波功能，  
必須放置在玻璃托盤上)

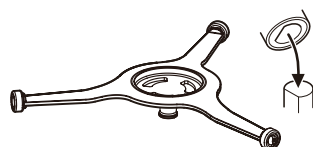


轉盤環組件

 


說明書



 玻璃托盤



烤盤 (不可用於微波功能，  
可放置在烤架上)

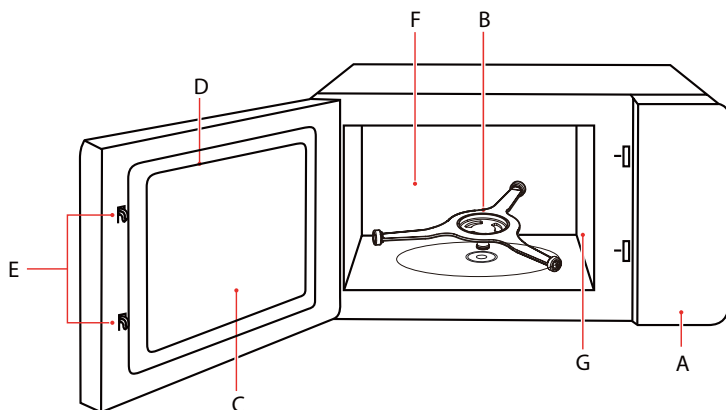

A) 控制面板

B) 轉盤環組件

C) 觀察窗

D) 門組件

E) 安全聯鎖系統

F) 氣炸焗爐腔體

G) 波導罩

# 氣炸焗爐安裝

## 安裝轉盤


清潔烹飪腔，並將轉盤放置到位。

首次安裝時，確保轉盤軸上的所有包裝和運輸用膠帶已清理乾淨。


首次使用本電器製備食物前，需要將轉盤放置在正確位置。必須清潔烹飪腔和附件。可以參考清潔部分。

按如下步驟操作，將轉盤放置就位：

1. 將轉盤環組件 ② 放入烹飪腔的凹槽中。
2. 將玻璃托盤 ① 放在轉盤環組件 ② 上。

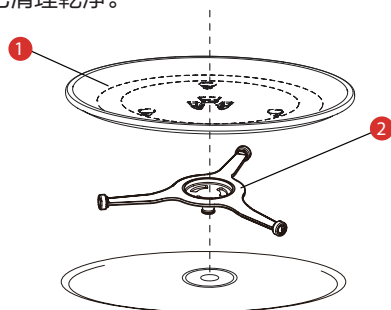

- 1) 玻璃托盤
- 2) 轉盤環組件

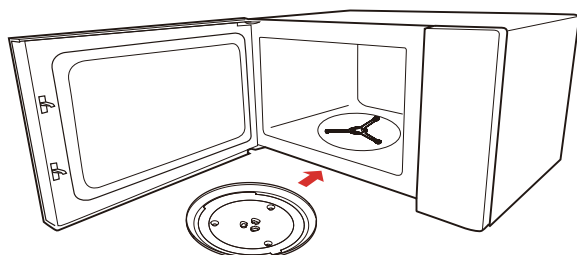

注意

- 切勿在沒有轉盤的情況下使用本電器。確保各部件嚙合到位。轉盤可順時針或逆時針轉動。
- 切勿倒置玻璃托盤。切勿限制玻璃托盤的轉動。
- 烹飪期間必須始終使用玻璃托盤和轉盤環組件。
- 烹飪時，所有食物和食物容器要始終放在玻璃托盤上。
- 切勿限制轉盤的轉動。
- 如果玻璃托盤或轉盤環組件出現裂紋或破裂，請聯繫您最近的授權維修中心。

## 安裝台面


拆除所有包裝材料和配件。檢查氣炸焗爐是否存在凹陷或門破裂等損壞情況。如果氣炸焗爐損壞，請勿安裝。

機櫃：去除微波爐機櫃表面的所有保護膜。請勿取下黏在氣炸焗爐腔體上保護磁控管的波導蓋。

## 安裝

1. 選擇一個水平面，為進氣口和 / 或排氣口留出足夠的開放空間。
  - a. 最小安裝高度為 85 cm。
  - b. 設備的背面應靠牆放置。氣炸焗爐上方至少留出 30 cm 間隙。氣炸焗爐與臨近牆面之間的距離不得少於 20 cm。
  - c. 請勿取下氣炸焗爐底部的支腳。
  - d. 堵塞進出氣口會損壞氣炸焗爐。
  - e. 將氣炸焗爐盡可能遠離收音機和電視。

微波爐運行時可能會干擾收音機或電視接收信號。

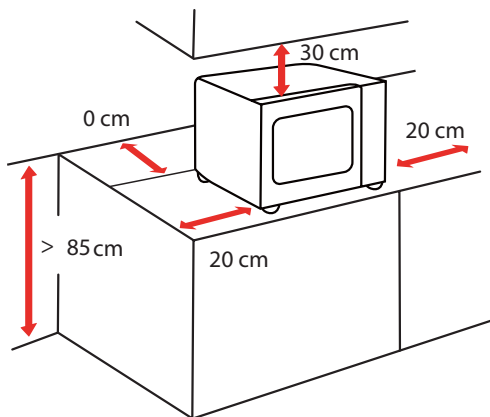


2. 將微波爐插頭插入標準家用插座。請確保氣炸焗爐的電壓和頻率與標籤上的額定電壓和頻率相同。



注意

- 切勿將氣炸焗爐安裝在爐灶或其他發熱電器上方。  
如果安裝在熱源附近或上方，氣炸焗爐易損壞，此類情況不在保修範圍內。

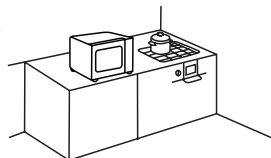

氣炸焗爐運行時，  
可接觸表面可能很燙

# 使用說明

## 首次使用前

首次使用氣炸焗爐時，可能會出現異味，屬於正常現象。

本節介紹了首次使用微波爐製備食物前需要完成的事項。使用前，請先閱讀「**產品安全**」一節。

使用新電器前，需要把轉盤放置在正確位置。

必須清潔烹飪腔和附件。




注意

- 切勿在沒有轉盤的情況下使用本電器。
- 確保各部件嚙合到位。轉盤可順時針或逆時針轉動。



# 操作

## 控制面板和功能

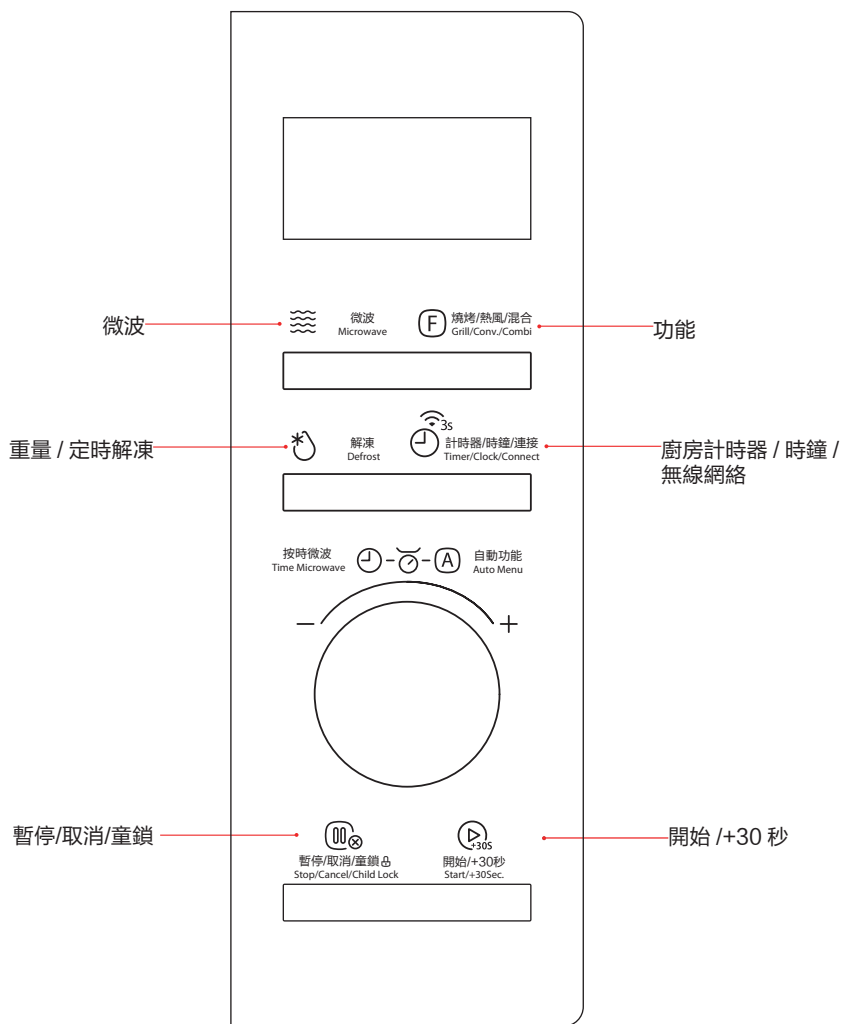

( 也可透過應用程式控制氣炸焗爐 )

### 注意

- 應用程式控制：首先下載 TSmartLife，然後透過 TSmartLife 應用程式連接指南將應用程式與氣炸焗爐連接。

## 1. 功率等級

微波功率

+(火力)	電源	顯示
高	100%	P100
中高	80%	P80
中	50%	P50
中低	30%	P30
低	10%	P10


## 2. 時鐘設置

微波爐接入電源插座後，顯示「0:00」。

a 按  兩次




b 旋轉旋鈕設置小時數，設置範圍 0-23。

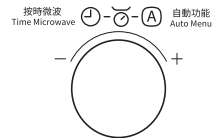

c 按  鍵確認。




d 旋轉旋鈕設置分鐘數，設置範圍 0-59。

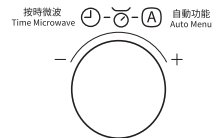

e 按  鍵確認。

 

- 氣炸焗爐通電後，如果未設置時鐘，則氣炸焗爐無法啟動。
- 設置時鐘時，若 5 分鐘內無任何操作或直接按  鍵，顯示屏將自動返回上一次的時鐘設置。


### 3. 廚房計時器

微波爐接入電源插座後，顯示「0:00」。

a 按  一次。



b 旋轉旋鈕設置烹飪時間，最大值為 95:00。

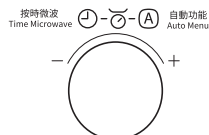

c 按  開始倒計時。



注意

- 廚房計時器設置與時鐘設置不同。計時器只用於計時。
- 廚房計時器計時期間，不啟動任何負載。


## 4. 微波烹飪


使用微波功能時，請勿使用金屬配件。

微波功能有兩種使用方法。

按  數次，選擇功率等級。

或者

- a 按  一次，然後旋轉旋鈕，設置功率等級。

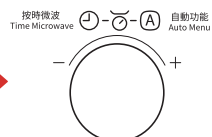

注意

按一次：P100 ( 900W )

按兩次：P80 ( 720W )

按三次：P50 ( 450W )


按四次：P30 ( 270W )

按五次：P10 ( 90W )

- b 按  鍵確認功率等級。



- c 旋轉旋鈕設置烹飪時間，最大值為 95 分鐘。

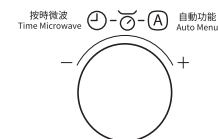


- d 按  鍵開始烹飪。




## 應用程式控制：



- 為安全，無法通過APP遙距啟動設備。


- 1 點擊  圖標，進入微波加熱功能設置頁面。

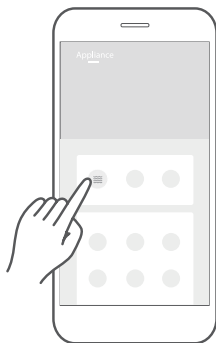


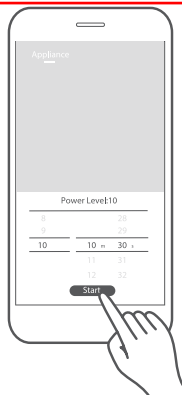
- 2 上下滑動，調節微波功率。



- 3 上下滑動，選擇小時數和分鐘數，調節烹飪時間。

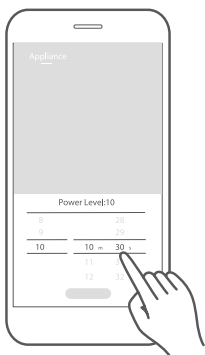

- 4 點按「Start」，在設備上點按  啟動烹飪。



- 上下滑動滾動條選擇參數時，速度請勿過快。當數字停止滾動時，按下「Start（開始）」按鈕。

## 5. 燒烤或混合

除產品自帶的金屬附件外，請勿在混合功能下使用其他金屬附件。

燒烤 / 混合功能有兩種使用方式。

面板控制：

按 **(F)** 數次，選擇模式。


或者

**a** 按 **(F)** 一次，然後旋轉旋鈕選擇模式。

依次顯示「G-1、C-1...C-4、  
110°C、120°C...200°C」  
（「G-1」為燒烤模式，「C-1~C-4」  
為混合模式）。

**(F)** 燒烤/熱風/混合  
Grill/Conv./Combi

**(F)** 燒烤/熱風/混合  
Grill/Conv./Combi

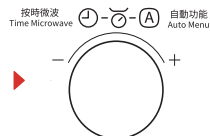

注意

按一次：G-1

按兩次：C-1

按三次：C-2

按四次：C-3


按五次：C-4

按六次以上：110°C 至 200°C

**b** 按 **(▶30S)** 鍵確認模式。

**(▶30S)**  
開始/+30秒  
Start/+30Sec.

**c** 旋轉旋鈕設置烹飪時間，最大值為 95 分鐘。

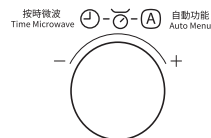

**d** 按 **(▶30S)** 鍵開始烹飪。

**(▶30S)**  
開始/+30秒  
Start/+30Sec.



注意

- 烹飪時間過半時，蜂鳴器會發出聲音，提醒您給食物翻面。如果沒有操作，氣炸焗爐將繼續工作。


燒烤或混合模式	微波	燒烤	熱風
G-1		•	
C-1	•		•
C-2	•	•	
C-3		•	•
C-4	•	•	•

## 6. 預熱熱風

非微波功能，可以使用烤架、烤盤。

- 按 **(F)** 數次，選擇熱風。
- a** 或者
- 按 **(F)** 一次，然後旋轉旋鈕選擇熱風。


可選溫度範圍：110–200° C

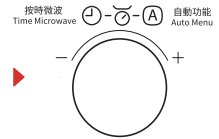

- b** 按 **(▶<sub>+30s</sub>)** 兩次開始預熱。  
預熱完成後，溫度會閃爍，打開箱門，將食物放入氣炸焗爐。



- c** 旋轉旋鈕設置烹飪時間，最大值為 95 分鐘。

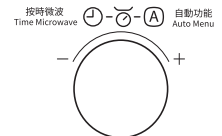

- d** 按 **(▶<sub>+30s</sub>)** 鍵開始烹飪。



## 7. 無預熱熱風

非微波功能，可以使用烤架、烤盤。

按 **(F)** 數次，選擇熱風溫度。


**a** 或者

按 **(F)** 一次，然後旋轉旋鈕選擇熱風。

可選溫度範圍：110-200° C

**(F)** 燒烤/熱風/混合  
Grill/Conv./Combi


**(F)** 燒烤/熱風/混合  
Grill/Conv./Combi

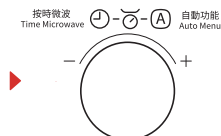

**b** 按 **(▶)**<sub>+30S</sub> 鍵確認溫度。

**(▶)**<sub>+30S</sub>  
開始/+30秒  
Start/+30Sec.

**c** 旋轉旋鈕設置烹飪時間，最大值為 95 分鐘。

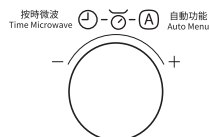

**d** 按 **(▶)**<sub>+30S</sub> 鍵開始烹飪。

**(▶)**<sub>+30S</sub>  
開始/+30秒  
Start/+30Sec.




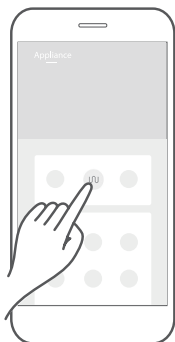
## 應用程式控制：



- 為安全，無法通過APP遙距啟動設備。


### 烤架


- 1 點擊  圖標，進入燒烤功能設置頁面。




- 2 上下滑動調節烹飪時間。

點擊該區域，退出烹飪參數選項卡，返回設備功能頁面。

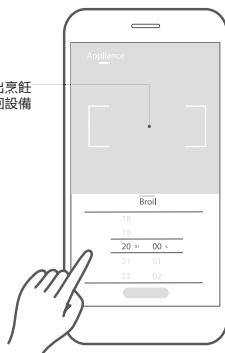


- 3 點按「Start」，在設備上點按  啟動烹飪。

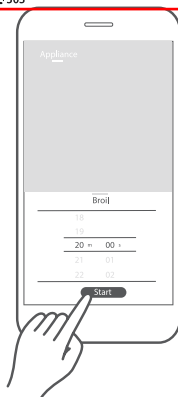


- 上下滑動滾動條選擇參數時，速度請勿過快。當數字停止滾動時，按下「Start（開始）」按鈕。


## 熱風


- 1 點擊  圖標，進入熱風設置頁面，上下滑動調整參數。

點擊該區域，退出烹飪參數選項卡，返回設備功能頁面。

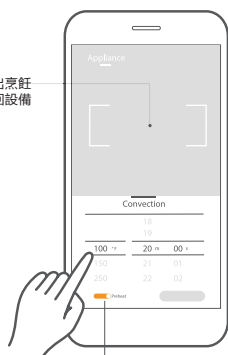

如需預熱，請先打開設備。


- 2 點按「Start」，在設備上點按  啟動烹飪。

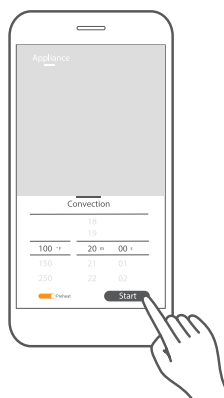


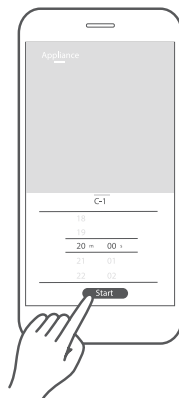
## 混合

- 1 點擊「C-1~C-4」進入模式設置頁面，上下滑動調整參數。

點擊該區域，退出烹飪參數選項卡，返回設備功能頁面。

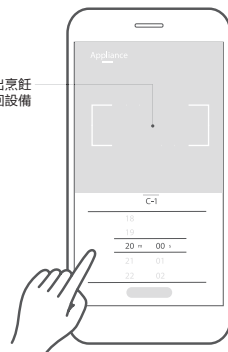

- 2 點按「Start」，在設備上點按  啟動烹飪。




## 8. 自動選單

選單功能有兩種使用方法。

### 面板控制：


- a 在待機模式下，向右旋轉旋鈕設置選單。  
將依次顯示「A-1」至「A-10」。

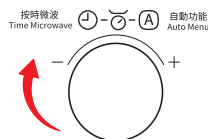

- b 按  鍵確認選單。



- c 轉動旋鈕，設定食材重量。

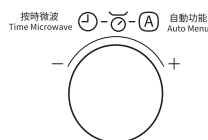

- d 按  鍵開始烹飪。



選單	重量 / 份數	顯示	功率等級	烹飪時間
A-1 自動加熱	150 克	150g	P100 (微波)	2' 00"
	250 克	250g		3' 00"
	350 克	350g		4' 00"
	450 克	450g		5' 00"
	600 克	600g		6' 00"
A-2 薯仔 (生 -> 熟)	1	1	P100 (微波)	5' 00"
	2	2		8' 30"
	3	3		12' 30"

選單	重量 / 份數	顯示	功率等級	烹飪時間
A-3 肉類 (生 -> 熟)	150 克	150g	P80 (微波)	3' 00"
	300 克	300g		4' 30"
	450 克	450g		6' 00"
	600 克	600g		8' 00"
A-4 蔬菜 (生 -> 熟)	150 克	150g	P100 (微波)	3' 00"
	350 克	350g		5' 00"
	500 克	500g		6' 30"
A-5 魚肉 (生 -> 熟)	150 克	150g	P80 (微波)	3' 00"
	250 克	250g		4' 00"
	350 克	350g		5' 30"
	450 克	450g		6' 30"
A-6 意大利粉 (生 -> 熟)	50 克 (加 450 克冷水)	50g	P80 (微波)	18' 00"
	100 克 (加 800 克冷水)	100g		20' 00"
	150 克 (加 1200 克冷水)	150g		22' 00"
A-7 煲湯	200 克	200g	P100 (微波)	2' 00"
	400 克	400g		3' 50"
	600 克	600g		5' 30"
A-8 蛋糕 (生 -> 熟)	475 克	475g	熱風 150°C (帶預熱)	55' 00"
A-9 意大利薄餅 (冷凍 -> 熟食)	100 克	100g	P100 (微) + 熱風 200°C	1' 30" / 4' 30"
	200 克	200g		2' 00" / 6' 00"
	300 克	300g		2' 30" / 7' 30"
A10 雞肉 (生 -> 熟)	500 克	500g	P100 (微) + 熱風 200°C	5' 00" / 29' 00"
	750 克	750g		7' 00" / 32' 00"
	1000 克	1000g		9' 00" / 35' 00"
	1200 克	1200g		11' 00" / 38' 00"

## 應用程式控制：



- 為保安全，無法通過APP遙距啟動設備。

- 1 點擊所需選單圖標，進入選單設置頁面，然後上下滑動調整烹飪參數。



- 2 點按「Start」，在設備上點按「▶」啟動烹飪。



- 上下滑動滾動條選擇參數時，速度請勿過快。當數字停止滾動時，按下「Start（開始）」按鈕。

## 9. 按重量解凍

使用微波功能時，請勿使用金屬配件。


解凍功能有兩種使用方式。

### 面板控制：

a 按  一次，顯示「dEF1」。



b 旋轉旋鈕設置食材重量，應在「100克-2000克」範圍內。  
旋轉一次，重量增加100克。

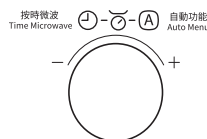

c 按  鍵開始解凍。



- 解凍期間，蜂鳴器會響兩次，提醒給食物翻面。


## 10. 按時間解凍

使用微波功能時，請勿使用金屬配件。

a 按  兩次，顯示「dEF2」。



b 旋轉旋鈕設置解凍時間，應在「0:05~95:00」範圍內。

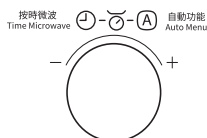

**C** 按  鍵開始解凍。

  
開始/+30秒  
Start/+30Sec.



注意

- 時間過半時，蜂鳴器會發出聲音，提醒給食物翻面。
- 預設功率等級為 P30，不可更改。


## 應用程式控制：




注意


- 為保安全，無法通過APP遙距啟動設備。

## 按重量解凍

- 1 點擊  圖標，進入按重量解凍功能設置頁面，上下滑動調整重量。


點擊該區域，退出烹飪參數選項卡，返回設備功能頁面。

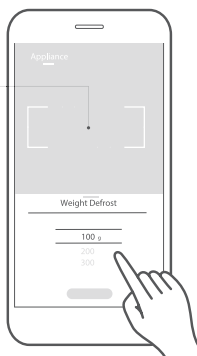



- 2 點按「Start」，在設備上點按  啟動烹飪。




## 按時間解凍

- 1 點擊  圖標，進入按時間解凍功能設置頁面，上下滑動可調節時間。

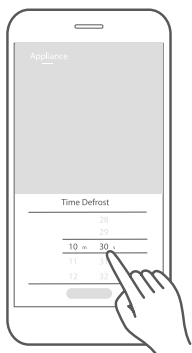

- 2 點按「Start」，在設備上點按  啟動烹飪。

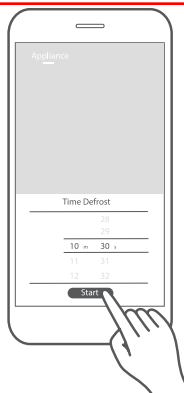

注意

- 上下滑動滾動條選擇參數時，速度請勿過快。當數字停止滾動時，按下「Start（開始）」按鈕。




## 11. 多級烹飪


使用微波功能時，請勿使用金屬配件。

a 按  兩次，顯示「dEF2」。

 解凍  
Defrost

b 旋轉旋鈕設置解凍時間，最大值為 95:00。

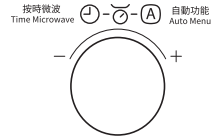


c 按  鍵選擇烹飪模式。

 燒烤/熱風/混合  
Grill/Conv./Combi

d 按  鍵確認。

  
開始/+30秒  
Start/+30Sec.

e 旋轉旋鈕設置烹飪時間，最大值為 95 分鐘。

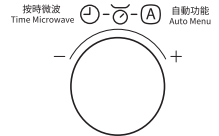

f 按  鍵開始烹飪。

  
開始/+30秒  
Start/+30Sec.




- 多級烹飪可設置兩個烹飪階段。
- 如果已設置解凍功能，第一階段將自動解凍。
- 多級烹飪不能使用廚房計時器、自動選單、快速烹飪和預熱功能。


## 12. 快速烹飪

使用微波功能時，請勿使用金屬配件。

- a 向左旋轉旋鈕一次，直接選擇 100% 功率烹飪模式，時間為 5 秒。

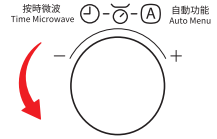


- b 旋轉旋鈕設置烹飪時間，最大值為 95:00。

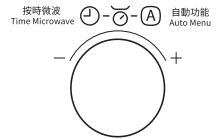

- c 按  鍵開始烹飪。



- a 短按  一次，直接以 100% 功率烹飪 30 秒



## 13. 查詢功能

- a 氣炸焗爐烹調期間，按  鍵，顯示屏將顯示當前時間，持下續三秒。



## 14. 鎖定功能

啟用該功能後，只能使用氣炸焗爐的微波功能，不可用於其他用途。氣炸焗爐連接電源插座，並處於待機模式時，預設為解鎖狀態。

兒童鎖功能有兩種使用方法。

- a 如需啟用鎖定功能，長按  鍵 3 秒，顯示屏將顯示已鎖定圖標，此時兒童或其他用戶不可使用氣炸焗爐。




- b 要解鎖，請按  鍵 3 秒。




### 應用程式控制：




- 為保安全，無法通過APP遙距啟動設備。

- 1 點擊「Appliance ( 電器 )」界面的  圖標，再按「Confirm( 確認 )」，開啟兒童鎖功能。

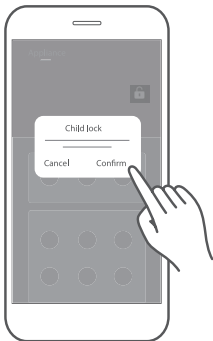

- 2 按住鎖定鍵並保持 3 秒，解除兒童鎖功能。

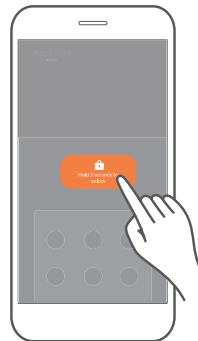

## 應用程式控制的其他功能：




- 為保安全，無法通過APP遙距啟動設備。


## 食譜

食譜頁面顯示雲端食譜，烹飪參數均經專業廚師驗證。食譜頁面正在不斷更新，以提供更多的烹飪選擇。

- 1 在美食交流圈入面點擊食譜圖片，進入食譜詳情頁面。

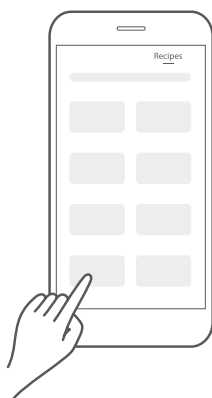

- 2 上下滑動查看所需的食材和詳細的烹飪步驟。點按「一鍵烹飪」，在設備上點按 [▶] 啟動烹飪。

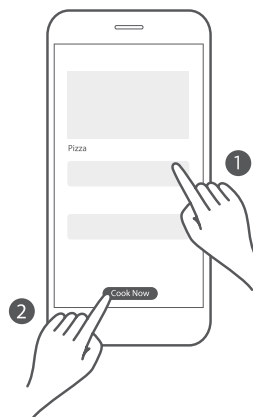

## 清潔

妥善保養和清潔可以保持電器外表美觀，同時有助於電器在良好狀態。請按照下述說明，妥善安排微波爐維護。



警告

- 門板玻璃刮傷可能會發展成裂縫。請勿使用玻璃刮刀、鋒利的或研磨性的清潔工具或清潔劑。
- 如果清潔不當可能會損壞設備表面。會造成微波能量逸出。定期清潔設備。如有任何食物殘渣，需立即清除。
- 請勿將設備浸入水中或用流水清洗。

## 清潔劑

清潔劑使用不當會造成電器各表面損壞，因此，使用清潔劑時請參考下表資訊。使用全新海綿或布，使用前徹底清洗。

請勿使用：



粗糙或磨蝕性清潔劑



金屬或玻璃刮刀清潔門板



金屬或玻璃刮刀清潔門封



硬百潔布或海綿




酒精含量高的清潔劑

## 電器正面

熱肥皂水：

用抹布清洗，然後用軟布擦乾。請勿


使用金屬或玻璃刮刀進行清潔。

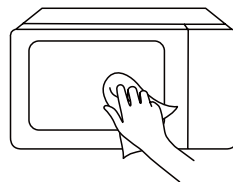

## 不鏽鋼電器正面

### 熱肥皂水：


用洗碗布清洗，然後用軟布擦乾。立即清除水垢、油脂、澱粉和白蛋白的飛濺物和斑塊。這些斑塊或飛濺物下會產生腐蝕。請勿使用玻璃清潔劑或金屬或玻璃刮刀進行清潔。

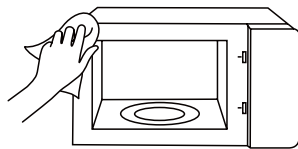

## 不鏽鋼烹飪腔

### 熱肥皂水或醋溶液：


用洗碗布清洗，然後用軟布擦乾。請勿使用烤箱噴霧或任何其他刺激性烤箱清潔劑或研磨材料。百潔布、粗糙的海綿以及平底鍋清潔劑也不適用。這些東西會損傷內腔表面。內腔表面需要充分乾燥。

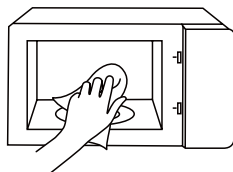

## 烹飪腔凹槽

### 濕布：


不得讓水通過轉盤驅動器流入設備。用布擦乾轉盤驅動器。

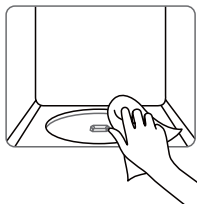

## 轉盤和輓環

### 熱肥皂水：

將轉盤放回其凹槽中時必須正確接合。

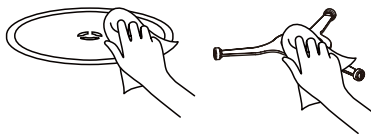

## 電器門面板

### 玻璃清潔劑：

用洗碗布清洗。請勿使用玻璃刮刀。

# 故障排除

## 正常情况

微波爐干擾電視的訊號接收	微波爐運行時，可能會干擾收音機和電視的信號接收。這與攪拌機、吸塵器、電風扇等小型設備造成的干擾類似。 這是正常的情况。
昏暗的氣炸焗爐燈光	在低功率下運行氣炸焗爐微波功能時，其光線可能變暗。這是正常的情况。
蒸汽積聚在氣炸焗爐門上，熱氣從排氣口排出	烹調時，蒸汽可能從食物中冒出。大多數蒸汽會從排氣口排出。但有些會積聚在氣炸焗爐門等低溫位置。這是正常的情况。
空氣炸焗爐意外啟動。	禁止運行空氣炸焗爐。 危險

## 故障

## 可能原因

## 補救措施

	(1) 電源線未插緊。	拔掉插頭。10 秒鐘後再次插入插頭。
氣炸焗爐無法啟動	(2) 保險絲熔斷或斷路器工作。	更換保險絲或復位斷路器（由我公司專業人員維修）
	(3) 插座故障。	與其他電器測試插座。
氣炸焗爐不加熱。	(4) 門未關好。	關好門。

**#DetailsMatter**




# INSTRUCTION MANUAL

## MULTI-FUNCTION OVEN WITH HEALTHY AIR FRY

MW3-SAC24SE(BK)

Please review this instruction manual before operating.

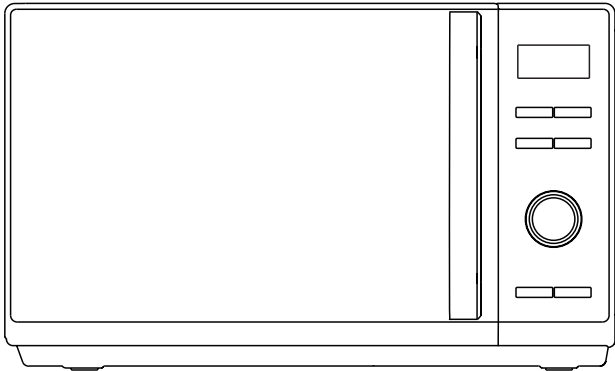

**TOSHIBA**

# CONTENTS

## IOT SMART CONTROL

Product wireless network connection .....	EN-01
How connect your devices to TSmartLife .....	EN-02

## PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy .....	EN-04
Important safety instructions.....	EN-06
To reduce the risk of injury to persons grounding installation .....	EN-11
Utensils .....	EN-14
Materials you can use in microwave oven .....	EN-15
Materials can not be used in microwave oven .....	EN-17

## PRODUCT SETTING

Setting up your oven .....	EN-18
----------------------------	-------

## INSTRUCTION FOR USE

Before using for the first time .....	EN-21
Operation .....	EN-22
1. Power levels .....	EN-23
2. Clock setting .....	EN-23
3. Kitchen timer .....	EN-24
4. Microwave cook .....	EN-25

5. Grill or combination .....	EN-27
6. Convection with preheat .....	EN-28
7. Convection without preheat .....	EN-29
8. Auto menu .....	EN-32
9. Weight defrost .....	EN-35
10. Time defrost .....	EN-35
11. Multi-stage cooking.....	EN-38
12. Speedy cooking .....	EN-39
13. Inquiring function.....	EN-39
14. Lock function .....	EN-40

## CLEANING AND MAINTENANCE

Cleaning .....	EN-42
Trouble shooting .....	EN-44



### NOTE



BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

# IOT SMART CONTROL

## PRODUCT WIRELESS NETWORK CONNECTION


---

**a** Connect the network

Press and hold " " for 3 seconds, till a beep sounds, "AP" and flashing " " show on display. If it fails, "N0" will display, and the oven will return to standby after 30 seconds.



**b** Disconnect from the network


Press and hold " " for 8 seconds, till a beep sounds, "--" flashes for few seconds, if the link has been removed successfully, the screen will display "8888" and then return to standby after 3 seconds. If it fails, "FFFF" will display, and the oven will return to standby after 3 seconds.



# HOW CONNECT YOUR DEVICES TO TSmartLife


## 1 Download The TSmartLife App

Scan QR code or find us on your App store.

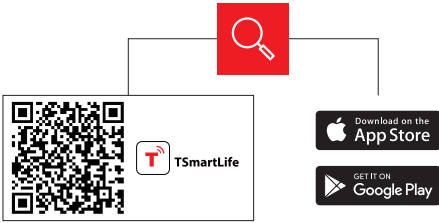

## 2 Register and Log in


Log in for existing users or sign up for new users.

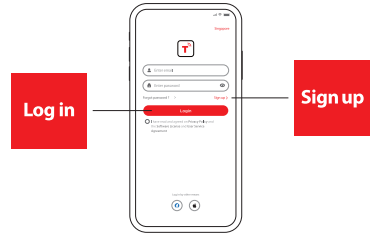

## 3 Connect your Devices to TSmartLife


### STEP 1.

Connect to wireless network and enable Bluetooth.

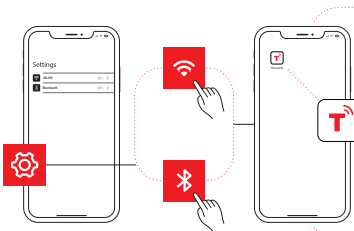


### STEP 2.

Open the TSmartLife App. Power on selected device.

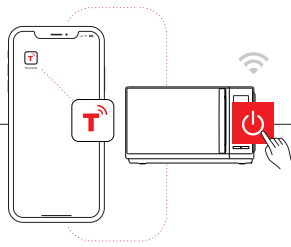


### STEP 3.

Add your device using one of the following methods:

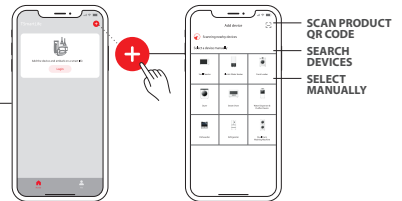


### STEP 4.

Ensure device and App are under same wireless network.

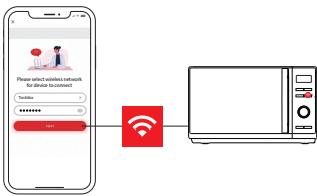

### STEP 5.

 Press “” button for 3 seconds on the panel. Following instruction to set up, it will connect automatically.



### STEP 6.

Rename your device and try to remote control it.



# HOW CONNECT YOUR DEVICES TO TSmartLife

---


## TIPS

- Make sure your devices are powered on.
- Keep your mobile phone close to your device during connection.
- Connect your mobile phone to the wireless network at home.
- Enable the 2.4GHz frequency on your wireless network router. 5GHz Wi-Fi network is not available at current stage.
- The device is unable to connect to wireless network that requires authentication and also appears in public areas such as hotels and restaurants.
- It is recommended to use a wireless network name that only contains letters and numbers. If your wireless network name contains special characters, modify it in the router. Disable WLAN+ (Android) or WLAN Assistant (iOS) when connecting your devices to the network.
- To reconnect a device to the wireless network, click "+" on the App home screen and add the device again by the category and model according to the App prompts.

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

---

- (a). Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c). **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

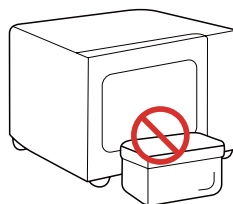

### ADDENDUM

---

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

## SPECIFICATIONS

---

MODEL	MW3-SAC24SE(BK)
RATED VOLTAGE	220-230 V~ 50 Hz
RATED INPUT (MICROWAVE)	1350-1450 W
RATED OUTPUT (MICROWAVE)	850-900 W
RATED INPUT (GRILL)	900-1000 W
RATED INPUT (CONVECTION)	1500-1680 W

---



# IMPORTANT SAFETY INSTRUCTIONS



## WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:



Read and follow the specific: "**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**".



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Children should be supervised to ensure that they do not play with the appliance.




If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.




**WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.


# IMPORTANT SAFETY INSTRUCTIONS

 
 **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.


---

 **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.


---

 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.




 Only use utensils that are suitable for use in microwave ovens.


---

 If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

---

 Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.


---

 The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

# IMPORTANT SAFETY INSTRUCTIONS



The oven should be cleaned regularly and any food deposits removed. Please keep the waveguide area clean. Use soft damp cloth to clean it up when there is food splash residue on the waveguide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.

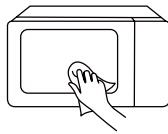

Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)



The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)




This appliance is intended to be used in household and similar applications such as:

1. staff kitchen areas in shops, offices and other working environments;
2. by clients in hotels, motels and other residential type environments;
3. farm houses;
4. bed and breakfast type environments.




The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.


# IMPORTANT SAFETY INSTRUCTIONS

 The appliance is intended to be used freestanding.


---

 The rear surface of appliances shall be placed against a wall.


---

 The temperature of accessible surfaces may be high when the appliance is operating.


---


 **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

---


 Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating

has ended.

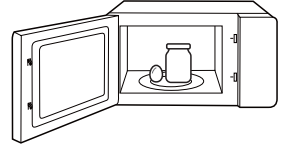


 The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)


---

 The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

---

 Metallic containers for food and beverages are not allowed during microwave cooking.

---

 The appliance shall not be cleaned with a steam cleaner.

# IMPORTANT SAFETY INSTRUCTIONS



The appliances are not intended to be operated by means of an external timer or separate remote-control system.



Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.


**READ CAREFULLY AND KEEP FOR  
FUTURE REFERENCE**

# TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING** - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

 <b>DANGER</b>	<p>Electric Shock Hazard: Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.</p>
--	---

# TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



## WARNING

### Electric Shock Hazard:

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord or extension cord is used:
  - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - (2). The extension cord must be a grounding-type 3-wire cord.
  - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

# CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.



# UTENSILS



## CAUTION


### Personal Injury Hazard:

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy. See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven**"

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.


### Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

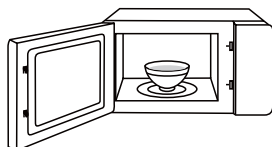





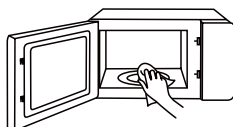





 

 



## NOTE





 



KEEP THE CAVITY AND  
WAVEGUIDE COVER CLEAN











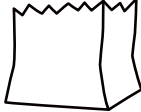


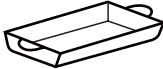


# MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. 
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. 
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. 
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. 
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. 
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking. 
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. 
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming. 

# MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 <p data-bbox="175 427 241 451">Plastic</p>	<p data-bbox="353 331 901 472">Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.</p> 
 <p data-bbox="148 612 268 636">Plastic wrap</p>	<p data-bbox="353 531 901 611">Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.</p> 
 <p data-bbox="134 775 282 799">Thermometers</p>	<p data-bbox="353 727 891 751">Microwave-safe only (meat and candy thermometers).</p> 
 <p data-bbox="156 940 260 963">Wax paper</p>	<p data-bbox="353 876 822 924">Use as a cover to prevent splattering and retain moisture.</p> 

# MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

 
UTENSILS	REMARKS
 <p>Aluminum tray</p>	May cause arcing. Transfer food into microwave-safe dish. 
 <p>Food carton with metal handle</p>	May cause arcing. Transfer food into microwave-safe dish. 
 <p>Metal or metal trimmed utensils</p>	Metal shields the food from microwave energy. Metal trim may cause arcing. 
 <p>Metal twist ties</p>	May cause arcing and could cause a fire in the oven. 
 <p>Paper bags</p>	May cause a fire in the oven. 
 <p>Plastic foam</p>	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. 
 <p>Wood</p>	Wood will dry out when used in the microwave oven and may split or crack. 

## SETTING UP YOUR OVEN


(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)

### NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES


Remove the oven and all materials from the carton and oven cavity.




Grill Rack (Can not be used in microwave function and must be placed on the glass tray )

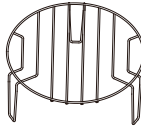


Grill Rack (Can not be used in microwave function and must be placed on the glass tray )

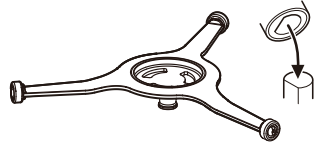


Turntable Ring Assembly

 


Instruction Manual

 

Glass turntable

 

Bake Tray (Can't be used in microwave function and can be placed on the grill rack)

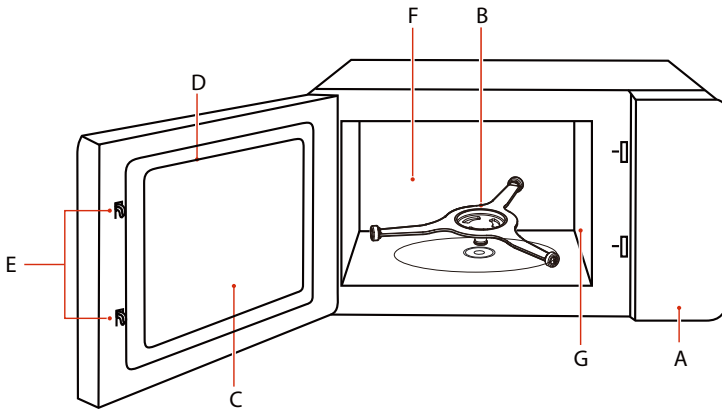

- A. Control panel
- B. Turntable Ring Assembly
- C. Observation window
- D. Door assembly

- E. Safety interlock system
- F. Oven cavity
- G. Waveguide cover

# SETTING UP YOUR OVEN

## TURNTABLE INSTALLATION


Clean the cooking compartment and place the turntable.

For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.


Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories. You can also refer them to the cleaning section.

How to put the turntable in place:

1. Place the turntable ring assembly ② into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ②.

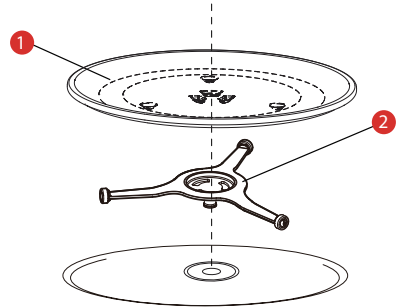

- 1) Glass Tray  
2) Turntable Ring Assembly

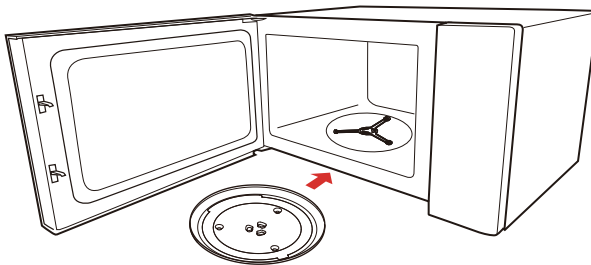

### NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

## COUNTERTOP INSTALLATION


Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

## INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
  - a. The minimum installation height is 85cm.
  - b. The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
  - c. Do not remove the legs from the bottom of the oven.
  - d. Blocking the intake and/or outlet openings can damage the oven.
  - e. Place the oven as far away from radios and TV as possible.

Operation of microwave oven may cause interference to your radio or TV reception.

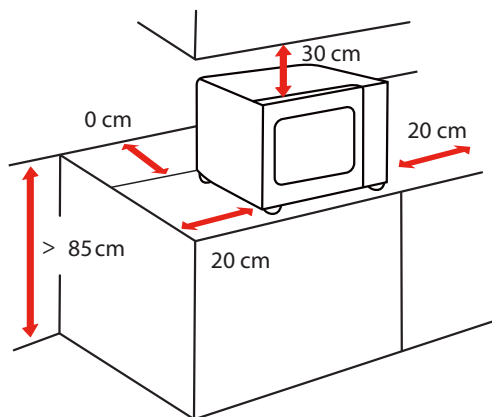


2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



**NOTE**

- Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

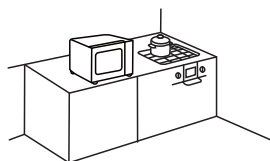

The accessible surface may be hot during operation

# INSTRUCTION FOR USE

## BEFORE USING FOR THE FIRST TIME

**It is normal that the oven may produce unpleasant odors when it is used for the first time.**

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**PRODUCT SAFETY**" beforehand.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.




- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.



# OPERATION

## CONTROL PANEL AND FEATURES

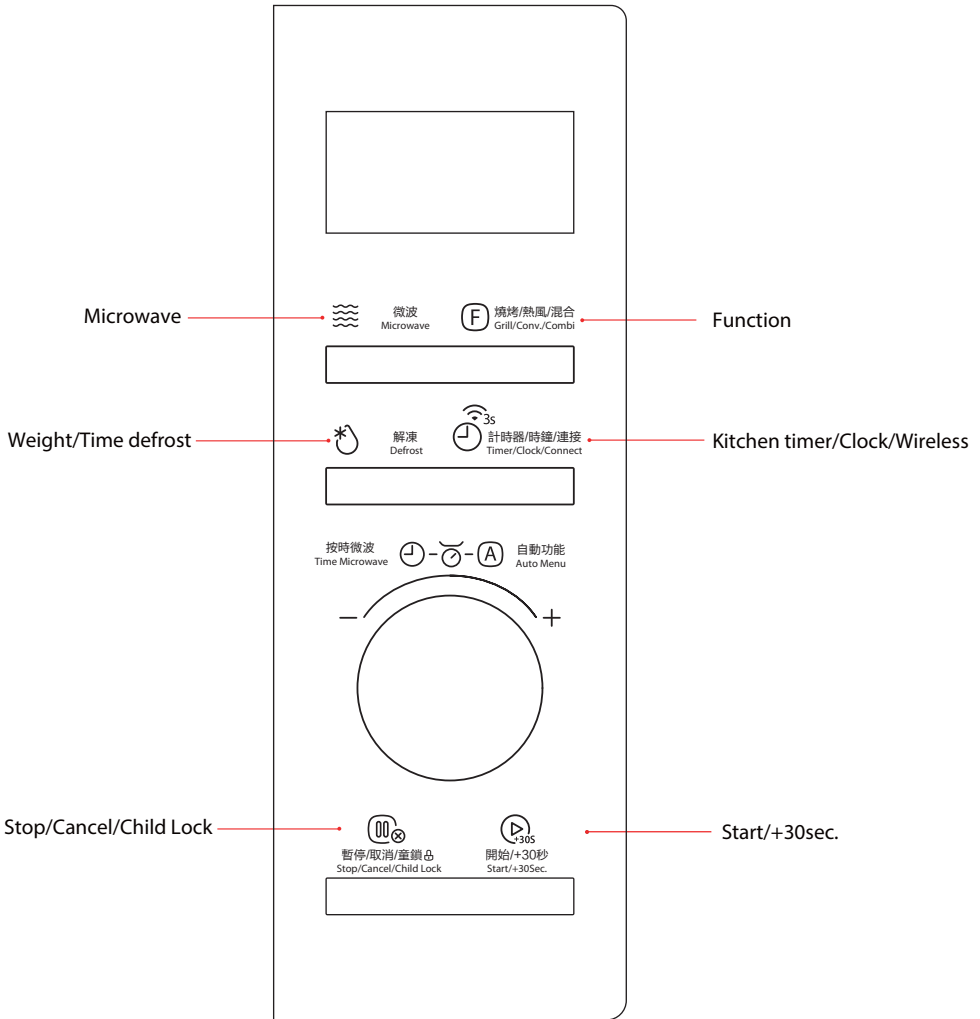

(You can also control the oven by app control)

### NOTE

- App control: Download the TSmartLife first, then connect the app with your oven by the insert of TSmartLife APP connection guide.

## 1. POWER LEVELS

### Microwave Power

LEVEL	POWER	DISPLAY
High	100%	P100
M. High	80%	P80
Med.	50%	P50
M. Low	30%	P30
Low	10%	P10


## 2. CLOCK SETTING

When the microwave oven is plugged into an outlet, "0:00" will display.

a Press  twice.




b Turn the knob to set the hour figures, it should be within 0-23.

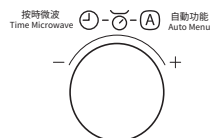

c Press  to confirm.




d Turn the knob to set the minute figures, it should be within 0-59.

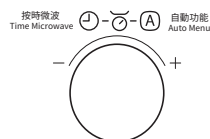

e Press  to confirm.



- When the oven is power on, if the clock is not be set, it will not work.
- In the process of setting clock, if there is not any operation in 5 minutes or press  directly, display will automatically return to the previous clock setting.


### 3. KITCHEN TIMER


When the microwave oven is plugged into an outlet, "0:00" will display.

a Press  once.



b Turn the knob to set the time, the maximum value is 95:00.

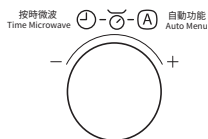

c Press  to start counting down.




- The Kitchen Timer setting is different from the Clock setting; it is simply a timer.
- During the Kitchen Timer function, no cooking function can be set into operation.


## 4. MICROWAVE COOK

 
Please do NOT use metal accessories under microwave function.  
There are two ways to use the microwave function.

### Panel control:

Press  more times to choose the power level.

**a** or

Press  once, and then turn the knob to set the power level.

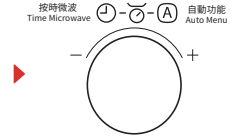

**NOTE**


Press once: P100 (900W)

Press twice: P80 (720W)

Press three times: P50 (450W)


Press four times: P30 (270W)

Press five times: P10 (90W)

**b** Press  to confirm the power level.



**c** Turn the knob to set the cooking time, the maximum value is 95:00.

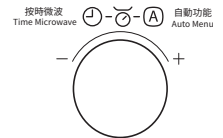


**d** Press  to start cooking.




## App Control:




- To ensure safety, the APP remote control function is not allowed.


- 1 Tap the  icon to enter the microwave heating function setting page.

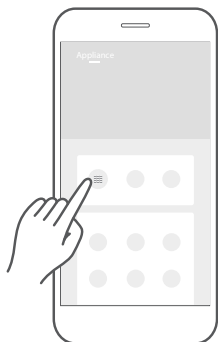


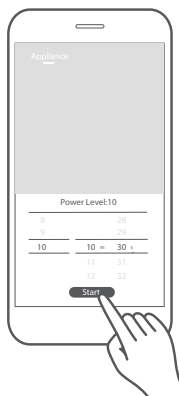
- 2 Swipe up and down to adjust microwave power.

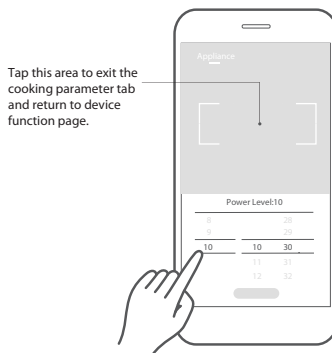

- 3 Swipe up and down the hour and minute selection to adjust cooking time.

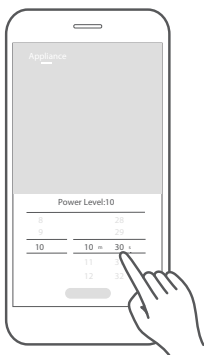

- 4 Click "Start" to confirm, then press " +30s" on the appliance to start cooking.



- Do not swipe too fast when sliding the wheel up and down to select parameters. Tap the "Start" button when the numbers stop scrolling.

## 5. GRILL OR COMBINATION

Please do NOT use metal accessories under combination function except for metal accessories equipped with the product.

There are two ways to use the grill/combine function.

### Panel control:


Press **(F)** more times to choose the mode.

**a** or

Press **(F)** once, and then turn the knob to choose the mode. "G-1, C-1, ..., C-4, 110°C, 120°C, ....., 200°C" will display in order. ("G-1" is grill, "C-1~C-4" are combination).

**(F)** 燒烤/熱風/混合  
Grill/Conv./Combi

**(F)** 燒烤/熱風/混合  
Grill/Conv./Combi

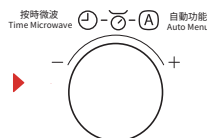

**NOTE**

Press once: G-1

Press twice: C-1

Press three times: C-2

Press four times: C-3


Press five times: C-4

Press six times or more: 110°C-200°C

**b** Press **(▶+30S)** to confirm the mode.

**(▶+30S)**  
開始/+30秒  
Start/+30Sec.

**c** Turn the knob to set the cooking time, the maximum value is 95:00.

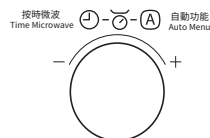

**d** Press **(▶+30S)** to start cooking.

**(▶+30S)**  
開始/+30秒  
Start/+30Sec.



**NOTE**

- When half of the time has finished, the buzzer will sound to remind you to turn the food over during grill function. If no operation, the oven will continue working.

Combi. mode	Microwave	Grill	Convection
G-1		•	
C-1	•		•
C-2	•	•	
C-3		•	•
C-4	•	•	•

## 6. CONVECTION WITH PREHEAT


Non-microwave function, grill rack, grill pan available .

Press **F** more times to choose the convection.



**a** or

Press **F** once, and then turn the knob to choose the convection temperature.

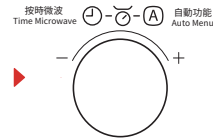


Available temperature range is 110°C-200°C.

**b** Press **+30s** twice to start preheating. When preheating is completed, the temperature will flash, open the door and place food in the oven.



**c** Turn the knob to set the cooking time, the maximum value is 95:00.

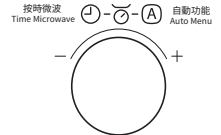

**d** Press **+30s** to start cooking.



## 7. CONVECTION WITHOUT PREHEAT

Non-microwave function, grill rack, grill pan available .

Press **(F)** more times to choose the convection temperature.


**a** or

Press **(F)** once, and then turn the knob to choose the convection temperature.

Available temperature range is 110°C-200°C.

**(F)** 燒烤/熱風/混合  
Grill/Conv./Combi


**(F)** 燒烤/熱風/混合  
Grill/Conv./Combi

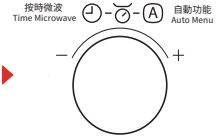

**b** Press **(+30S)** to confirm the temperature.

**(+30S)**  
開始/+30秒  
Start/+30Sec.

**c** Turn the knob to set the cooking time, the maximum value is 95:00.

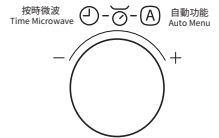

**d** Press **(+30S)** to start cooking.

**(+30S)**  
開始/+30秒  
Start/+30Sec.



## App Control:




**NOTE**

- To ensure safety, the APP remote control function is not allowed.


## GRILL

- 1 Tap the  icon to enter the grill function setting page.

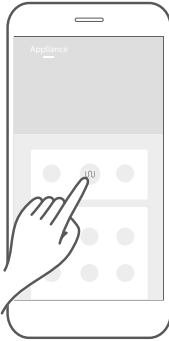


- 2 Swipe up and down to adjust the cooking time.

Tap this area to exit the cooking parameter tab and return to device function page.

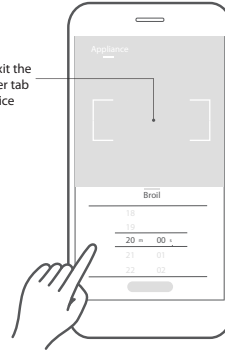

- 3 Click "Start" to confirm, then press " " on the appliance to start cooking.

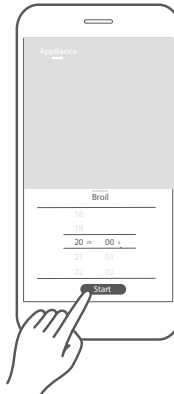


**NOTE**

- Do not swipe too fast when sliding the wheel up and down to select parameters. Tap the "Start" button when the numbers stop scrolling.

## CONVECTION

- 1 Tap "⌂" to enter the convection setting page. Then swipe up and down to adjust the parameter.

Tap this area to exit the cooking parameter tab and return to device function page.

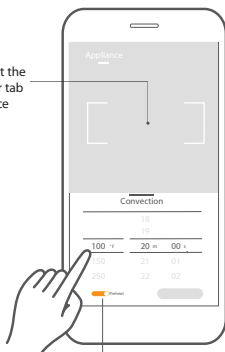

If preheat is desired, please open it first.


- 2 Click "Start" to confirm, then press "▶30S" on the appliance to start cooking.




## COMBINATION

- 1 Tap "C-1~C-4" to enter the mode setting page. Then swipe up and down to adjust the parameter.

Tap this area to exit the cooking parameter tab and return to device function page.

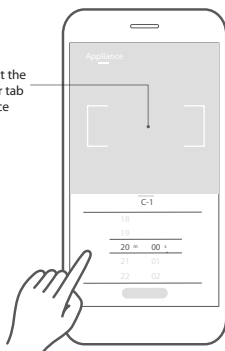

- 2 Click "Start" to confirm, then press "▶30S" on the appliance to start cooking.

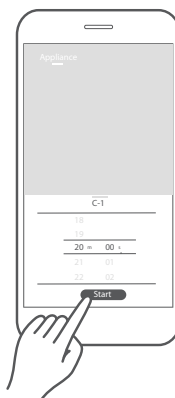



## 8. AUTO MENU

There are two ways to use the menu function.

### Panel control:


- a** In standby mode, Turn the knob right to set the menu.  
"A-1" to "A-10" will display in order.

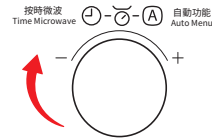

- b** Press  to confirm the menu.



- c** Turn the knob to set the weight of the food.

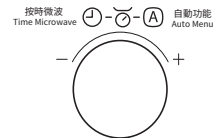

- d** Press  to start cooking.



MENU	WEIGHT/ PORTION	DISPLAY	POWER LEVEL	COOKING TIME
A-1 AUTO REHEAT	150g	150g	P100 (Micro.)	2'00"
	250g	250g		3'00"
	350g	350g		4'00"
	450g	450g		5'00"
	600g	600g		6'00"
A-2 POTATO (raw -> cooked)	1	1	P100 (Micro.)	5'00"
	2	2		8'30"
	3	3		12'30"


MENU	WEIGHT/ PORTION	DISPLAY	POWER LEVEL	COOKING TIME
A-3 MEAT (raw -> cooked)	150g	150g	P80 (Micro.)	3'00"
	300g	300g		4'30"
	450g	450g		6'00"
	600g	600g		8'00"
A-4 VEGETABLE (raw -> cooked)	150g	150g	P100 (Micro.)	3'00"
	350g	350g		5'00"
	500g	500g		6'30"
A-5 FISH (raw -> cooked)	150g	150g	P80 (Micro.)	3'00"
	250g	250g		4'00"
	350g	350g		5'30"
	450g	450g		6'30"
A-6 PASTA (raw -> cooked)	50g(with cold water 450g)	50g	P80 (Micro.)	18'00"
	100g(with cold water 800g)	100g		20'00"
	150g(with cold water 1200g)	150g		22'00"
A-7 SOUP	200g	200g	P100 (Micro.)	2'00"
	400g	400g		3'50"
	600g	600g		5'30"
A-8 CAKE (raw -> cooked)	475g	475g	CONVEC.150°C (With preheat)	55'00"
A-9 PIZZA (frozen -> cooked)	100g	100g	P100 (Micro.)+ CONVEC.200°C	1'30"/4'30"
	200g	200g		2'00"/6'00"
	300g	300g		2'30"/7'30"
A10 CHICKEN (raw -> cooked)	500g	500g	P100 (Micro.)+ CONVEC.200°C	5'00"/29'00"
	750g	750g		7'00"/32'00"
	1000g	1000g		9'00"/35'00"
	1200g	1200g		11'00"/38'00"

## App Control:



- To ensure safety, the APP remote control function is not allowed.

- 1 Tap the desired menu icon to enter the menu setting page. Then swipe up and down to adjust the cooking value.

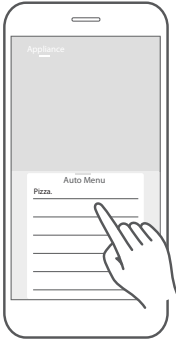

- 2 Click "Start" to confirm, then press "▶ 30S" on the appliance to start cooking.




- Do not swipe too fast when sliding the wheel up and down to select parameters. Tap the "Start" button when the numbers stop scrolling.

## 9. WEIGHT DEFROST

Please do NOT use metal accessories under microwave function.


There are two ways to use the defrost function.

### Panel control:

a Press  once, "dEF1" will display.



b Turn the knob to set the weight of food, it should be within "100g-2000g".  
Adding weight by 100g each time.

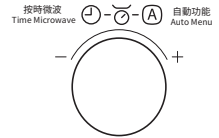

c Press  to start defrosting.




### NOTE

- The buzzer will sound twice to remind you of turning over the food during defrosting.


## 10. TIME DEFROST

Please do NOT use metal accessories under microwave function.

a Press  twice, "dEF2" will display.



b Turn the knob to set the defrost time, it should be within "0:05~95:00".

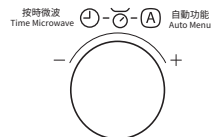

 Press  to start defrosting.




- The buzzer will sound to remind you of turning over the food when half of the time has passed.
- The default power level is P30, it can not be changed.

## App Control:





- To ensure safety, the APP remote control function is not allowed.


## WEIGHT DEFROST

- 1 Tap the  icon to enter the weight defrost function setting page. Then swipe up and down to adjust the weight.


Tap this area to exit the cooking parameter tab and return to device function page.

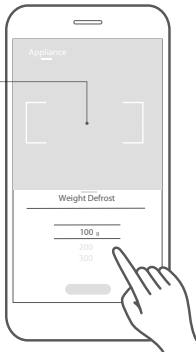



- 2 Click "Start" to confirm, then press  on the appliance to start cooking.

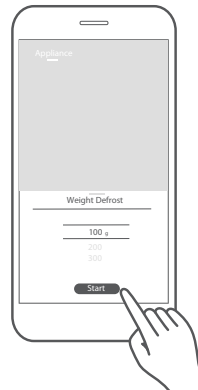


## TIME DEFROST

- 1 Tap the  icon to enter the time defrost function setting page. Then swipe up and down to adjust the time.

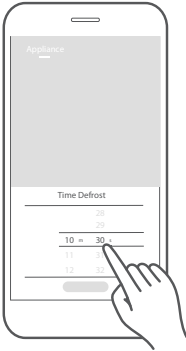

- 2 Click "Start" to confirm, then press "" on the appliance to start cooking.

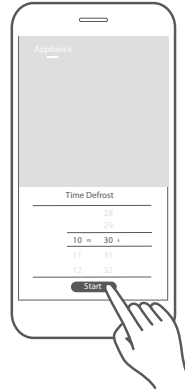


- Do not swipe too fast when sliding the wheel up and down to select parameters. Tap the "Start" button when the numbers stop scrolling.




## 11. MULTI-STAGE COOKING


Please do NOT use metal accessories under microwave function.

a Press  twice, "dEF2" will display.



b Turn the knob to set the defrost time, the maximum value is 95:00.

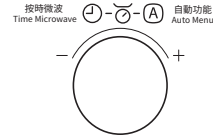


c Press  to choose the cooking mode.



d Press  to confirm.



e Turn the knob to set the cooking time, the maximum value is 95:00.

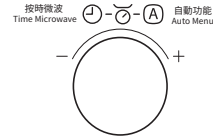

f Press  to start cooking.




- Two cooking stages can be set in multi-stage cooking.
- If you set defrost function, it will work automatically in the first stage.
- Kitchen Timer, Auto menu, Speedy cooking and Preheat cannot be set as one of the multi-stage.


## 12. SPEEDY COOKING

Please do NOT use metal accessories under microwave function.

- a** Turn the knob left once to choose the cooking mode with 100% power level for 5 seconds directly.

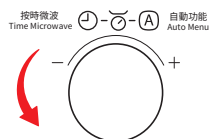


- b** Turn the knob to set the time, the maximum value is 95:00.

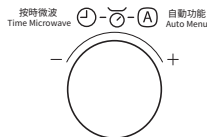


- c** Press  to start cooking.



- a** Press  once to cook with 100% power level with 30 seconds directly.



## 13. INQUIRING FUNCTION

- a** When oven is cooking, press , the current time will appear for three seconds in the display.




## 14. LOCK FUNCTION

This function locks the microwave to avoid unintended use.

When the microwave is plugged into an outlet and is in standby mode, the default mode is set as unlocked.

There are 2 ways to use the lock function:

- a** To lock the microwave so that it cannot be operated by children or other unintended users, press  pad for 3 seconds, the locked icon will display.




- b** To unlock, press  pad for 3 seconds.




### App Control:




- To ensure safety, the APP remote control function is not allowed.

- 1** Tap the  icon on the "Appliance" page and then press "confirm" to activate the child lock function.

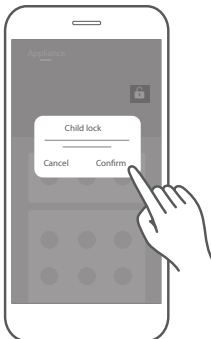

- 2** Tap and hold the locked button for 3 seconds to release the child lock function.

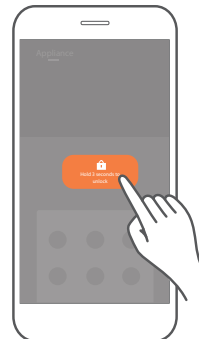

## Other Function Of App Control:




- To ensure safety, the APP remote control function is not allowed.

## RECIPES


The Recipes page displays cloud recipes, cooking parameters have been verified by professional chefs. Recipe page is continuously being updated to provide more cooking variety.

- 1 Tap the picture in "Recipes" to enter the detail page.

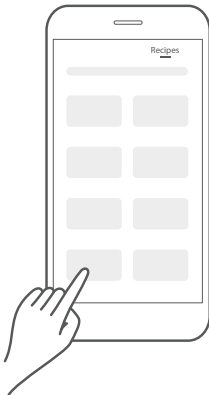

- 2 Swipe up and down to view the required ingredients and detailed cooking steps.

Tap **"Cook Now"** to confirm, then press **"▶ 30s"** on the appliance to start cooking.

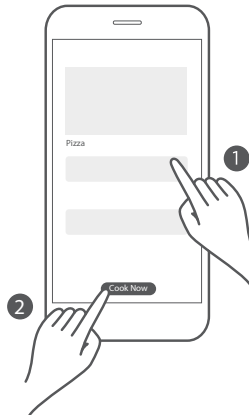

# CLEANING AND MAINTENANCE

## CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. Here are the instructions on how to properly care for the microwave oven.



**WARNING**

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

### Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, see the information in the table. Wash new sponge or cloth thoroughly before use.

 
#### Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

## APPLIANCE FRONT

### Hot soapy water:

Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

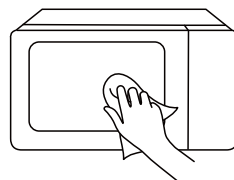


## APPLIANCE FRONT WITH STAINLESS STEEL

---

### Hot soapy water:

Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

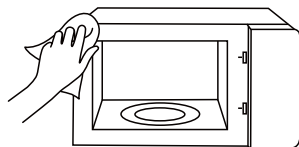


## COOKING COMPARTMENT MADE OF STAINLESS STEEL

---

### Hot soapy water or vinegar solution:

Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

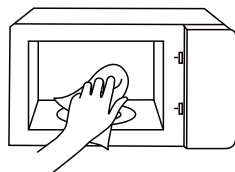


## RECESS IN THE COOKING COMPARTMENT

---

### Damp cloth:

Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

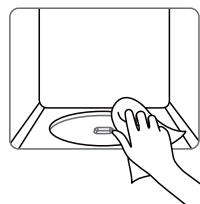


## TURNTABLE AND ROLLER RING

---

### Hot soapy water:

When placing the turntable back into its recess, it must engage properly.

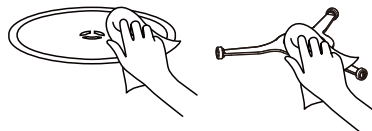

## DOOR PANELS

---

### Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

# TROUBLE SHOOTING

## Normal

Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

## Trouble

## Possible Cause

## Remedy

Oven cannot be started.	(1) Power cord is not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door is not closed well.	Close door well.

**#DetailsMatter**