

Media label, ER-VT7230, 145 * 210 mm, non-moveable, PET, 0.05, white, 150 °C , film covering, silk screen printing with white background, the label of warm tips (a separate label for each paster is needed)

Size: 145 * 210 mm

Material: PET, 0.05, high-temperature resistance, 150 °C , film covering, silk screen printing with white background


Note: a separate label for each paster is needed

Quick Start Guide



When the oven is **initially used or powered on**, it is in power-saving mode. To activate it, please open the door.

Usage of Water Tank

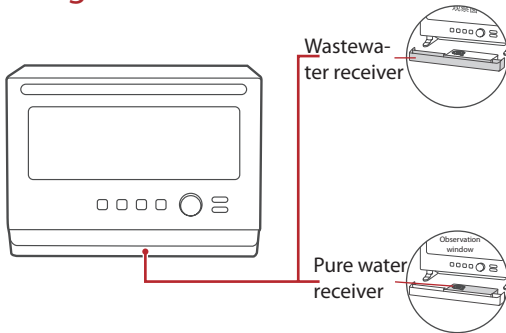

Instructions

Receive the water dropping from the door and the water used for inside cleaning.

Instructions

- Install pure water for **Pure Steam function** and **cleaning function**.
- When the oven displays "△", please empty the receiver and refill the pure water.

Caution

Before use, please close the lid of the receiver filled with water, otherwise, the tilt of the receiver will cause leakage.

Operation Instructions

Pure Steam function

The use of Pure Steam function will produce a certain amount of condensing water. It is recommended to clean the condensate inside the oven. If it is not cleaned, **it is normal to produce steam when using other functions.**

Adjust the temperature to 50–100 °C:
Adjust the time to 5 seconds–90 minutes.

Microwave function



When using the microwave function, **please do not leave any metal utensils such as a baking tray, grill, and tin foil in the oven.**

Turn the knob to choose firepower, and the time is 5seconds–95 minutes. Please refer to the Quick Start Guide for details.

Roast function

Press once **No preheating**

If you use the non-preheating Roast function, you can directly put the food in the oven, close the door and press the "Roast" button once to adjust the temperature and time.

Adjust the temperature to 100–230 °C:
Adjust the time to 5 seconds–90 minutes.

Press twice **With preheating**

- Preheating is to make the temperature inside the oven reach the initial temperature of baking or barbecue without the need to set a time. **Please do not put food in during the preheating process.**

Adjust the temperature to 100–230 °C

- **After receiving the reminder that the preheating is over, please open the door and put in the food;** After opening the door, the oven will automatically display the interface of the time setting.

After preheating, the time adjustment range is 5 seconds–90 minutes.

Menu

Menu numbers can be selected clockwise or counterclockwise

Clockwise menu numbers 01–41
Counterclockwise menu numbers 41–01



When the temperature inside the oven is **higher than 65 °C**, the viewing screen displays the high-temperature icon "⊕", giving a **reminder of the high temperature. This is a normal state.** Please prevent high temperatures to avoid scalding.