

TOSHIBA



Toshiba Electric
Rice Cooker/Warmer

(For household use)

Instruction Manual

Model

RC-5MM

RC-5MMI

RC-5MME

- Thank you for buying Toshiba rice cooker/warmer.
- To apply this product safely and properly, please read the manual thoroughly and well understand before use.
- After reading, please keep the manual handy.

SAFETY PRECAUTION

Follow the instruction strictly.

- This page is mainly referred to the safety precaution to prevent the property damage and the danger to the users and others. After understanding these details clearly (the indication and the symbols), please read and follow the specified items.

SIGNAL EXPLANATION



WARNING

Indicating "when the product is used wrongly, it may cause severe injuries^{*1} and death."



CAUTION

Indicating "when the product is used wrongly, the user may get injured^{*2} or the product may cause the property damage^{*3}"

- * 1 : Severe injuries mean to get blind, wound, burnt (high and low temperature), an electric shock, broken bones, and poison, etc. Consequently, there may be some symptoms and you may go to the hospital and it takes a long time to cure.
- * 2 : Getting injured means you get wound, burnt, an electric shock. However, you do not have to go to the hospital for long cure.
- * 3 : Property damages mean the damage to the accommodations, properties, farmland, and pets, etc.

SYMBOL EXPLANATION



PROHIBITED

⊘ indicates prohibition (must not do). The details of the caution will be instructed by sentences or illustration nearby or in the symbol.



MANDATORY

● indicates mandatory (must do). The details of the mandatory will be instructed by sentences and illustration near or in the symbol.



CAUTION

△ indicates caution. The details of the caution will be instructed by sentences or illustration nearby or in the symbol.

! WARNING



Do not disassemble.

Do not disassemble or repair.

It may cause fire, an electric shock, and injury. For repair, please contact the shop you purchased or Toshiba repair information center.



PROHIBITED

Do not attempt to use the metal articles, e.g. a pin or a wire, into the hole.

It may cause an electric shock and injury.



Do not touch.

Do not directly touch the steam vent with your hand or face.

It may cause burn. Please be more carefully not to allow small children to touch the vent.



Do not use.

Do not use when the cord or the power plug is broken, or when the power plug is loose.

It may cause an electric shock, a short circuit, and ignition. If the power supply cord is broken. It must be replaced by special cord or ass'y available from the manufacture or the service agent.



Do not wet.

Do not immerse the product in water.

It may cause a short circuit and an electric shock. In case the water let into the inner of the cooker, please contact the shop you purchased or Toshiba repair information center.



PROHIBITED

The boiling water may overflow from adjusting the amount of water exceed maximum water level scale for cooking.



PROHIBITED

Warning to avoid spillage on the connector.

(WARNING continued)



Do not allow the children to use, keep it out of reach from them.

It may cause burns, an electric shock, and injury.

PROHIBITED



Do not open the lid when cooking.

It may cause burn.

PROHIBITED



If the power plug or its polar is dusty, wipe it away with the dry cloth.

It may cause fire.

Remove the dust.



Do not break/scratch, bend, pull, twist, the power cord. Do not place it near the heating source. Do not put the heavy objects, pinch, or modify the cord.

The cord may be damaged, and then cause the fire and an electric shock.

Do not do anything improperly with the pot.



Fully fit the plug into the socket.

It may cause an electric shock, a short circuit, and fire.

Fit the plug into the socket fully.



Do not connect the power cord when your hand is wet.

It may cause an electric shock or injury.

Wet hand is prohibited.



CAUTION



When disconnecting, hold the plug and pull it out without touching the cord.

It may cause an electric shock or a short circuit, and then lead to fire.


Hold the plug and pull.



Do not use the cooker near fire or water source.

It may cause an electric shock or leakage, deformation and lead to fire.

PROHIBITED

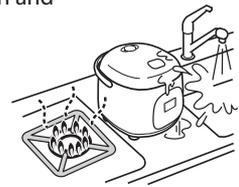

Pull the plug from the AC outlet when not in use.

It may cause injury, burns, an electric shock or electric leakage due to the deterioration of the insulation.

Unplug.



Do not use any other inner pot except the provided one.

It may cause overheat and malfunction.

PROHIBITED



Do not place the unit on the hot, soft, or unstable surface.

It may cause fire.

PROHIBITED




The appliance inlet must be dried before the appliance is used again.

PROHIBITED



Insert the power plug (main body side) into the plug insertion hole on the rear side of the main body.

Insert the power plug into the hole completely.

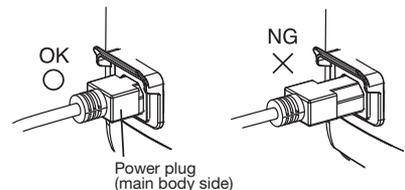

SAFETY PRECAUTION (continued)

CAUTION



Do not touch.

Right after use or while using, do not touch the hot part (e.g. the inner part of the outer lid, a heating plate, a steam vent, or the inner pot)

It may cause burn.



PROHIBITED

Do not use the pot near the wall or the furniture.

The steam or the heat can damage, discolor, and deform the wall and the furniture. If keeping the cooker in the cabinet, do not let the steam condense inside it.



Cool off before handling.

Maintain the inner pot after cooling it off.

If touching the hot part, especially the steam vent, you may get burnt. And if the steam and the hot water may splash over you, you may get injury.



PROHIBITED

Do not touch the hook button.

If the outer lid is accidentally opened, it can cause injury and some burns. Right after cooking, be aware of the steam from the steam vent.



PROHIBITED

Do not move the cooker while cooking rice.

If the outer lid is accidentally opened, you may get burnt or the boiled water may overflow.



PROHIBITED

Do not swing the handle.

If the outer lid is accidentally opened, you may get injury and burn.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environment;
- bed and breakfast type environment.

Do not use the cooker for any purposes other than those indicated in the instruction manual.

Because it may cause food or steam contained inside spill or burst out, resulting in burn wounds/injuries.

<< Examples of inappropriate cooking ways >>

- Putting materials that may block the steam vent, for example, cooking sheets, lye-removing sheets, food wraps, or thin-layer ingredients such as some parts of vegetables, tomatoes, beans, etc.
- Cooking the food that's easy to spill out e.g., jams, beans, etc.
- Putting ingredients in plastic bags and heating in the cooker.

Please

Do not use the cooker in the following places:

- The place which is about 10 cm near the wall, on the paper, clothes, a carpet, or a plastic bag, etc.
- The place exposed to direct sunlight.

Wipe away the drops of water and the foreign matter every time.

If the cooker is used with the foreign matter at the outside of the inner pot, on the temperature sensor, on the heating plate, or on the outer gasket, the cooker may stop operating and cause some accidents.

Do not cover the steam vent with the cloth or place anything near the vent.

It may cause some accidents, or the outer lid and the steam vent may deform and discolor.

Do not use the metal scoop, metal-scrubbing brush, nylon-scrubbing brush, and cleanser with the inner pot.

These may deteriorate the coated fluorocarbon-resin.

Do not use the cooker near the flammable place or an electromagnetic wave adjuster.

The cooker may deform and discolor and the accident may happen.

Do not warm rice over 12 hours.

The rice may discolor and be smelly.

Do not warm the soup, e.g. miso and curry soup. Do not warm anything except rice.

The boiled water may overflow and the inner pot may be worn.

Do not warm the cooker with the scoop inside it.

The smell of the scoop may react with the rice and the rice may discolor.

While cooking rice, fold down the handle backward to the cooker.

The handle may get hotter because of the steam and can cause some burns.



Maintain the cooker every time after unplugging.

Do not expose the power plug or other electrical components to hot steam.


Be especially careful when placing and using the appliance on the kitchen counter, to avoid steam attached to the plug and cause electric shock or fire.

PART NAMES

Inner pot

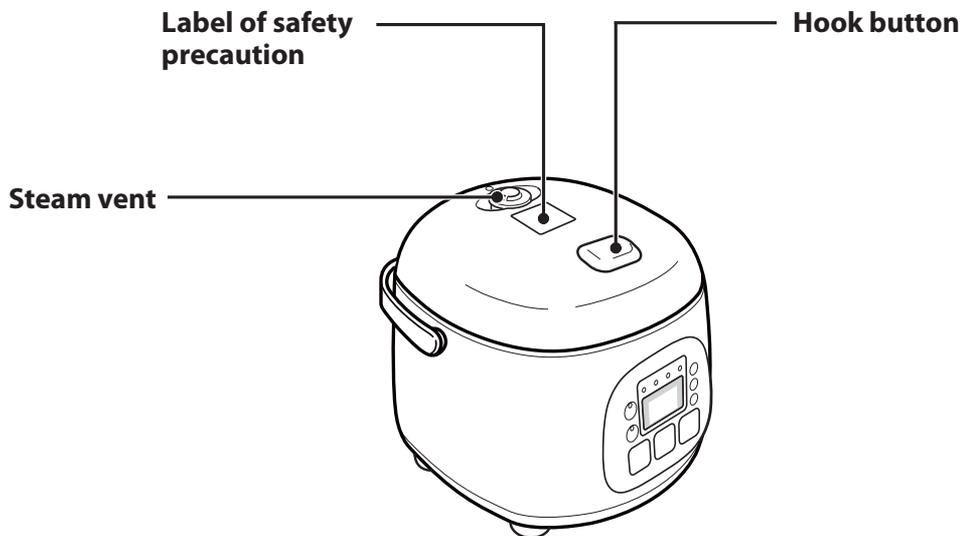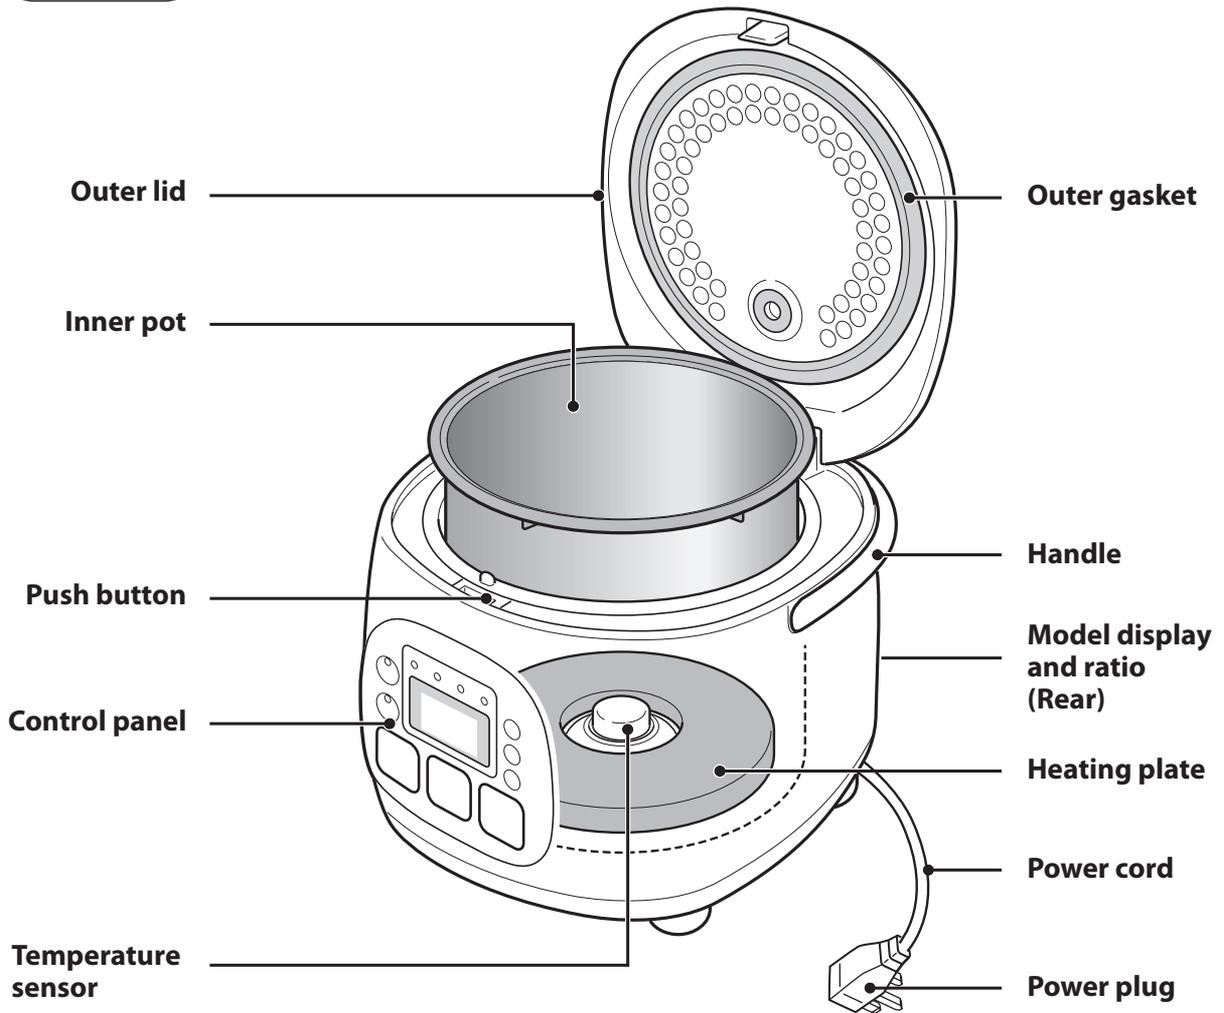

Control panel

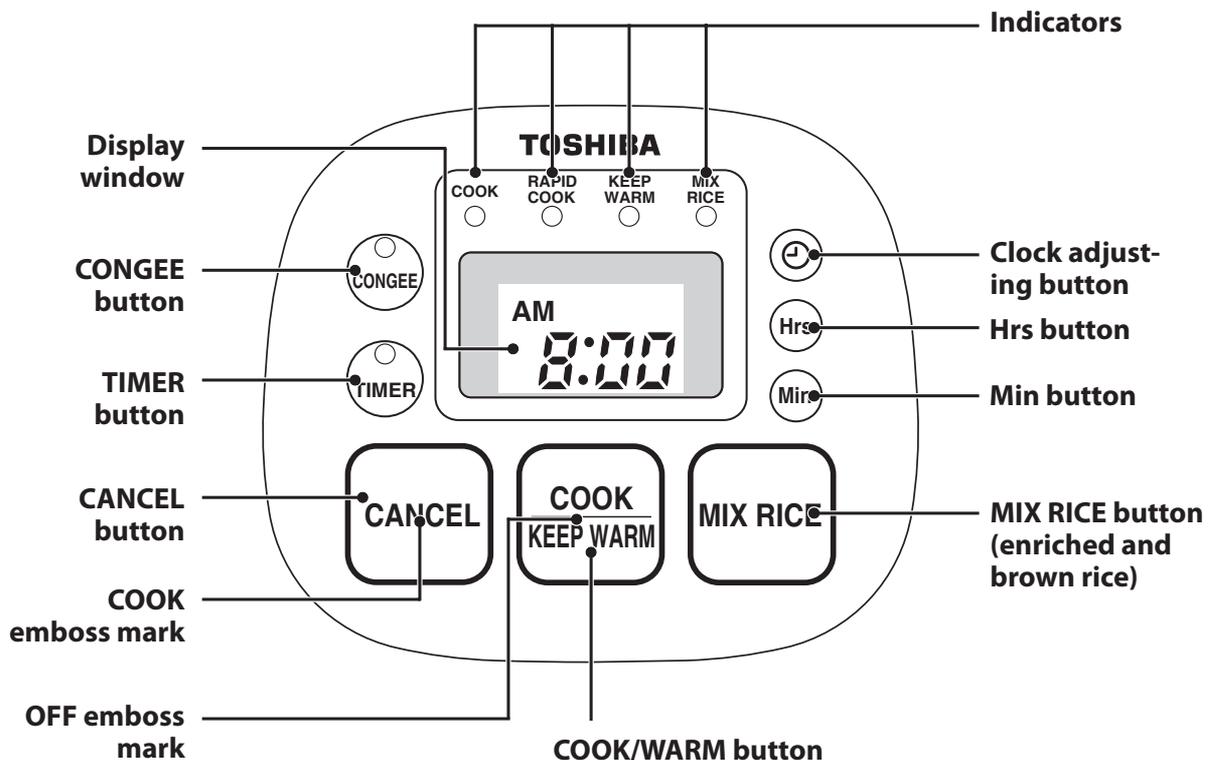

COOK/WARM button

Each time the COOK/WARM button is pressed, the operation will shift to COOK—RAPID COOK respectively.

— KEEP WARM —

Indicators


There are the indicators for CONGEE and TIMER buttons and for every buttons of cooking process: COOK, RAPID COOK, KEEP WARM, and MIX RICE.

On this instruction manual, the ON, FLASH, and OFF indicators are shown on the right.



Steam vent

The steam vent will detach if being pulled. When installing, please fit the marks of the vent and the outer lid first. Then install it.

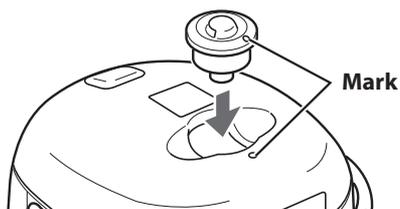

ACCESSORIES



Measuring cup
(Approx. 180 ml per cup)



Scoop

PREPARATION

P
R
E
P
A
R
E

1 Measure the rice with the provided measuring cup.

- A measuring cup measures approx. 180 milligrams of rice (per cup).

(Good sample) (Bad sample)




2 Quickly rinse the rice until the water is reasonably clear.

1. Firstly, pour the water to the level of the rice and stir the rice. And rinse out the water shortly.
2. "Scrub" and "rinse with water" until the water is reasonably clear.

Please

Do not rinse the water with the kitchen utilities like an egg beater.


- ◆ The rice can be rinsed from the inner pot.

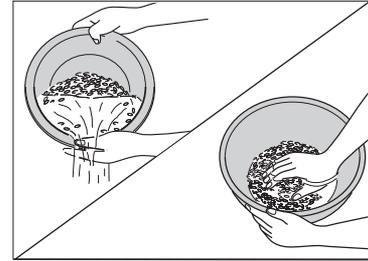

3 As your menu, measure the amount of water with the water level scale.


- With the pot on the flat surface, level the rice and adjust the water level.
- Please accurately measure the water level according to the menu or the amount of a cup. Please measure the water level as you desire or the type of rice.

- ◆ Example for cooking 2 cups of white rice.

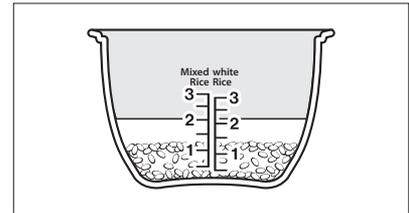


4 Place the inner pot inside the cooker and close the outer lid.

- Wipe away the drops of water and the foreign matter on the outside of the inner pot, on the temperature sensor, on the heating plate, or on the outer gasket.
- Make sure the steam vent is not covered.

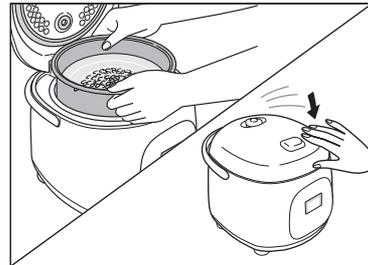

5 Fit the power plug into the socket.

- Please hold the plug while fit or remove the power plug into the socket.

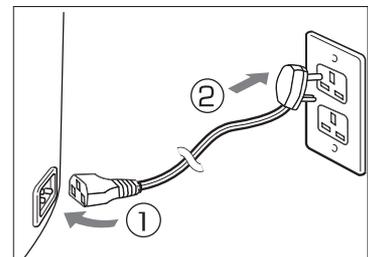

6 Make sure if the time on the display window was set precisely with the present time.

- When adjusting timer...

HOW TO COOK RICE

(white rice, sushi rice, precooked rice)



NOTICE

■ Standards of quantities and cooking time

	Amount of rice	Cooking time	Water level scale
White rice	0.5 ~ 3 cups	45 ~ 52 min	White rice
Sushi rice	1 ~ 3 cups	47 ~ 52 min	Sushi rice
Rapid white rice cook	0.5 ~ 3 cups	30 ~ 38 min	White rice

■ Regarding RAPID COOK

- The rapid cook is the way to reduce cooking time. The boiled rice may be slightly hard or little of water may be left on top of the rice.
- The rapid cook can be used for cooking under 2 cups of rice.


AR
RAN
GEM
ENT

Press the COOK button once.

※ For RAPID COOK, press the COOK/KEEP WARM button twice.

Cooking starts.

▼ The indicator lights up.

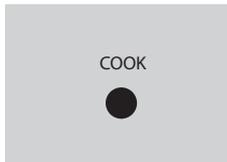


▼ Current time



※ For RAPID COOK, its indicator will light up.

▼ The indicator flashes.

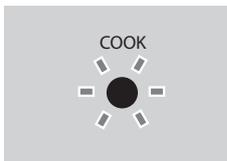

▼ The left of cooking time (min)



※ For RAPID COOK, its indicator will flash.

※ For RAPID COOK, the time will be displayed 8 min in advance.

During steaming rice...

AT
THE
END
OF
COOK
ING

When the cooking finishes...

The "beep" sound is heard 5 times.

▼ The indicator lights up.



▼ The KEEP WARM time (h : display in hour)



The function will automatically switch to KEEP WARM.

- Fluff the rice shortly.

After use...

- Press the CANCEL button and unplug.

HOW TO COOK

(enriched and brown rice)



NOTICE

Standards of quantities and the cooking time

	Amount of rice	Cooking time	Water level scale
Enriched rice	0.5 ~ 3 cups	53 ~ 59 min	White rice
Enriched sushi rice	1 ~ 3 cups	54 ~ 58 min	Sushi rice
Brown rice	0.5 ~ 2 cups	50 ~ 58 min	White rice

Regarding the enriched rice

- When pouring the water, stir the rice from the bottom 2 - 3 rounds and sprinkle with water. If the rice is not stirred, it may be burnt.
- The water may be unclear according to the quality of the flour or the air bubbles. If concerned about such things, please rinse the rice softly.

AR
RAN
GEM
ENT

Press the MIX RICE button.

Cooking starts.

- ▼ The indicator lights up.
- ▼ Current time



During steaming rice...

- ▼ The indicator flashes.



- ▼ The left of cooking time (min)

AT
THE
END
OF
COOK
ING

When the cooking finishes...

The "beep" sound is heard 5 times.

- ▼ The indicator lights up.
- ▼ The KEEP WARM time (h : display in hour)

The function will automatically switch to KEEP WARM.



- Fluff the rice shortly.

After use...

- Press the CANCEL button and unplug.

HOW TO COOK RICE (CONGEE)



※ The steam of the rice may be sent out from the steam vent due to the quality of the rice, the rice temperature, and rice rinsing, etc.

NOTICE

Standards of quantities and cooking time

	Amount of rice	Cooking time	Water level scale
Congee with Maxwater	0.5 ~ 1 cup	59 ~ 65 min	Congee with Max. water
Congee with half of max. water	Half a cup	64 min	Congee with half of max. water

How to adjust the water level indicator

- In case of cooking the congee with max. water, adjust the water level to "max. water" and adjust to "half of max. water" for cooking the congee with half of the water level scale.
(The amount of water for cooking congee with half of max. water is more than that for cooking congee with max. water.)

Please

Do not warm the congee so long that the congee may be sticky. Season after the congee is cooked. Do not season before the congee is cooked because the congee will be not well done.

AR
RAN
GEM
ENT

Press the CONGEE button.

Cooking starts.

▼ The indicator lights up.



▼ Current time



During steaming rice...

▼ The indicator flashes.



▼ The left of cooking time (min)



AT
THE
END
OF
COOK
ING

When the cooking finishes...

The "beep" sound is heard 5 times.

▼ The indicator lights up.



▼ The KEEP WARM time (h: display in hour)




The function will automatically switch to KEEP WARM.

- After that, stir the rice softly.

After use...

- Press the CANCEL button and unplug the power plug.

HOW TO PRESET COOK TIMER

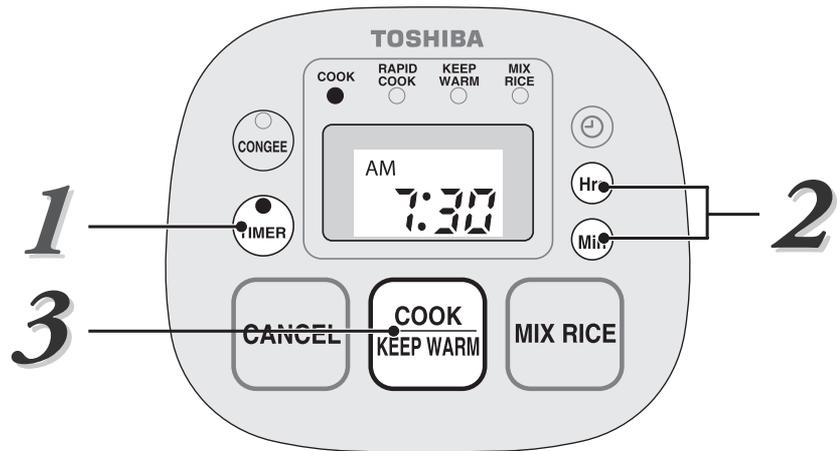

Example : To set the timer for preset time to finish at 7.30 a.m.

AR
RAN
GEM
ENT

1 Press the **TIMER** button.

▼ The indicator lights up.

▼ The previous preset time



2 Set the hour with the **Hrs** button and set the minute with the **Min** button.

Set the time to 7.30 p.m.

※ The time can be shortened as the previous time.

▼ The indicator lights up.


▼ The previous preset time



3 Press the **COOK** button.

▼ The indicator lights up.

▼ The preset time

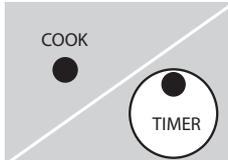

Setting the time finishes.

AT THE
END
OF
COOK
ING

When reaching the preset time...

The "beep" sound is heard 5 times.

▼ The indicator lights up.

▼ The KEEP WARM time (h: display in hour)



The function will automatically switch to KEEP WARM.

• Fluff the rice shortly.

Example 2: When setting the time for “enriched rice”

Press the MIX RICE button instead of the button in an example 1.

→ The TIMER and the MIX RICE indicators will light up.

Example 3: When setting the time for “CONGEE”

Press the CONGEE button instead of the button in an example 1.

→ The TIMER and the CONGEE indicators will light up.

NOTICE

- Press the CANCEL button to cancel the set time or when there is malfunction.

■ Regarding the adjustable time and menu

- When setting the time, set the time of boiled rice as the following table. When the present time is count down, the cooking will start.

Adjustable menu	Adjustable time
White rice	55 min ~ 14 hrs
Enriched rice	60 min ~ 14 hrs
CONGEE	1.05 - 14 hrs

■ Regarding the buttons and the display


- Each press of the button changes the time in ten-minute step.
- If holding down the Hrs and the Min buttons, the time will go forward faster and if the TIMER button is pressed continually, the display of A.M. and P.M. will be switched to each other.
- When the cooking starts, the TIMER indicator will light off and only the indicators of the selected program light up. When the function switches to steaming, the indicator will flash instead. Without setting the cooking time, the time of flashing may be longer than the cooking time, sometimes.
- The display window will display the preset timer until the cooking is done. Though in the steaming mode, the left time will not display.
- In case it takes longer for the rice to be boiled, the left time will display.

■ Regarding the notice by the beep signal

- If the COOK button has not yet pressed, the “♪ beep beep beep” sound will be heard. Press the COOK button to finish the preset timer
- While the Hrs button is on: At 0.00 a.m. the “beep” sound is heard. And at 0.00 p.m. the “beep beep” sound is heard. While the Min button is on: The “beep” sound is heard at 00 min and the “beep” sound is heard every 10 min.
- During the time setting, the sound may not be heard because the time is swiftly shifted. Please press for check once a round.
- While setting the clock, the window will display the current time and will notice with sound the range of time until the rice cooking finishes. In case that the time of cooking is lower than 1 hrs, the notice sound will be heard at 1 hour.


Please see the following example as the notice signal from the cooker.

(Example) Supposing that the left of the cooking time is 11.12 hrs, the sound will be heard at 12 hrs.

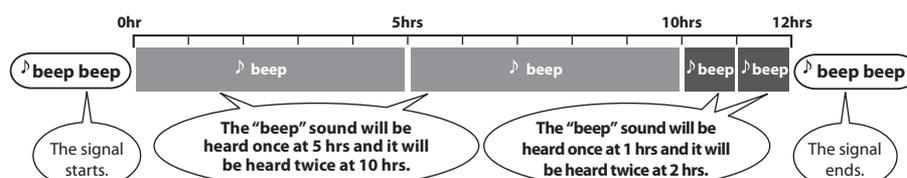

HOW TO WARM RICE

**Do not warm any other things except white rice.
Do not warm the rice more than 12 hours.**

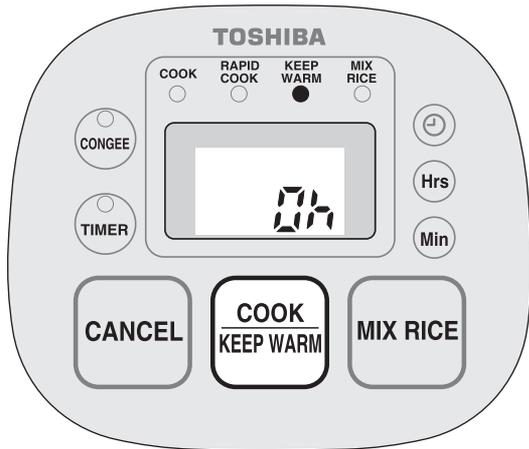

NOTICE

- The drops of water may be fall down from the pot and ather with the lid opened and the room temperature. Please wipe away the drops and if concerned about the drops on the outside of the pot, wipe the out side too.
- When the button is pressed, the current time will display.
- If the indicator of the KEEP WARM time flashes, the warming time is more than 30 hrs. This is greater than the standard of warming time. Please stop to warm rice.

▼ KEEP WARM with longer time



WAR
MING

If cooking rice...
The rice will be automatically warmed.

- ▼ The indicator lights up.
- ▼ The passing hour for warming (h: display in hour)



■ If wanting to stop warming.....

Press the CANCEL button.

- ▼ The indicator lights off.
- ▼ Current time



■ In case of continuing to warm after stopping KEEP WARM mode.....


Press the COOK button three times.

- ▼ The indicator lights up.
- ▼ The KEEP WARM time (h: display in hour)



The rice is warmed again.

HOW TO ADJUST CLOCK

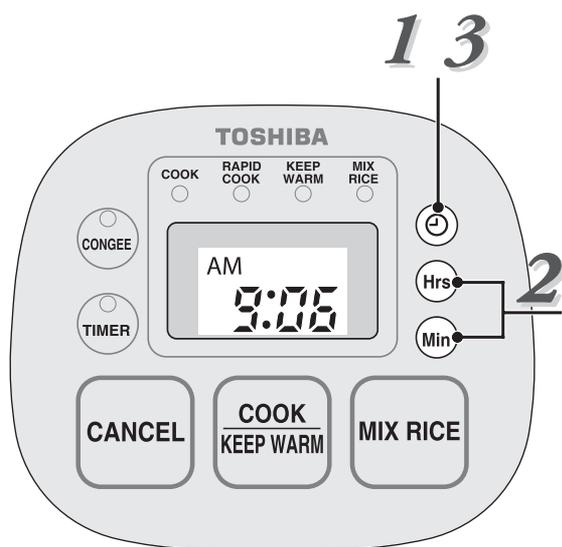

NOTICE

- The clock cannot be adjusted during COOK, WARM, and TIMER mode.
- The clock cannot be adjusted if the power plug is not connected.
- While the digit is flashing, the clock will stop operating. Please press the clock adjusting button to adjust the time.
- If the Hrs and Min buttons are held down, the digit will shift faster.
- The display of A.M. and P.M. will change if the Hrs button is pressed repeatedly.
- While the Hrs button is on: At 0.00 a.m. the “beep” sound is heard. And at 0.00 p.m. the “beep beep” sound is heard.
- While the Min button is on: The “beep” sound is heard at 00 min and the “beep” sound is heard every 10 min.
- The 12.00 a.m. will be displayed as 0.00 p.m.

Example : When adjusting the time to 8.30 p.m.

Ad
just
the
clock

1 Press the clock adjusting button.

▼ The digit flashes.



2 Adjust the hour with the Hrs button and adjust the minute with the Min button.
Set the time to 8.30 p.m.

▼ The digit flashes.



3 Press the clock adjusting button.
When the clock adjusting finishes, the clock will start.

▼ The digit unflashes.



Lithium-ion battery installed inside the cooker lasts 4 - 5 years at the room temperature with the power plug connected. With the lithium-ion battery, the current time can display and the set time is in memory though the plug is disconnected. When the battery expires, the set time and the memory will disappear. However, the rice can be cooked as usual.

MAINTENANCE



CAUTION



Handling
after
cooling off.

Maintain the inner pot after cooling it off.
If touching the hot part, especially the steam vent, you may get burnt. And if the steam and the hot water splash over you, you may get injury.



Do not touch.

Right after use or while using, do not touch the hot part (e.g. the inner part of the outer lid, a heating plate, a steam vent, or the inner pot)
You may get burnt.

Inner pot and outer lid

Wipe away the dirt with the damp cloth.

- Do not wash the pot thoroughly.
- Do not wet the control panel and the outer lid.

Do not forcedly pull because the gasket cannot be removed.


Wipe away if there are some drops of water. If the drops of water are not wiped away, they will remain on the outside of the outer lid.

If the gap is dirty or there are some grains of rice inside it, remove such dirt with a cotton bud.

In case such grains become stuck, after rub it with the nylon-scrubbing brush, wipe it with a damp cloth.

Temperature sensor

Make sure there are not any foreign matter, e.g. rice scraps, stuck on the sensor. And clean the sensor with a damp cloth.

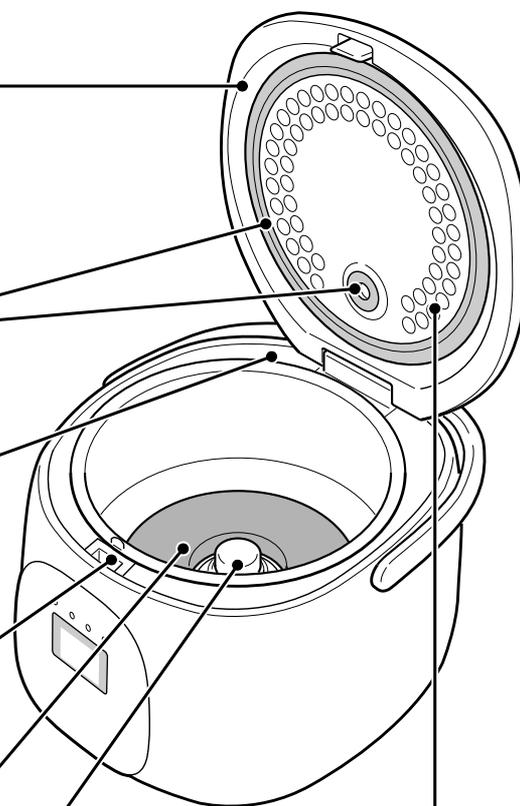

Outside of the outer lid

Clean the lid with the damp cloth every time after use because the gluey rice is easily stick.


Steam vent

After cooking, detach the steam vent out of the outer lid and clean the vent with water.


- After use, make sure there is not any water left inside the steam vent.
- Every time after maintaining the steam vent, reassemble it with the outer lid.

How to detach and reassemble the cap of the steam vent

To detach the steam vent, hold the notch and pull it upwards.

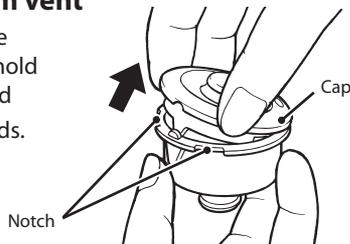

When reassembling, fit the tactile mark and the gap together. Then splice them until the "click" sound is heard.

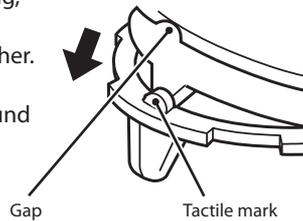

Scoop

Clean the scoop with a sponge and mild dish detergent.



Inner pot

Clean the inner pot with a sponge and mild dish detergent.

Please follow below important instructions.

Otherwise, the coating of inner pot may be damaged.

- Do not put hard objects such as spoons or dining utilities, etc. into the pot.
- Do not clean the pot with cleanser or a scrubbing brush.
- Do not warm any other things except white rice (e.g. steamed rice).
- If the rice was seasoned, do not warm it. Clean the inner pot immediately.
- Do not fill the acetic acid into the inner pot.
- Do not hit or scrub the pot.
- Do not rinse the rice with the kitchen utilities like an eggbeater.
- Do not use the hard utilities, e.g. a metal spoon or scoop, with the pot.
- Rinse the rice after removing the foreign matter mixed in the rice, e.g. pebbles.



Never do this.

If the shape of the pot deforms or the coated fluorocarbon-resin is scrubbed, peels away, and swollen, please buy the new one from the shop you purchased this appliance.

The coated resin on the surface may fade out when the pot is used for a long time. However, this does not deteriorate your health. Please use it comfortably.

SPECIFICATIONS

Model	Power Supply	Power Consumption (W)	Dimension (cm)			Weight (Kg)
			Width	Depth	Height	
RC-5MMI	220-240V ~ 50-60Hz	350	22.8	25.0	22.1	2.4
RC-5MM RC-5MME	220V ~ 50Hz	360				