

用戶手冊

電磁爐

IC-20R1THK

TOSHIBA



NOTICE: THE CERAMIC PLATE IS HOT AFTER COOKING.
PLEASE DON'T TOUCH WITH YOUR HANDS.
注意：面板在烹飪後很燙，請不要用手觸摸，以免燙傷。

TOSHIBA



HOT POT
火鍋



DEEP FRY
煎炸



FRY
炒菜



目錄

一、安全須知	2-5
二、產品介紹	5
三、操作說明	6-7
四、使用說明	7-8
五、烹飪模式說明	9
六、正確的鍋具	9
七、清潔和維護	10
八、異常自診斷	11
九、維修和服務保證	12

感謝您購買這款電磁爐。

使用前請仔細閱讀本使用說明書並妥善保存以備將來使用。

圖片僅供參考，請以實物為準。

一、安全說明

警告

- 本電器可供身體、感官或精神能力有缺陷或缺乏經驗和知識的人員（包括兒童）使用，前提上有負責其安全的人員的監督或指導。
- 本電器可供8歲及以上兒童以及身體、感官或精神能力有缺陷或缺乏經驗和知識的人員使用，前提是他們接受過有關安全使用本電器的監督或指導，並瞭解涉及的危險。兒童不得玩耍本電器。兒童不得進行清潔和維護，除非已滿8歲並受到監督。
- 將電器及其電源線放置在8歲以下兒童接觸不到的地方。
- 應監督兒童，以避免其玩耍本電器。
- 請勿拆卸、修理或改裝，否則可能會導致火災、觸電或受傷。如需維修，請聯繫購買產品的商店或諮詢中心。
- 請勿將異物放入進/排氣口。特別是插針、電線等金屬可能會導致觸電，甚至造成傷害。
- 請勿浸泡或濺水。不要弄濕，否則可能會導致短路或觸電。
- 請勿撞擊頂板（例如掉落物品）。如果頂板破裂或破裂，直接使用可能會導致觸電、過熱或異常操作。

電源線/插座相關

- 如果電源線損壞，必須由製造商、其維修代理或類似合格人員進行更換，以避免發生危險。
- 在清潔、維護或移動之前以及不使用時，請關閉電器並拔下電源插頭。
- 確保將電源插頭穩固地插入底座。
- 定期清除插頭上的灰塵。如果灰塵積聚，可能會因絕緣不良而引起火災。
- 在接觸插頭之前，請確保雙手乾燥。
- 請勿損壞電源線、請勿用力彎曲、拉扯、纏繞電源線。請勿捆綁通電，遠離高溫部件，請勿在其上放置重物。請勿擠壓或加工。
- 加熱液體前先混合。
- 炒或烤時請遵守以下規定。
 - 由於使用的油少，油溫急劇升高，可能會起火。
 - 烹飪時請勿離開。
 - 將熱量調節至較低水準，避免過熱。

注意事項

- 本電器以及所使用的烹飪器具和電器表面可能會變得非常熱，請勿觸摸陶瓷爐的熱表面。
- 本電器僅供家庭使用。請勿在室外使用。
- 握住電源插頭並將其從插座中拔出。否則可能會因觸電或短路而引起火災。
- 處理插頭和電線時要小心（短路和漏電會導致火災、觸電和燒傷）。
- 請勿用於烹飪以外的用途（過熱/異常操作會導致起火）。
- 烹調油炸食品時請小心油濺。油可能會飛濺並導致灼傷。尤其要小心含水量較多的食物。
- 本電器不適合通過外部計時器或單獨的遠端控制系統進行操作。

注意事項

-  注意燙傷，使用過程中表面容易變熱。
- 用電磁爐煎炸食物時，應注意以下事項：如果油量過少，可能會因油溫過熱而引起火災。使用電磁爐煎炸食物時請勿離開。使用“煎炸”功能表煎炸食物。當鍋底變形時，請勿使用。必須使用平底鍋煎炸食物。煎炸時油量不得少於800克（0.9升）。煎炸食物時請將鍋放在電磁爐的中間。
- 如果您正使用心臟起搏器，請在醫生指導下使用本電磁爐。本產品的運行會影響心臟起搏器的運行。
- 請勿在不穩定的地方、熱敏地毯、易燃材料附近或濕滑的地方使用。如果主體傾斜，鍋會滑落，內容物可能會溢出，從而導致燒傷或受傷。
- 保持臉遠離，否則可能會導致燒傷。
- 請勿烘烤或過熱，否則可能會導致燒傷、熟食著火或鍋具損壞。
- 一旦出現大量油煙，請立即拔掉電源插頭，因為油很熱，繼續加熱可能會導致著火。
- 請選擇適合烹飪的程式。請勿在加熱過程中烹飪油炸食品。油溫會升得太高並可能引起火災。
- 請勿使用其他器具（燃氣灶等）預熱的熱油。請勿使用熱油預熱。溫度控制裝置可能無法正常工作並可能異常過熱，導致起火。
- 請勿在鍋底下放置任何物品。請勿在頂板或鍋底有水或異物時進行烹飪。包裹物、紙、布、食品等可能會被鍋的熱量燒焦，並可能導致食物燒焦。
- 請勿堵塞進氣口和排氣口。如果在紙或桌布等易被吸入的物體上使用，並堵塞排氣口和進氣口，主機內部的溫度會升高，可能會引起火災。

注意事項

- 請勿將IH電磁爐放置在靠近漏水處、火爐、燃氣灶等熱源的地方，否則可能會引起觸電、漏電、爐體變形、火災等。

其他事項

- 本電器旨在用於家庭和類似應用，例如：
 - 商店、辦公室和其他工作環境中的員工廚房區域；
 - 農舍；
 - 酒店、汽車旅館和其他住宅類型環境中的客戶；
 - 食宿型環境；
- 請勿在電磁爐上使用。另外，請勿在頂板上使用IH罐式電鍋等電磁感應加熱鍋。
- 由於會發射磁力線，因此請遠離抗磁性弱的物體。銀行卡、IC卡等的存儲資訊可能會丟失。另外，電視、收音機、助聽器等都可能產生噪音干擾。
- 不要放置刀、叉、勺子、蓋子等金屬製品於產品上，因為這些物件會變燙。


二、產品介紹

電磁爐採用電磁加熱方式，滿足各種烹飪需求，熱效率高，安全可靠，易於清潔。

性能參數

型號	應用電壓/頻率	額定功率	重量 (千克)	尺寸 (毫米)
IC-20R1THK	220-240V~ 50/60Hz	2000W	2.4 kg	350x280x53

性能參數

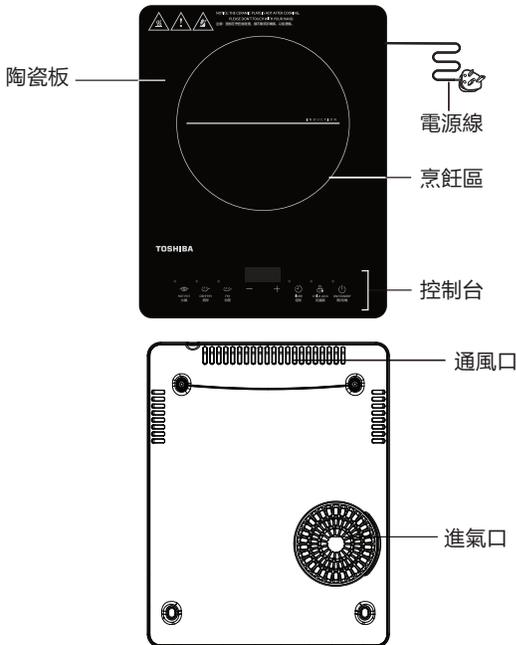

三、操作說明

功能

- 開啟電磁爐後，按相應的功能按鈕選擇所需的烹飪模式。

功能烹飪模式說明

注意：每種烹飪模式的功率都有限制，符合烹飪要求，如果需要更高的瓦數，可以使用功率模式。

功能	圖示	默認烹飪時間	默認功率	烹飪時間調整範圍	功率調整範圍	用途
火鍋		2小時	2000W	1分鐘-3小時	120-2000W	此功能用於火鍋加熱等，溫度可調節。
煎炸		2小時	1800W	1分鐘-3小時	120-2000W	此模式可用於油煎。
炒菜		2小時	1200W	1分鐘-3小時	120-2000W	此模式可用於油炸。

準備

- 使用前，請先檢查電源插頭與電源插座是否連接良好。
- 將鍋放在爐盤上之前，請清除鍋和爐盤外表面的水漬、油斑或任何其他附著的污垢。
- 請將待加熱的鍋放在電磁爐的中央部位。請勿將空鍋放在爐盤上加熱。

使用說明

- 使用前，請先檢查電源插頭與電源插座是否連接良好。
- 將鍋放在爐盤上之前，請清除鍋和爐盤外表面的水漬、油斑或任何其他附著的污垢。
- 請將待加熱的鍋放在電磁爐的中央部位。請勿將空鍋放在爐盤上加熱。

四、使用說明

連接電源並開機

- 按“開/待機”鍵後，按功能鍵選擇所需的模式。電磁爐進入工作模式。
- 按“開/待機”鍵後，如果10秒鐘內未按任何功能鍵，電磁爐將自動關閉。
- 按功能鍵後，如果爐盤上沒有合適的鍋具，電磁爐不加熱，並發出警報，提示無鍋。一分鐘後，電磁爐將自動關閉。



功能選擇

- 開啟產品後，按“功能”進入所需的烹飪模式。
- 有關各烹飪模式對應的加熱過程，請參閱“烹飪模式說明”。

功率調節

- 選擇模式後，可以按“+”或“-”調節功率。
- 對於某些模式，在加熱過程中，電磁爐可以根據烹飪要求自動調節功率。
- 對於某些模式，功率會根據烹飪要求受到限制。



計時器調整

- 如果未啟動計時器功能，電磁爐將按照默認時間加熱食材。
- 如果需要計時器，請先按“計時器”鍵。當顯示幕上的數字閃爍時，按“+”或“-”鍵調整持續時間。計時器最長可設置3小時。
- 調整完成後，顯示幕上的數字將閃爍數秒後顯示。電磁爐開始倒計時。
- 倒計時結束後，電磁爐自動停止加熱並關閉電源。



鎖定

- 兒童鎖"三秒即可開/關鎖。鎖定後，只有"兒童鎖和'開/待機'按鈕可供使用。



關閉

- 當工作時間結束時，電磁爐自動關閉。
- 如果需要提前關閉，請按“開/待機”鍵關閉電磁爐。



五、烹飪模式說明

使用者可以根據烹飪目的選擇不同的烹飪模式。為方便使用，我們提供以下說明：

- “火鍋”烹飪模式適合火鍋、燒水等加熱需求。在加熱過程中，時間和功率可以隨時調整。如果鍋內水乾了或溫度異常高，電磁爐會自動關閉或啟動保護功能。
- 煎和炸模式適合高溫烹飪。在加熱過程中，時間和功率可以隨時調整。當食材溫度達到所選模式提供的溫度水準時（各種模式的最高溫度不同），電磁爐將切換到間隔加熱或停止加熱。溫度冷卻後，電磁爐重新開始加熱。



火鍋

 


煎炸



炒菜

六、正確的鍋具

a  不銹鋼鍋	b  鐵蒸鍋
c  鐵水壺	e  鐵蒸鍋
d  鐵煎鍋	

- 煎鍋的最大負載為4公斤。使用時，請勿讓食材重量超過此重量，以免發生危險。
 - 若使用其他鍋具，請遵守以下條件：
 - 1、鍋材質要求：含鐵材料。
 - 2、鍋形要求：底部平整，直徑在15至18釐米之間。
- 注意：為了獲得最佳性能，請使用提供的標準鍋具。**

七、清潔和維護

- 清潔前，請先關閉電器，然後從電源插座上拔下電源插頭。待電磁爐爐板不熱後，再開始清潔。
- 電磁爐長期使用後，進風口/出風口會積聚灰塵或其他污垢，請用柔軟的乾布擦拭。進風口和出風口的灰塵可以用軟毛刷或微型吸塵器清理。
- 對於爐盤上的油斑，請使用柔軟的濕布沾少許牙膏或中性清潔劑擦拭。然後用柔軟的濕布擦拭，直至不留任何污漬。
- 長時間不使用時，請將電源插頭從電源插座上拔下，並保護電磁爐免受灰塵或蟲子的侵害。

注意：請勿用水沖洗。

八、異常自診斷

異常現象		關鍵檢查點及故障排除
插入電源線並按“開/關”或“開/待機”鍵後，指示燈和顯示幕不亮。		<ul style="list-style-type: none"> • 電源插頭是否正確連接？ • 開關、電源插座、保險絲或電源線是否損壞？
“開/關”指示燈亮，顯示幕工作正常，但不加熱。		<ul style="list-style-type: none"> • 鍋的材質是否合適？ • 電器是否處於“預設”工作狀態？ • 對於其他原因，請將電器送至維修、保養地點進行維修。
加熱突然停止。		<ul style="list-style-type: none"> • 煎炸食物時油溫是否過高？ • 周圍環境溫度是否很高？電磁爐進風口或出風口是否被堵塞？ • 電磁爐默認加熱時間是否已過？ • 電磁爐安全保護啟動，等待幾分鐘後接通電源即可使用。
保護代碼出現	 電磁爐溫度過高保護	<ul style="list-style-type: none"> • 電磁爐內部溫度過高。當溫度降低後，按“開/待機”鍵，加熱即可正常啟動。
	 爐盤溫度過高保護 	<ul style="list-style-type: none"> • 爐盤溫度過高。當溫度降低後，按“開/待機”鍵，加熱即可正常啟動。
	       電磁爐內部感測器保護	<ul style="list-style-type: none"> • 使用電磁爐時，如果環境溫度過低或使用電壓不正常，自動保護功能將會啟動。再次開機或簡單預熱後切換，電器即可自動恢復正常工作狀態。 • 撥打服務電話或專業維修保養網站進行查詢。

- 以上描述用於診斷和檢查常見問題。若仍無法解決問題，請將產品送至維修點或撥打服務電話查詢。
- 如果產品沒有顯示功能，開關/電源指示燈將閃爍以表示潛在問題。請注意檢查重點，以解決問題。
- 請勿自行拆卸或修理產品，以免造成產品損壞或人身傷害。

#DetailsMatter

USER MANUAL

INDUCTION COOKER
IC-20R1THK

TOSHIBA



NOTICE: THE CERAMIC PLATE IS HOT AFTER COOKING.
PLEASE DON'T TOUCH WITH YOUR HANDS.
注意：面板在烹飪後很燙，請不要用手觸摸，以免受傷。

TOSHIBA



HOT POT
火鍋



DEEP FRY
煎炸



FRY
炒菜



Contents

I.SAFETY INSTRUCTIONS	2-5
II.PRODUCT INTRODUCTION	5
III.OPERATION INSTRUCTIONS	6-7
IV. INSTRUCTIONS FOR USE	7-8
V. FUNCTIONAL COOKING MODE INSTRUCTIONS	9
VI. PROPER POTS	9
VII. CLEANING AND MAINTENANCE	10
VIII. SELF-DIAGNOSIS FOR ABNORMALITIES	11
IX. GUARANTEE FOR REPAIRS AND SERVICE	12

Thank you for purchasing this induction cooker.
Please thoroughly read through this instruction manual
before use and store it carefully for future use.
The pictures are only for reference, please keep the
real product as a standard.

I.SAFETY INSTRUCTIONS

Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not disassemble, repair or modify It may cause fire, electric shock or injury. For repairs, contact the store where you purchased the product or the consultation center.
- Do not put foreign matter in the air intake / exhaust port In particular, metals such as pins and wires may cause electric shock or even move and cause injury.
- Do not soak or splash water. Do not get wet. It may cause a short circuit or electric shock
- Do not give a shock (such as dropping something) to the top plate If it is cracked or cracked, using it as it is may cause electric shock, overheating, or abnormal operation.

Power Cord/Outlet Related

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Please turn off and unplug the appliance before cleaning maintenance or relocation and whenever it is not in use.
- Make sure to insert the power plug steady to the base.
- Remove dust from the plug on a regular period. If dust accumulates, it may cause a fire due to poor insulation.
- Make sure your hands are dry before touching the plug.
- Do not damage the cord, do not bend it forcibly, do not pull it, do not twist it. Do not bundle and energize, keep away from high temperature parts, do not put heavy objects on it. Do not pinch, do not process.
- When heating the liquid, mix it before heating
- Observe the following when stir-frying or grilling.
 - Since a small amount of oil is used, the oil temperature rises sharply and may ignite.
 - Don't leave when cooking.
 - Adjust the heat to a low level and do not overheat.

Cautions

- This appliance as well as the cooking utensils used and the surface of the appliance can become very hot, do not touch the hot surface of the ceramic hob.
- This appliance is for household use only. Do not use outdoors.
- Hold the power plug and pull it out from the outlet. It may cause fire due to electric shock or short circuit.
- Be careful when handling plugs and cords (Causes of fire, electric shock, and burns due to short circuit and electric leakage)
- Do not use for anything other than cooking (Cause of ignition due to overheating / abnormal operation)
- Be careful of splashing oil while cooking fried food. Oil may splatter and cause burns. Be careful especially with foods that with much more water.
- That appliances are not intended to be operated by means of an external timer or separate remote-control system.

Cautions



- Caution, hot surface, The surfaces are liable to get hot during use.
- When frying food with induction cooker, the following precautions shall be observed: If there is too little oil, there will be a risk of fire caused by overheating of oil temperature. Please do not leave away when frying food in an induction cooker. Frying food with the "frying" menu. When the bottom of the pot is deformed, please do not use it. You must use a pan for frying food. Please do not fry with oil less than 800g (0.9l). Please put the pot in the middle of the induction cooker when frying food.
- If you are using a cardiac pacemaker, please use this induction cooker under the guidance of a doctor. The operation of this product will affect the operation of cardiac acemaker.
- Do not use on unstable places, heat-sensitive rugs, near flammable materials, or in slippery places. If the main body is tilted, the pan will slip off and the contents may spill, resulting in burns or injury.
- Keep your face away. It may cause burns.
- Do not bake or overheat. It may cause burns, ignition of cooked food, or damage to the pan.
- Unplug the power plug as soon as there is a lot of oily smoke, because The oil is hot. Continued heating may cause ignition.
- Please choose the course that suits your cooking Do not cook fried food on a heating course. The oil temperature will rise too high and may cause a fire.
- Do not use hot oil preheated with other appliances (gas stove, etc.) Do not preheat with hot oil. The temperature control device may not work properly and may overheat abnormally, causing ignition.
- Nothing is laid under the pan. Do not cook with water or foreign matter on the top plate or the bottom of the pan. Resins such as wraps, paper, cloth, foodstuffs, etc. can be burnt by the heat of the pan, It cannot be done and may cause the food to burn.
- Do not block the intake and exhaust ports. If you use it on something that can be easily sucked in, such as paper or table cloth, and block the exhaust and intake ports, the temperature inside the main unit will rise, which may cause a fire.

Cautions

- Do not put the IH cooker near water leakage, stove, gas stove and other heat sources. Otherwise, electric shock, electric leakage, furnace deformation and fire may be caused.

Other matters

- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - In bed and breakfast type environments;
- Do not use on IH cooking heaters. Also, do not use an electromagnetic induction heating cooker such as an IH jar rice cooker on the top plate.
- Since the lines of magnetic force are emitted, keep away from objects that are weak against magnetism. The memory of cash cards, IC cards, etc. may be lost. In addition, TV, radio, hearing aids, etc. may be interference with noisy.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.


II.PRODUCT INTRODUCTION

The induction cooker is able to meet various kinds of cooking demands by electromagnetic heating, high thermal efficiency, is safe and reliable, easy to clean.

Performance Parameters

Model	Applied voltage/ frequency	Rated power	Weight(kg)	Dimension (mm)
IC-20R1THK	220-240V~ 50/60Hz	2000W	2.4 kg	350x280x53

Performance Parameters

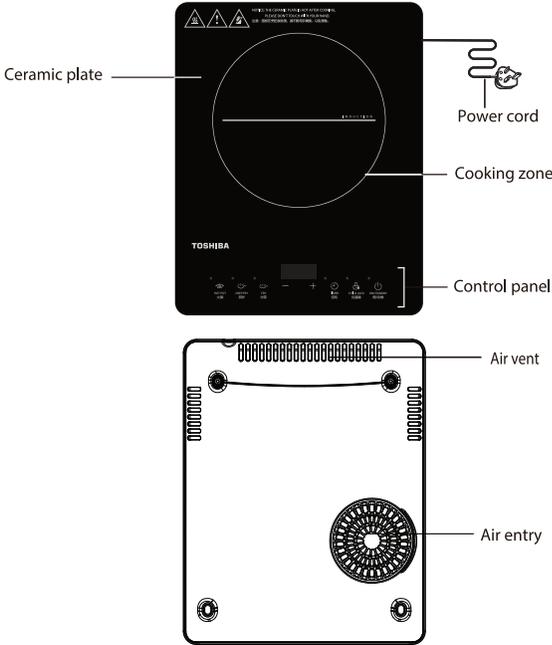

III. OPERATION INSTRUCTIONS

Function

- After switching on the induction cooker, press the corresponding function button to select the desired cooking mode.

Function cooking mode instructions

Note: Power in each cooking mode is restricted complying with the cooking requirement and you can use power mode if higher wattage is required.

Function	Icon	Default cooking time	Default wattage	Adjustable cooking time range	Adjustable wattage	Usage
Hot pot		2 hours	2000W	1min-3hours	120-2000W	This function is used for hot hot boiling, etc., and temperature can be adjusted.
Deep fry		2 hours	1800W	1min-3hours	120-2000W	This mode can be used for fry.
Fry		2 hours	1200W	1min-3hours	120-2000W	This mode can be used for deep fry.

Preparation

- Before using, please first check if the power plug connects well with the power outlet.
- Before placing the pot on the cooker plate, please clean up water stains, oil spots or any other adherent dirt from the outside surface of the pot and cooker plate.
- Please put the pot to be heated on the central part of the induction cooker. Do not put an empty pot on the cooker plate to be heated.

Instructions for use

- Before using, please first check if the power plug connects well with the power outlet.
- Before placing the pot on the cooker plate, please clean up water stains, oil spots or any other adherent dirt from the outside surface of the pot and cooker plate.
- Please put the pot to be heated on the central part of the induction cooker. Do not put an empty pot on the cooker plate to be heated.

IV. INSTRUCTIONS FOR USE

Connecting the power and switching on

- After press the "ON/STANDBY" key, press the function keys to select the required mode. The induction cooker enters working mode.
- After press the "ON/STANDBY" key, if no function key is pressed for ten seconds , the induction cooker will switch off automatically.
- After press the function key, if there is no proper pot on the cooker plate, the induction cooker will not heat up and the alarm will sound to indicate that a pot is required. One minute later, it will switch off automatically.



Function selection

- After switching on the appliance, press the "Function" to enter the desired cooker mode.
- Please refer to "Function Cooking Mode Instruction" for the details of the corresponding heating process for each cooking mode.

Power adjustment

- After selecting a mode, you can press “+” or “-” to adjust the power.
- For some modes, during the heating procedure, the induction cooker can automatically adjust the power according to the cooking requirement.
- For certain modes, the power is restricted complying with the cooking requirement.



Timer adjustment

- If timer function is not activated, the induction cooker will heat the ingredients for the default time duration.
- If timer is needed, first press the “Timer” key. When the numbers blink on the display, press the key “+” or “-” to adjust the time duration. Max. Timer time is 3 hour.
- When the adjustment is finished, the number on the display will be shown after blinking for several seconds. The induction cooker starts counting down.
- When the counting down is over, the induction cooker automatically stops heating and switches off.



TIMER

Lock

- Locks the cooktop for further use. Press for three seconds to unlock. When locked, only the lock and the on/off button are available to usage.



CHILD LOCK

Switch off

- When the operating time is over, the induction cooker switches off automatically.
- If switch off is needed in advance, press the “ON/STANDBY” key to turn the appliance off.



ON/STANDBY

V. FUNCTIONAL COOKING MODE INSTRUCTIONS

Users can select among the different cooking modes according to cooking purpose. For your convenience, we provide the following instructions:

- The cooking modes of “Hot pot” individually fit to heating requirements, such as hotpot and boiling water. In the heating procedure, the time and power can be adjusted at any time. If the water in the pot dries up or the temperature is abnormally high, the induction cooker automatically switches off or starts protection function.
- The cooking modes of Fry and Deep fry fit to high temperature cooking. In the heating procedure, the time and power can be adjusted at any time. When the temperature of the ingredients reaches the temperature level provided by the selected mode (the highest temperature of various modes are different), the induction cooker will switch to interval heating or stops heating. After the temperature cools down, the induction cooker restarts heating.



HOT POT

 


FRY



DEEP FRY

VI. PROPER POTS

<p>a</p>  <p>Iron stock pot</p>	<p>b</p>  <p>Iron milk pot</p>
<p>c</p>  <p>Iron water kettle</p>	<p>e</p>  <p>Iron steamer pan</p>
<p>d</p>  <p>Iron frying pan</p>	

- The maximum load for the frying pan is 4kg. When using it, do not let the weight of the ingredients exceed this weight to avoid danger.
- If other pots are used, please comply with the following conditions:
 1. Requirements for pot material: containing iron material.
 2. Requirement of pot shape: with even bottom, the diameter is not less than 15 cm while not more than 18 cm.

Note: For optimum performance, please use the standard pots provided.

VII. CLEANING AND MAINTENANCE

- Before cleaning, please switch off the appliance first and then disconnect the power plug from the power outlet. Wait till the cooker plate of the induction cooker is not hot and start cleaning.
- After using the induction cooker for a long time, the opening of air inlet/air outlet will pile up with dust or other dirt, please wipe it with a soft dry cloth. Dust in the air inlet and outlet can be cleaned by using a soft brush or a mini vacuum cleaner.
- For oil spots on the cooker plate, wipe the cooker plate by using a soft moist cloth with a little tooth paste or mild detergent. And then use a soft moist cloth to wipe it until no stain remains.
- When not using it for a long time, please disconnect the power plug from the power outlet and protect the induction cooker from any dust or bugs.

Note: Please do not rinse it with water

VIII. SELF-DIAGNOSIS FOR ABNORMALITIES

Abnormalities		Key checking points and trouble shooting
After plugging in the power cord and pressing the "ON/OFF" or "ON/STANDBY" key, the indicator and display do not light up.		<ul style="list-style-type: none"> • Is the power plug properly connected? • Is the switch, power outlet, fuse or power cord damaged?
The "ON/OFF" indicator lights up and the display works normally, but heating does not start.		<ul style="list-style-type: none"> • Is the pot material proper? • Is the appliance in a "Preset" working status? • For other causes, please take the appliance to a repairing and maintenance site to be fixed.
Heating suddenly stops during the process.		<ul style="list-style-type: none"> • Is the temperature of the oil too high when frying dishes? • Is the temperature of the surroundings very high? Is the air inlet or air outlet of the induction cooker blocked? • Is the default heating time of the induction cooker over? • The self-safety protection of the induction cooker starts, wait for several minutes and connect power to use it.
The protection codes appear	 Protection for over-high temperature of the induction cooker	<ul style="list-style-type: none"> • The temperature inside the induction cooker is too high. When the temperature lowers, press the "ON/STANDBY" key, the heating can start normally.
	  Protection for over-high temperature of the cooker plate	<ul style="list-style-type: none"> • The temperature of the cooker plate is too high. When the temperature lowers, press the "ON/STANDBY" key, the heating can start normally.
	       Protection for the inner sensor of the induction cooker	<ul style="list-style-type: none"> • When using the induction cooker, if the temperature of the surroundings is too low or the voltage used abnormally, the auto protection function will start. With switching on the appliance again or switching after simple warm-up, the appliance can return to normal working status automatically. • Call the service number or the professional repair and maintenance site to make an inquiry.

- The description above is for diagnosing and checking common issues. If the problems cannot be solved, please send the product to a repair and maintenance site or inquiry by calling service number.
- In products without display function, switch/power indicators will blink to signal potential issues. Please pay attention to the key points of checking to solve the problems.
- Do not disassemble or repair the product by yourself to avoid product damage or personal injury.

#DetailsMatter