

# USER MANUAL

INDUCTION COOKER  
IC-S19RH

**TOSHIBA**



CAUTION: DO NOT D

警告：請勿乾燒。使用

**TOSHIBA**



KEEP WARM  
保溫



SIMMER  
煲湯/燉



BOIL  
煲水

# I.SAFETY INSTRUCTIONS

## Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not disassemble, repair or modify It may cause fire, electric shock or injury. For repairs, contact the store where you purchased the product or the consultation center.
- Do not put foreign matter in the air intake / exhaust port In particular, metals such as pins and wires may cause electric shock or even move and cause injury.
- Do not soak or splash water. Do not get wet. It may cause a short circuit or electric shock
- Do not give a shock (such as dropping something) to the top plate If it is cracked or cracked, using it as it is may cause electric shock, overheating, or abnormal operation.


## **Power Cord/Outlet Related**

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Please turn off and unplug the appliance before cleaning maintenance or relocation and whenever it is not in use.
- Make sure to insert the power plug steady to the base.
- Remove dust from the plug on a regular period. If dust accumulates, it may cause a fire due to poor insulation.
- Make sure your hands are dry before touching the plug.
- Do not damage the cord, do not bend it forcibly, do not pull it, do not twist it. Do not bundle and energize, keep away from high temperature parts, do not put heavy objects on it. Do not pinch, do not process.
- When heating the liquid, mix it before heating
- Observe the following when stir-frying or grilling.
  - Since a small amount of oil is used, the oil temperature rises sharply and may ignite.
  - Don't leave when cooking.
  - Adjust the heat to a low level and do not overheat.

## **Cautions**

- This appliance as well as the cooking utensils used and the surface of the appliance can become very hot, do not touch the hot surface of the ceramic hob.
- This appliance is for household use only. Do not use outdoors.
- Hold the power plug and pull it out from the outlet. It may cause fire due to electric shock or short circuit.
- Be careful when handling plugs and cords (Causes of fire, electric shock, and burns due to short circuit and electric leakage)
- Do not use for anything other than cooking (Cause of ignition due to overheating / abnormal operation)
- Be careful of splashing oil while cooking fried food. Oil may splatter and cause burns. Be careful especially with foods that with much more water.
- That appliances are not intended to be operated by means of an external timer or separate remote-control system.

## Cautions

-  Caution, hot surface, The surfaces are liable to get hot during use.
- When frying food with induction cooker, the following precautions shall be observed: If there is too little oil, there will be a risk of fire caused by overheating of oil temperature. Please do not leave away when frying food in an induction cooker. Frying food with the "frying" menu. When the bottom of the pot is deformed, please do not use it. You must use a pan for frying food. Please do not fry with oil less than 800g (0.9l). Please put the pot in the middle of the induction cooker when frying food.
- If you are using a cardiac pacemaker, please use this induction cooker under the guidance of a doctor. The operation of this product will affect the operation of cardiac acemaker.
- Do not use on unstable places, heat-sensitive rugs, near flammable materials, or in slippery places. If the main body is tilted, the pan will slip off and the contents may spill, resulting in burns or injury.
- Keep your face away. It may cause burns.
- Do not bake or overheat. It may cause burns, ignition of cooked food, or damage to the pan.
- Unplug the power plug as soon as there is a lot of oily smoke, because The oil is hot. Continued heating may cause ignition.
- Please choose the course that suits your cooking Do not cook fried food on a heating course. The oil temperature will rise too high and may cause a fire.
- Do not use hot oil preheated with other appliances (gas stove, etc.) Do not preheat with hot oil. The temperature control device may not work properly and may overheat abnormally, causing ignition.
- Nothing is laid under the pan. Do not cook with water or foreign matter on the top plate or the bottom of the pan. Resins such as wraps, paper, cloth, foodstuffs, etc. can be burnt by the heat of the pan, It cannot be done and may cause the food to burn.
- Do not block the intake and exhaust ports. If you use it on something that can be easily sucked in, such as paper or table cloth, and block the exhaust and intake ports, the temperature inside the main unit will rise, which may cause a fire.

## **Cautions**

- Do not put the IH cooker near water leakage, stove, gas stove and other heat sources. Otherwise, electric shock, electric leakage, furnace deformation and fire may be caused.

## **Other matters**

 
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, office and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - In bed and breakfast type environments;
- Do not use on IH cooking heaters. Also, do not use an electromagnetic induction heating cooker such as an IH jar rice cooker on the top plate.
- Since the lines of magnetic force are emitted, keep away from objects that are weak against magnetism. The memory of cash cards, IC cards, etc. may be lost. In addition, TV, radio, hearing aids, etc. may be interference with noisy.

## II.PRODUCT INTRODUCTION

The induction cooker is able to meet various kinds of cooking demands by electromagnetic heating, high thermal efficiency, is safe and reliable, easy to clean.

### Performance Parameters

Model	Applied voltage/frequency	Rated power	Dimension (mm)	Weight(kg)
IC-S19RH	220-240V~ 50/60Hz	1900W	360x290x45	2.65

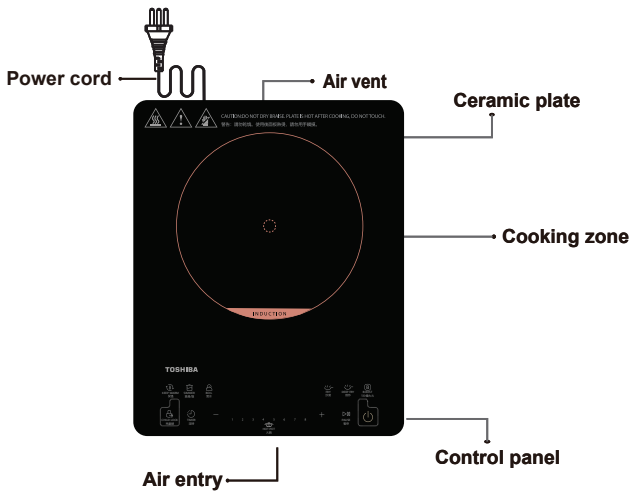


# III. OPERATION INSTRUCTIONS

## Before using New Induction cooker

- Read this guide, taking special note of the "Safety Warnings" section.
- Remove any protective film that may still be on your ceramic plate.

## Using the Touch Controls

 - The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

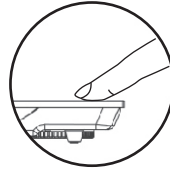



## Put the pot on the ceramic plate

- Make sure the air vents are not blocked and keep utensils away from the immediate surrounds of the ceramic plate.
- Make sure the cookware which has food or liquid is placed in the center of ceramic plate.

## Plug in

- After the power supply is connect, a beep will be heard.

## Switch on

- After pressing the "  " button, the induction cooker is ready for working. Press the function button to start heating.
- After pressing the "  " button, if no function button is pressed for 10 seconds, the induction cooker will switch off automatically.
- Under the working mode, if there is no proper pot on the ceramic plate, the induction cooker will not heat up and the alarm will sound to indicate that a pot is required. One minute later, it will switch off automatically.







### III. OPERATION INSTRUCTIONS

#### Function

- After switching on the induction cooker, press the corresponding function button to select the desired cooking mode.

#### Function cooking mode instructions

Note: Power in each cooking mode is restricted complying with the cooking requirement and you can use power mode if higher wattage is required.

Function	Icon	Default cooking time	Default wattage	Adjustable cooking time range	Usage
Power	+/-	2 hours	1600W	1min-3hours	This mode can be used for manual. You can adjust the power by using +/- button.
Keep warm		2 hours	200W	1min-3hours	This mode can be used for keeping warm.
Simmer		2 hours	400W	1min-3hours	This mode can be used for simmer.
Boil		15 min	1900W	-	This mode can be used for boiling water.
Fry		2 hours	1300W	1min-3hours	This mode can be used for fry.
Deep Fry		2 hours	1900W	1min-3hours	This mode can be used for deep fry.
Boost		5min	1900W	-	This mode allows obtaining directly the highest power level.

#### Pause

- Press the “Pause” button to stop heating.  
When the induction cooker is in pause, press the “Pause” button again or select a cooking mode to quit the pause status and return to the normal heating process.  
After setting Pause, the induction cooker stops heating.  
After reaching the default pause time, if the pause state is not cancelled, the induction cooker may alarm and automatically switch off.



## III. OPERATION INSTRUCTIONS

### Timer

- To use the timer, press the “Timer” button. The digital screen will indicate “0:00”. During the several seconds, press the “+/-” buttons to adjust the cooking time. Each pressure increase or decrease the time of 1 minute. If you maintain the button longer, the time will increase or decrease by increments of 10 minutes. The timer can be set from 1 minute to 180 minutes. Once the time is set, the digital screen will flicker during several seconds before heating. To cancel the timer function, press again on the timer button.

### ON/OFF


- When the operating time is over, the induction cooker switches off automatically.

Press the “  ” button to turn off the appliance .

**Note: Do not touch the surface of the ceramic while “H” is displayed, it means the temperature high.**

**While “L” is displayed, it means the temperature low.**

### How To Lock

- Press the “CHILD LOCK” button to start lock function. The “CHILD LOCK” indicator lights up. Now only the “  ” button can be used to switch off the appliance, all the other operations are forbidden.  
Press the “CHILD LOCK” button for several seconds to quit the lock function. The “lock” indicator turns off.

## IV. COMPATIBLE COOKWARE



Iron oil frying pan



Stainless steel pot



Iron pan



Iron kettle



Enamel stainless steel kettle



Enamel cooking utensil



Iron plate

- Requirement for pot materials: containing magnetic inducing materials.
- Shape requirement: flat bottom, with the diameter more than 15 cm and less than 18 cm.
- After the first use, some white spots would appear at the bottom of the pot. This is normal.
- Please pour some vinegar into the pot, heat it at about 60-80 °C, then wipe the spots away with brush.
- Incompatible pots material: glass, ceramic, aluminium, copper and other non magnetic material.
- If the pot removed, the induction cooker will stop heating immediately. After the buzzer sounds for 1 minute, it will go into-standby mode automatically.

## V. CLEANING AND MAINTENANCE

- Before cleaning, please switch off the appliance first and then disconnect the power plug from the power outlet. Wait till the cooker plate of the induction cooker is not hot and start cleaning.
- After using the induction cooker for a long time, the opening of air inlet/air outlet will pile up with dust or other dirt, please wipe it with a soft dry cloth. Dust in the air inlet and outlet can be cleaned by using a soft brush or a mini vacuum cleaner.

**Note: Please do not rinse it with water.**

- For oil spots on the cooker plate, wipe the cooker plate by using a soft moist cloth with a little tooth paste or mild detergent. And then use a soft moist cloth to wipe it until no stain remains.

When not using it for a long time, please disconnect the power plug from the power outlet and protect the induction cooker from any dust or bugs.

## VI. TROUBLESHOOTING

Abnormalities		Key checking points and trouble shooting
After plugging in the power cord and pressing the "ON/OFF" key, the indicator and display do not light up.		<ul style="list-style-type: none"> <li>• Is the power plug properly connected?</li> <li>• Is the switch, power outlet, fuse or power cord damaged?</li> </ul>
The "ON/OFF" indicator lights up and the display works normally, but heating does not start.		<ul style="list-style-type: none"> <li>• Is the pot material proper?</li> <li>• Is the appliance in a "Preset" working status?</li> <li>• For other causes, please take the appliance to a repairing and maintenance site to be fixed.</li> </ul>
Heating suddenly stops during the process.		<ul style="list-style-type: none"> <li>• Is the temperature of the oil too high when frying dishes?</li> <li>• Is the temperature of the surroundings very high? Is the air inlet or air outlet of the induction cooker blocked?</li> <li>• Is the default heating time of the induction cooker over?</li> <li>• The self-safety protection of the induction cooker starts, wait for several minutes and connect power to use it.</li> </ul>
Code of failure	E3 E6 EA	<ul style="list-style-type: none"> <li>• Wait a moment and press the "ON/OFF" button when the temperature of the hotplate becomes normal, the induction hotplate will operate as usual.</li> </ul>
	E7 E8	<ul style="list-style-type: none"> <li>• Turn off the hotplate, when the voltage becomes normal, and then turn on the hotplate, it will operate as usual.</li> </ul>
	E1 E2 E4 E5 Eb U1	<ul style="list-style-type: none"> <li>• Please contact the special maintenance department.</li> </ul>
<p><b>Emergency</b></p> <p>During using, if there are some abnormal cases, please unplug immediately and disconnect power. For any failure of the product, please contact the special maintenance department or the customer service center.</p>		

## VII.WARRANTY

If problems occur with the product, please contact our specific repair and maintenance site or service center.

- Any problem caused by the following items is not included in the warranty:
  1. Damage caused by incorrect use, storing or maintenance by the customer.
  2. Disassembling or repairing the appliance by a repair agent that is not appointed by our company, resulting in damage to the appliance.
  3. The model number on the invoice is different from the one of the product to be repaired, or the model number on the invoice is modified.
  4. No valid invoice.
  5. Damage due to force majeure.
  6. Putting the induction cooker to commercial use.
  7. We are not responsible for accidents arising due to the use of our accessories not designed for utilisation with this product.
  8. Using the product in a non-household environment is not covered by the warranty scope.
  9. Man-made issue or problems caused by incorrect use are not covered by the warranty scope.
- For those products beyond the warranty, the customer service center of the company will still serve you warmly.

## VIII.SPECIAL DECLARATION

If there is technical amendment for the product, it will be edited into the updated version of the instruction manual. Please be aware that we will not inform customers of this separately. If the appearance or color of the product is modified, please refer to the real appliance as a standard.



# 用戶手冊

電磁爐  
IC-S19RH

**TOSHIBA**



CAUTION: DO NOT D

警告：請勿乾燥。使用

**TOSHIBA**



KEEP WARM  
保溫



SIMMER  
煲湯/燉



BOIL  
煲水

# 1. 安全說明

1. 本電器不可供肢體傷殘、感官或精神上有障礙或缺乏相關經驗及知識的人員（包括兒童）使用，除非是他們在使用本電器時受到監督或得到安全使用指導並瞭解所涉及的危害。
2. 本電器可供肢體、感官或精神能力較弱或缺乏經驗和知識的人（包括8歲以下兒童）使用，前提是有負責其安全的人員進行監督或指導。兒童不得玩耍本電器。請勿讓8歲以下兒童在沒有監督的情況下進行清潔和使用後維護。
3. 請將本電器及其電源線放在8歲以下兒童接觸不到的地方。
4. 應監督兒童以避免玩耍本電器。
5. 請勿拆卸、修理或改裝，可能會導致火災、觸電或受傷，如需維修，請聯繫您購買產品的商店或諮詢中心。
6. 請勿將異物放入進氣/排氣口，尤其是針腳和電線等金屬，可能會導致觸電並造成傷害。
7. 不要浸泡或濺水，不要弄濕，可能會導致短路或觸電。
8. 請勿對頂部進行沖擊（例如掉落物品）如果頂板破裂，直接使用可能會導致觸電，過熱或運行異常。


## 電源線/插座相關

9. 如果電源線損壞，必須由製造商、其服務代理或具有類似資格的人員更換，以避免發生危險。
10. 在清潔維護或搬遷之前以及不使用時，請關閉並拔下設備插頭。
11. 確保將電源插頭穩固地插入底座。
12. 定期清除插頭上的灰塵，如果灰塵積聚，可能會因絕緣不良而引起火災。
13. 確保在接觸插頭之前您的手是乾的。

## 電源線/插座相關

14. 不要損壞電源線，不要用力彎曲它，不要拉它，不要扭曲它，不要捆紮通電，遠離高溫部件，不要在上面放置重物，不捏，不加工
15. 當加熱液體時，加熱前先混合
16. 炒菜或燒烤時請注意以下事項。
  - 避免放入過少的油，油溫急劇上升，可能著火。
  - 做飯時不要離開。
  - 把溫度調到低一點，不要過熱。

## 注意事項

17. 本產品以及使用的炊具和產品表面可能會變得很熱，請勿觸摸陶瓷爐的熱表面。
18. 本設備僅供家庭使用，不要在戶外使用。
19. 握住電源插頭並將其從插座中拔出，可能會因觸電或短路而引起火災。
20. 處理插頭和電源線時要小心（火災、觸電、短路和漏電燒傷）。
21. 請勿用於烹調以外的用途（因過熱/異常操作而起火）
22. 烹調油炸食物時小心濺油，油可能會飛濺並導致灼傷，尤其是含有更多水的食物要小心。
23. 該設備不能通過外部定時器或單獨的遠程控制系統。
24.  小心熱表面，使用過程中表面容易變熱。使用電磁爐煎炸食物時，請注意以下事項應注意：如果油量太少，會有油溫過熱引起火災的危險。請不要離開當使用電磁爐煎炸食物時，“煎炸食物用菜單功能” Frying “，鍋底變形時，請勿使用。您必須使用平底鍋煎炸食物，請不要用少於 800g (0.9l) 的油煎炸，煎炸食物時請將鍋放在電磁爐中間。
25. 如果您正在使用心臟起搏器，請在醫生的指導下使用此電磁爐，本產品的操作將影響心臟起搏器的操作。



## 注意事項

26. 請勿在不穩定的地方、熱敏地毯、易燃物材料，或在濕滑的地方，如果電磁爐傾斜，平底鍋將滑落，內容物可能溢出，導致燒傷或受傷。
27. 遠離你的臉，可能會導致灼傷。
28. 不要烘烤或過熱，可能導致燙傷、熟食起火、或損壞鍋。
29. 一旦有大量油煙，立即拔下電源插頭，因為油很熱。持續加熱可能導致起火。
30. 請選擇適合您烹飪的菜單，不要煮油炸過的食物，在加熱過程中，油溫會升得太高，可能引起火災。
31. 請勿使用用其他器具（燃氣灶等）預熱的熱油，不要用熱油預熱。溫度控制裝置可能不正常工作，可能會異常過熱，引起點火。
32. 鍋底下不要放任何東西，不要用水或異物放在頂板或鍋底上，樹脂如包裝紙、布匹、食品等可能會被機器的熱量燒毀平底鍋，禁止這樣做可能會導致食物燃燒。
33. 不要堵塞進、排氣口。如果用在紙或桌布等容易被吸進去的東西上，堵住了排氣口和進氣口，主機內部的溫度會上升，這可能會引起火災。
34. 請勿將電磁爐靠近漏水處、爐灶、燃氣灶和其他熱源。否則會觸電、漏電、可能引起爐子變形和火災。

## 其他注意事項

本設備旨在用於家用和類似應用，例如：

- 商店、辦公室或者其他工作環境的員工廚房區域；
  - 農舍；
  - 酒店、汽車旅館和其他住宅類型環境中的客戶；
  - 在床和早餐類型的環境中；
35. 請勿在 IH 烹飪加熱器上使用。此外，請勿在 IH 電磁爐面板上使用 IH 電飯煲。

## 其他注意事項

 
36. 由於會發出磁力線，請遠離物體對磁力較弱，現金卡、IC的內存卡等可能會丟失，此外，電視、收音機、助聽器等可能干擾噪音。

## II. 產品介紹

電磁爐通過電磁加熱能夠滿足各種烹飪需求，熱效率高，安全可靠，易於清洗。

### 性能參數

型號	額定電壓/頻率	額定功率	尺寸 (毫米)	重量 (千克)
IC-S19RH	220-240V~ 50/60Hz	1900W	360x290x45	2.65

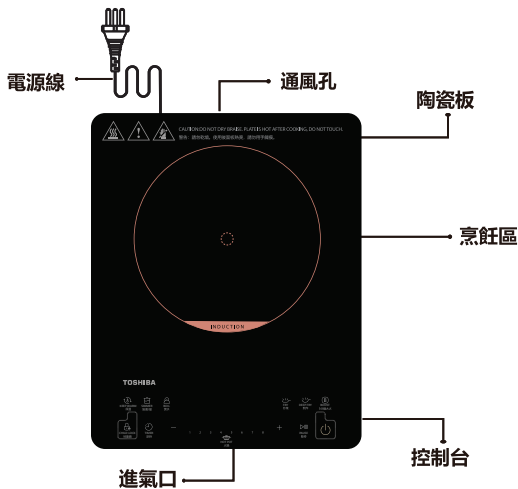

## III. 操作說明

### 使用新電磁爐之前

- 閱讀本指南，特別注意“安全警告”部分。
- 除去陶瓷板上可能殘留的所有保護膜。

### 使用觸控

- 控制按鈕可回應觸摸，因此無需施加壓力。
- 用指腹而不是指尖操作。
- 每次觸摸時都會聽到蜂鳴聲。
- 確保控制按鈕始終清潔、乾燥，並且沒有任何物品（例如器皿或布）覆蓋，即使一層薄的水膜也可能使控制按鈕難以操作。





### 將鍋放在陶瓷板上

- 確保通風孔未被堵塞，並且使廚具遠離陶瓷板的周圍。
- 確保將裝有食物或液體的炊具放在陶瓷板的中央。

### 插入電源

- 連接電源後，可以聽到蜂鳴聲。

### 開機

- 按下“”按鈕後，電磁爐就可以工作了。按下功能按鈕開始加熱。
- 按下“”按鈕後，如果10秒鐘內未按任何功能按鈕，電磁爐將自動關閉。
- 在工作模式下，如果陶瓷板上沒有合適的鍋具，則電磁爐不會加熱，並且會發出警報聲，表示需要有鍋。一分鐘後將自動關閉。

### III. 操作說明

#### 功能

- 打開電磁爐後，按相應的功能按鈕選擇所需的烹飪模式。

#### 功能烹飪模式說明

注意：每種烹飪模式下的功率都受到限制，以符合烹飪要求。如果需要更高的功率，則可以使用功率模式。

功能	圖示	默認烹飪時間	默認功率	可調烹飪時間範圍	用法
火鍋	+/-	2小時	1600W	1分鐘至3小時	此模式可用於手動。 您可以使用+/-按鈕調節功率。
保溫		2小時	200W	1分鐘至3小時	此模式可用於保溫。
燉		2小時	200W	1分鐘至3小時	此模式可用於燉煮。
煲水		15分鐘	1900W	-	此模式可用於煲水。
炒菜		2小時	1300W	1分鐘至3小時	此模式可用於炒菜。
油炸		2小時	1900W	1分鐘至3小時	此模式可用於油炸。
5分鐘大火	Ⓑ	5分鐘	1900W	-	此模式允許直接選擇最高功率。

#### 暫停 ▷00

- 按下“暫停”按鈕停止加熱。

當電磁爐處於暫停狀態時，再次按“暫停”按鈕或選擇一個烹飪模式可以退出暫停狀態並返回正常的加熱過程。

設置暫停後，電磁爐停止加熱。


達到默認的暫停時間後，如果未取消暫停狀態，則電磁爐可能會發出警報並自動關閉。

### III. 操作說明


#### 定時

- 要使用定時，請按“定時”按鈕。數位螢幕將顯示“0:00”。在幾秒鐘內按“+/-”按鈕調整烹飪時間。每按一次增加或減少1分鐘。如果持續按住按鈕，時間增加或減少的幅度為10分鐘。定時可設置為1分鐘至180分鐘。設置時間後，數位螢幕將在加熱前幾秒鐘閃爍。要取消定時功能，請再次按定時按鈕。

#### 開關

- 工作時間結束後，電磁爐將自動關閉。  
按“”按鈕關閉電器。  
**注意：當顯示“H”時，請勿觸摸陶瓷表面，此時溫度過高。  
當顯示“L”時，表示溫度變低。**

#### 如何鎖定

- 按下“兒童鎖”按鈕以啟動鎖定功能。“兒童鎖”指示燈點亮。此時只有“”按鈕可用於關閉電器，其他所有操作均無法使用。  
按下“兒童鎖”按鈕幾秒鐘以退出鎖定功能。“兒童鎖”指示燈熄滅。

## IV. 相容炊具



鐵煎鍋



不銹鋼鍋



平底鐵鍋



鐵壺



搪瓷不銹鋼壺



搪瓷炊具



鐵板

- 鍋材料要求：包含磁感應材料。
- 形狀要求：平底，直徑15至18釐米。
- 首次使用後，鍋底會出現一些白色斑點。這是正常現象。
- 請向鍋中倒入一些醋，加熱至60-80°C，然後用刷子將其擦去。
- 不相容的鍋材料：玻璃、陶瓷、鋁、銅和其他非磁性材料。
- 如果移開鍋具，電磁爐將立即停止加熱。蜂鳴器響1分鐘後，將自動進入待機模式。

## V. 清潔與保養

- 清潔之前，請先關閉電器電源，然後從電源插座上拔下插頭。等到電磁爐盤不熱後再開始清潔。
- 長時間使用電磁爐後，進風口/出風口處會積滿灰塵或其他污垢，請用柔軟的乾布擦拭。可以使用軟刷或微型吸塵器清潔進氣口和出氣口內的灰塵。

## 注意：請勿用水沖洗。

- 如果電磁爐板上有油漬，請使用蘸有少許牙膏或溫和清潔劑的軟濕布擦拭，然後使用柔軟的濕布擦拭，直到沒有污漬為止。  
長時間不使用時，請從電源插座上拔下插頭，並保護電磁爐免受灰塵或蟲子的侵害。

## VI. 故障排除

異常現象		關鍵檢查點和故障排除
插入電源線並按“開/關”鍵後，指示燈和顯示幕不亮。		<ul style="list-style-type: none"><li>● 電源插頭是否正確連接？</li><li>● 開關、電源插座、保險絲或電源線是否損壞？</li></ul>
“開/關”指示燈亮起，並且顯示正常工作，但是沒有加熱。		<ul style="list-style-type: none"><li>● 鍋的材料是否合適？</li><li>● 電器是否處於“預設”工作狀態？</li><li>● 如果是其他原因，請將電器送至維修保養網點檢查。</li></ul>
加熱過程中突然停止。		<ul style="list-style-type: none"><li>● 油炸時油的溫度是否太高？</li><li>● 環境溫度是否過高？電磁爐的進風口或出風口是否堵塞？</li><li>● 電磁爐的默認加熱時間是否結束？</li><li>● 電磁爐的自我安全保護啟動，等待幾分鐘後再接通電源使用。</li></ul>
故障代碼	E3 E6 EA	<ul style="list-style-type: none"><li>● 等待片刻，然後在電熱板溫度恢復正常時按下“開/關”按鈕，感應電熱板將照常運行。</li></ul>
	E7 E8	<ul style="list-style-type: none"><li>● 關閉電熱板，當電壓恢復正常後再打開，電熱板將照常運行。</li></ul>
	E1 E2 E4 E5 Eb U1	<ul style="list-style-type: none"><li>● 請聯繫特殊維護部門。</li></ul>
<b>緊急情況</b> 使用過程中，如有異常情況，請立即拔出插頭斷開電源。如果產品有任何故障，請聯繫特殊維護部門或客戶服務中心。		

## VII. 保修

如果產品出現問題，請聯繫本公司特定維修和維護網點或服務中心。

- 以下事項引起的任何問題均不在保修範圍內：
  1. 因客戶錯誤使用、儲存或維護而造成的損壞。
  2. 非公司指定的維修代理商拆卸或修理導致電器損壞。
  3. 發票上的型號與要修理的產品不同，或者發票上的型號被修改。
  4. 沒有有效的發票。
  5. 不可抗力造成的損壞。
  6. 電磁爐用於商業用途。
  7. 對於因使用非本產品專用附件而引起的事故，本公司概不負責。
  8. 在非家庭環境中使用產品不在保修範圍之內。
  9. 人為問題或因使用不當而引起的問題不在保修範圍之內。
- 對於超出保修範圍的產品，本公司客戶服務中心仍將為您提供熱情服務。

## VIII. 特別聲明

如果產品有技術修訂，將會編入新版本的使用手冊中，不再另行通知。如果產品的外觀或顏色有更改，請以實物為準。



