

用戶 說明書

電熱水壺

KT-08DH1VHK(W)

TOSHIBA



目錄

安全警告

安全警告	01
------------	----

介紹

零件名稱	02
規格	02

使用說明

使用注意事項	03
煮水步驟	03
倒水步驟	03

清潔和保養

清潔和保養注意事項	04
日常清潔	05

服務指南

故障自檢	05
------------	----

安全說明

1. 如果電源線損壞，必須由製造商、其服務代理或專業人士更換，以避免危險。
2. 禁止將水壺浸入水中。
3. 使用後，加熱元件表面會有餘熱。
4. 如果加入太多水到水壺中，可能會冒出滾水。
5. 請勿在戶外使用。
6. 本產品供家居及類似環境使用，如：
 - 店鋪內的員工廚房區域、辦公室及其他工作環境;
 - 農舍;
 - 供客戶於酒店、汽車旅館及其他住宅類型環境;
 - 食宿型酒店。
7. 8歲及以上兒童，身體感觀或心智慧力較弱或缺乏經驗和知識的人員,必須在接受安全使用本產品的方法的監督或指導,並瞭解所涉及的危險後方可使用本產品。兒童不得將本產品作為玩具玩耍。應將本產品及其電源線放置在8歲以下兒童接觸不到的地方。
8. 應監督兒童，以避免其玩耍本產品。
9. 未經監督，兒童不得進行清潔和用戶維護。
10. 警告：誤用可能導致潛在傷害。
11. 在清潔、維護或重新放置之前以及不使用時，請關閉並拔下電器插頭。
12. 本水壺和電源底座為配套使用設備。
13. 警告：避免讓水濺到插頭上。

介紹

 
部件名稱



提示

使用本電器前，請先瞭解以下內容，以便您快速掌握使用方法。

由於產品不斷升級，如果實際產品與下圖有差異，請以實際產品為準。
本電器為臺式產品，不得作為嵌入式產品使用。

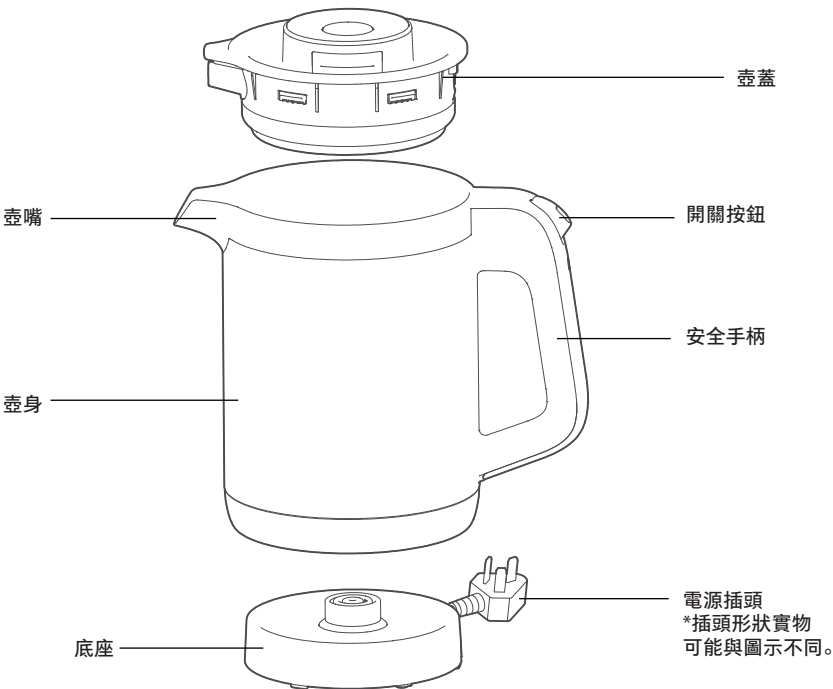

規格

型號	額定容量	額定電壓	額定頻率	額定功率	產品尺寸 (W x D x H)	產品重量
KT-08DH1VHK(W)	0.8L	220-240V~	50/60Hz	1300-1550W	230x143x219mm	1.2kg

 
使用說明

使用注意事項


- 倒水後或煮水前，請將出水口鎖鈕複位。
- 使用過程中，請勿加水超過最高水位。
- 本電器採用減少蒸氣散發的結構。正常沸騰時只會發出少量蒸氣。
- 本電器蓋子內含鋼珠，防止傾倒時漏水。搖晃時發出聲音屬正常現象。傾倒時，也能抑制漏水。

燒水步驟


1 如下圖打開水壺蓋。

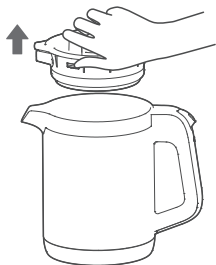


2 在水壺中加入清水，蓋上壺蓋。
注意不要超過最高水位。

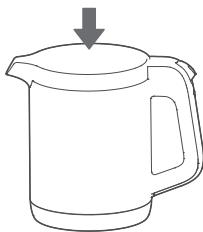 

3 將水壺放在電源底座上，
打開電源。

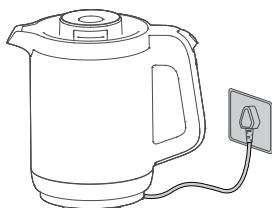 

4 按下開關按鈕，加熱指示燈亮起，
水壺開始加熱。

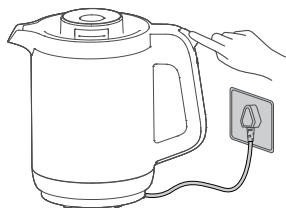 

倒水步驟

1 按下出水口鎖定按鈕，解
鎖出水口。



2 解鎖後，即可倒水飲用。



倒水步驟

3 倒水後，再按一下鎖定按鈕，鎖定出水口按鈕。



清潔和保養

清潔和保養注意事項

 
- 清潔前，請確保電源插頭已從插座中拔出，並等到電水壺冷卻後再使用。
- 為延長電水壺的使用壽命，應定期清除水壺內的礦物質沉積物（水垢），可使用除垢劑（如白醋、檸檬酸）進行清潔。

日常清潔

1 斷開電源，向水壺中加入除垢劑和清水。




2 打開電源，將除垢劑溶液煮至沸騰。

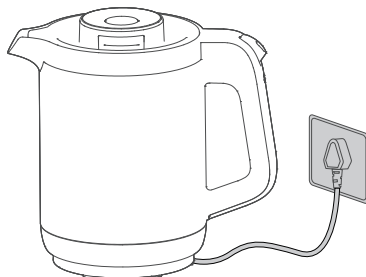

日常清潔

 3 靜置片刻後，倒出除垢劑溶液。

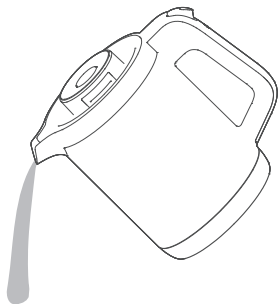

4 用清水沖洗內膽，並用乾淨的軟布擦乾。



服務指南

故障自檢

如果您認為電器有故障，送至售後服務中心維修前，請檢查以下情況確認。

故障	可能原因	處理方法
指示燈不亮	電源插頭未插好 燈線鬆動 燈線損壞	插好電源插頭，如指示燈仍不亮，請送至當地售後服務中心維修。
不加熱	開關按鈕未按到位 加熱管損壞 溫控器損壞 保險絲損壞	按操作說明按下開關按鈕。若仍不加熱請送當地售後服務中心維修。
水沸時開關不跳閘	水壺蓋未蓋好	蓋上水壺蓋
	電器故障	送當地售後服務中心維修
水沸前開關跳閘（提前跳閘）	壺底水垢太厚	清理水垢
	電器故障	送當地售後服務中心維修

#DetailsMatter

USER MANUAL

ELECTRIC KETTLE
KT-08DH1VHK(W)

TOSHIBA



Contents

Safety Warnings

Safety Warnings01

Overview

Part Name02

Parameters.....02

Instructions for Use

Precautions for Use03

Water Boiling Steps.....03

Water Pouring Steps.....03

Cleaning and Maintenance

Cleaning and Maintenance Precautions04

Daily Cleaning05

Service Guide

Fault Self-test05

Safety Instructions

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. The appliance must not be immersed.
3. The heating element surface is subject to residual heat after use.
4. If the kettle is overfilled, boiling water may be ejected.
5. Do not use outdoors.
6. The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shop,offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Cleaning and user maintenance shall not be made by children without supervision.
10. WARNING: Misuse may cause potential injury.
11. Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use.
12. The appliance is only to be used with the stand provided.
13. Warning: Avoid spillage on the connector.

Overview

Part Name

 


Tip

Please understand the following before using the appliance so that you can quickly master the appliance usage

Due to the continuous upgrading of our appliance s, if there is a difference between the actual appliance and the picture below, please refer to the actual appliance.

This appliance is a desktop appliance and is not allowed to be used as an embedded appliance.

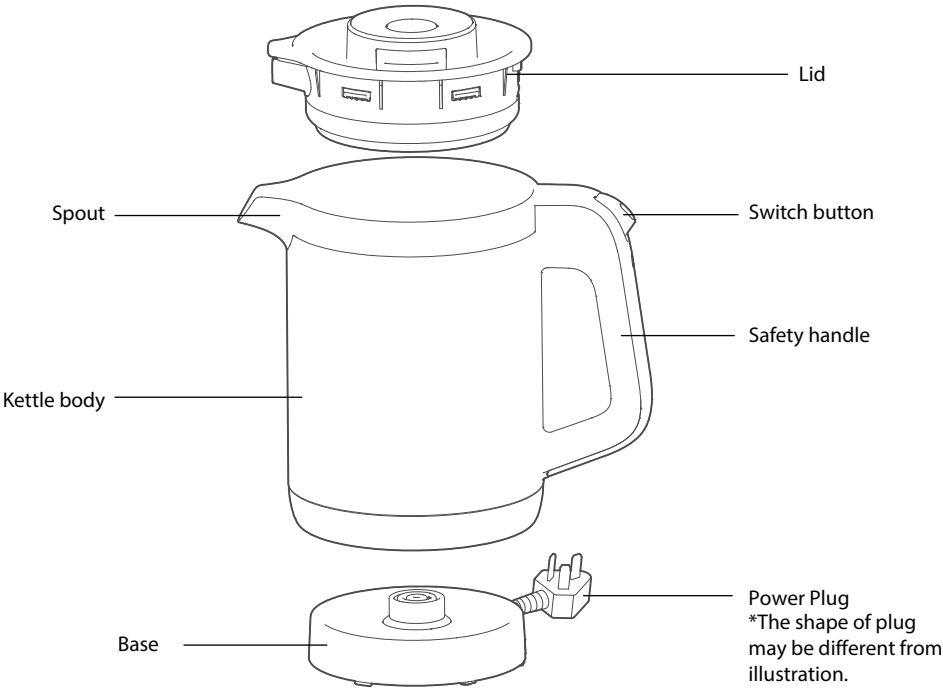

Parameters

Model	Rated capacity	Rated voltage	Rated frequency	Rated power	Product Size (W x D x H)	Product Weight
KT-08DH1VHK(W)	0.8L	220-240V~	50/60Hz	1300-1550W	230x143x219mm	1.2kg

 
Instructions for Use

Precautions for Use


- Please reset the water outlet lock button after pouring water or before boiling water.
- Do not add water exceeding the maximum water level during use.
- This product adopts a structure to reduce steam emission. Only a small amount of steam will be emitted during normal boiling.
- The lid of this product contains a steel ball to prevent water leakage when it is dumped. It is normal to make a sound when shaking. In case of dumping, it can also suppress water leakage.

Water Boiling Steps


- 1** Open the kettle lid as shown below

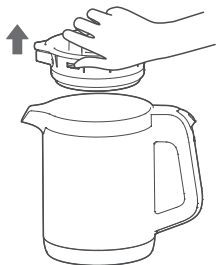


- 2** Add clean water to the kettle and cover the kettle lid. Be careful not to exceed the maximum water level

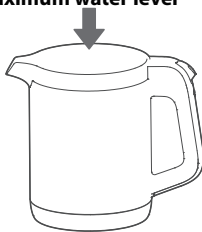

- 3** Place the kettle on the power base and turn on the power

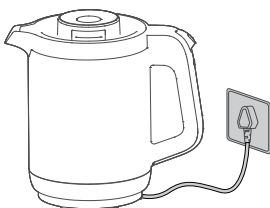

- 4** Press the switch button, the heating indicator light will light up, and the kettle will start to heat

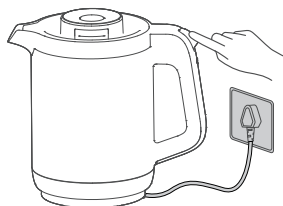

Water Pouring Steps

- 1** Press the water outlet lock button to unlock the water outlet



- 2** After unlocking, you can pour water for drinking



Water Pouring Steps

- 3** After pouring, press the lock button again to lock the water outlet button



Cleaning and Maintenance

Cleaning and Maintenance Precautions


- Before cleaning, please make sure that the power plug is unplugged from the socket and wait until the electric kettle cools down.
- To extend the service life of the electric kettle, the mineral deposits (scale) in the water kettle should be cleaned regularly, and descaling agents (such as white vinegar, citric acid) can be used for cleaning.

Daily Cleaning

- 1** Disconnect the power supply and add descaling agent and clean water to the kettle




- 2** Turn on the power supply and boil the descaling agent solution

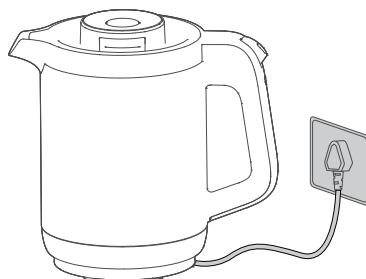

Daily Cleaning

- 3** Pour out the descaling agent solution after standing for a while

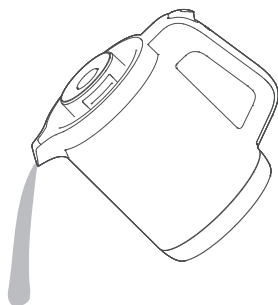

- 4** Rinse the inner tank with clean water and wipe it dry with a clean soft cloth



Service Guide

Fault Self-test

When you think the appliance is faulty, please check the following conditions for confirmation before sending it to the after-sales service center for repair.

Fault	Possible cause	Treatment method
The indicator light is not on	The power plug is not plugged in properly	Plug in the power plug properly. If the indicator light is still off, please send it to the local after-sales service center for repair
	The light cord is loose	
	The light cord is damaged	
No heating	The switch button is not pressed in place	Press the switch button according to the operating instructions. If it still does not heat, please send it to the local after-sales service center for repair
	The heating tube is damaged	
	Thermostat is damaged	
	Fuse is damaged	
The switch does not trip when water boils	The lid of the kettle is not closed properly	Cover the kettle lid
	Appliance failure	Send it to the local after-sales service center for repair
The switch trips before water boils (early trip)	The scale at the bottom of the kettle is too thick	Clean the scale
	Appliance failure	Send it to the local after-sales service center for repair

#DetailsMatter