TOSHIBA

Instruction Manual RO Tabletop Water Purifier

MODEL

TWP-TSR75SHK(W)
TWP-TSR75SHK(M)



Please read the manual carefully before operating the water purifier. Retain it for future reference.

DIRECTORY

The packaging material used is recyclable; we recommend that you separate plastic, paper and cardboard and give them to recycling companies. Guidelines, waste from electrical and electronic devices should be collected separately. If you need to dispose of this appliance in the future, do NOT throw it away with the rest of your domestic garbage.

1. Safety Instruction

1-1 Safety instructions

All instructions described should be carefully read and followed.

 These instructions are precautions to prevent the risks of serious injury or death of the user, and any damages to property.

MARKINGS	
<u>↑</u> WARNING	WARNING indicates high possibility of serious injury (*1) or death of the user.
A CAUTION	CAUTION indicates high possibility of injury (*2) or property loss (*3).

- (*1) Serious injury injury which requires hospitalization, lengthy treatment, or blindness, hot and cold skin burn, electric shock, broken bones or poisoning.
- (*2) Injury injury, skin burn or electric shock which does not require hospitalization or lengthy treatment.
- (*3) Property loss extended loss of houses, furniture, domestic animals or pets.

SYMBOLS	
O PROHIBITED!	○ PROHIBITED! Indicates prohibited actions. Detailed instructions would be indicated on the inside of the circle or around the symbol in figures or in writing.
IMPORTANT	● IMPORTANT Indicates mandatory actions. Detailed instructions would be indicated on the inside of the circle or around the symbol in figures or in writing.
△ CAUTION	△CAUTION Recommends to take precautions. Detailed instructions would be indicated on the inside of the triangle or around the symbol in figures or in writing.

* To use

	Instruction	Prior to use, the water purifier must be properly assembled and instance of accordance with this manual. It may damage to the water purifier and cause danger.	alled in
fl	Away from lammable materials	Do not use the water purifier near a material with high volatility which is easily ignited or exploded. It will cause explosion or fire.	
	Prohibit	Do not use an extension cord with the water purifier. It may cause electric shock or fire due to heat.	7.00
	Electric shock	Do not use damaged power lines, power plug or loose power socket. It may cause electric shock, fault, fire or injuries.	0
	Instruction	Make the water purifier on a solid level surface. It may cause the water purifier to fall and tumble down.	

Prohibit	Do not immerse cord, plug, or any other part of the water purifier in water or other liquids. It may cause electric shock or fire.
Away from children	Do not operate the water purifier by weak people (including children) which are reduced physical, sensory, mental capabilities, nor inadequate experience and knowledge, unless sufficient instructions have been given by the person who can guarantee the safe use of the water purifier. It may cause electric shock, damage, or malfunction.
Away from children	Children should be supervised to ensure that they do not play with the water purifier. It may cause electric shock, damage, or malfunction.
0	Use outlet with rated voltage AC 220-240V, and don't use multiple outlets. It may cause a fire or an electric shock.
No dis-assembly and repair without permission	Do not damage power line. Do not damage, cut, process power line or bend, pull, twist or bind power line. Besides, do not yank the power line violently, or put weights on the line or clamp the power line. The power line may be damaged and cause fire or electric shock if the power line is damaged, the damaged line must be replaced by the manufacturer or its service agent or personnel having similar qualification, so as to prevent dangers.
Insert plug	Insert the power plug securely to the base and let the cord go downward. If the cord goes upward or if the plug is incompletely inserted, it may cause fire due to electric leakage or heat generation.
Wipe off dust	Wipe off dust or dirt accumulated on the plug of power line. The accumulated dust or dirt may cause fire, electric shock, or short circuit.
No modification	Do not disassemble, remodel, modify and repair the water purifier. This may cause fire, electric shock or fault, and cause injuries. If repair is required, please contact with the vendor of the water purifier.
0	Do not place anything on the water purifier. It may cause fire, electric shock or injuries.
Care for cleaning	To clean the water purifier, use the soft cloth moisten by the neutral detergent diluted with water. Do not use the insecticide, Thinner, Benzine, chlorine or acid lotion. It may cause crack, electric shock, fire, or deleterious gas.
No freeze	Do not freeze. It may cause leakage or other malfunctions. Reverse osmosis membrane filters will be damaged below 0° C.
0	Do not fill undrinkable water to the tank of water purifier. This water purifier is exclusively for the tap water with known ingredient. It may damage health or cause trouble.

\Diamond	Do not switch on if there is a possibility that the water in the heater is frozen.
\Diamond	Power connections must be made with reliably grounded devices.

A CAUTION

Prohibit	Do not use outdoors. Keep the water purifier at dry place and away from direct sunlight. It may cause fire or malfunction. Also the body of the water purifier may change color, deform and breeds moss and fungus.
No pulling by force	When disconnecting the plug from the socket, do not pull the power line by force. Pull out by grasping the power plug. It may cause electric shock or fault and cause injuries.
Application environment	Indoor use only. This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
Application range	The water purifier usage temp range is between 4 °C ~ 38 °C. Do not use the water purifier out of usage temp range. The flow rate will be reduced when the environmental temp gets lower. This is the inherent feature of RO membrane. This product is only suitable for safe use in the area below 1500 meters above sea level.
Away from fire	Do not place the water purifier close to fire. It may damage to the water purifier and cause fire.
Prohibit	Do not put anything on the water purifier, also do not lean, shake and push the water purifier. It may damage to the water purifier and cause injury, leakage, electric shock, fire or others.
No water spraying	Do not install the water purifier in where the water jet washer is used. It may cause electric shock or fire due to an insulation deterioration.
\Diamond	Stay away from the fire source above 30cm. It will cause fire or machine damage
\Diamond	Do not reset the filter except to replace expired filters or to stop using them for long periods. It may cause adhesion of germs or water leakege.
\Diamond	Do not connect hot water pipe of water heater to the water inlet. Reverse osmosis membrane filter will be damaged above 38℃.
0	When water leakage remove the water tank and unplug the power cord as soon as possible. Leakage can cause other damage. Please contact teh local service center.

0	Replace the filter regularly. The filter change lamp will flash when the filter need to change. Please see page 10 for 4-2 Filter Change.	
\Diamond	Do not install close to strong magnetic devices. It may cause fire, damege or circuit failure.);
•	The water purifier shall be installed or removed by professional. It's easy to damage the inner parts or cause electric shock.	
0	It's normal that there will be slight noise and vibration when the water purifier is producing water.	
0	In order to avoid a hazard due to inadvertent resetting of the thermal cut- this appliance must not be supplied through an external switching device as a timer, or connected to a circuit that is regularly switched on and off b utility.	, such

* To inspect and maintain


<u> </u>		
No dis-assembly and repair without permission	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard. It may cause fire, electric shock.	
Prohibit	Do not clean the water purifier with high water pressure equipment. It may cause electric shock or fire due to an insulation deterioration.	
Disconnect power plug	Make sure the water purifier's power plug disconnects from the power outlet before clearing or inspect the water purifier. It may cause electric shock.	
Instruction	Disconnect the power plug from power supply immediately and call for service when: - burnt smell from the water purifier - abnormal phenomenon happens. It may cause short circuit, fire or electric shock.	

A CAUTION

Certified technician	Service should be performed only by a certified technician. It may damage to the purifier and cause electric shock.	
Indoor	Do not use the water purifier outdoor. It may cause malfunction, fire or electric shock. And also it may cause the water purifier body color changed, deformation, growth of moss or contamination.	
Do not operate the UV-C emitter when it is removed from the appliance enclosure.		
Instruction	This appliance contains a UV-C emitter.	


Prohibit	Unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in little doses, cause harm to the eyes and skin.
Prohibit	Appliances that are obviously damaged must not be operated.
Instruction	The user is not allowed to replace the UV-C emitter individually.
Prohibit	Disconnect the appliance from the supply before carrying out maintenance.
Instruction	The appliance is to be supplied through a residual current device (RCD) that rated residual operating current does not exceed 30 mA.

1-2 Packing list

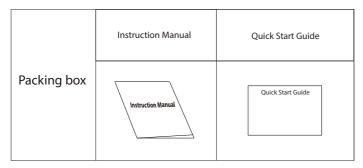

2. Product Introduction

2-1 Name of parts

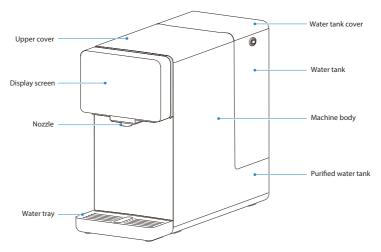

2-2 Control panel



Button instructions

6 Water temp options

- 93°-99° Boiled water
- 80°-85° Green tea
- 58°-62° Honey water
- 53°-57° Warm water
- 46°-50° Formula milk
- Ambient water

Water shortage

If the raw water tank is lack of water, the indicator keeps on;

If the purified water tank is lack of water, the indicator flashes, and water cannot be discharged at this time.

Standby and wake up

The whole machine enters the standby state and screen is off if it is not operated for 3 mins;

In standby state, the machine can be waked up by pressing any key.

200ml Quantitative state

Click the Quantitative button, it turns on, the machine enters the quantitative water output mode, and quantitative output is 200 mL;


Click the Quantitative button, it turns off, the quantitative mode is cancelled.

Replace the filter


With the use of the filter, the three small grids for reminding the filter life will turn off one by one. When the filter life expires, the three grids will flash synchronously to remind the user to replace the filter;

After replacing the filter, hold the Filter reset button for 3 seconds to reset the filter life.

2-3 Water treatment process diagram

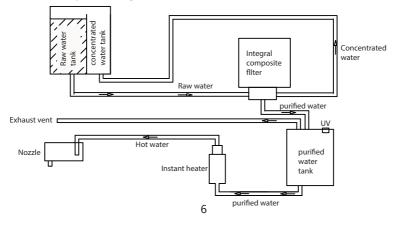

2-4 Electric schematic diagram

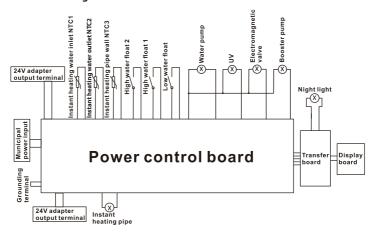

2-5 How to use



The installation shall be conducted by professional in local sell on commission and service site.

First use instruction

1. Open the package, place it on the level table, and install the water tray.



- 2. Steps of taking out the water tank:
- 2.1 Remove the water tank cover;
- 2.2 Lift the handle of the water tank and pull the water tank out, and then lift it out after it is disconnected from the base.



3. Fill Water:

Add tap water to the raw water tank (the larger one).



- 4. Install the water tank:
- 4.1 Align the water tank with the socket on the base and press it down;
- 4.2 After the water tank is pressed tightly, push the water tank to the side of the machine body;
- 4.3 Install the water tank cover, at this time, the top of the water tank cover is flush with the top of the machine body.



 
5. Start to produce water:

During the water production process, if the "Water Shortage" indicator is on, please pour out the remaining water in the water tank, fill the raw water tank with tap water, and repeat the above steps.



6. After the completion of water preparation, the internal pipeline is cleaned by emptying the internal water tank.


Internal emptying: In the standby state, hold the "Ambient Water" and "Formula Milk" buttons at the same time for 3 seconds to enter the drainage mode; At this time, the Ambient water icon flashes, and other icons keep on. Press the Ambient water button or wait for 3 minutes after draining out water, it will automatically exit the drainage mode. When used for the first time, it is necessary to fill the raw water tank to clean the water purifier, repeated operation 3-5 times.



7. When first use the machine, after filling water in raw water tank, water purifier will repeat the above procedures until the purified water tank is full. That is normal. If there is fully filled purified water tank, machine will enter the standby state.

8. Take water:

 8.1 Click any icon to light up the screen, the screen activation time is 3 mins.




8.2 Ambient water

After the screen is on, the temperature is automatically selected as Ambient water, click the Water Outlet button to discharge the water.



8.3 Other options

 Select the corresponding temperature, and press the Water Outlet button to take water.



3. Troubleshooting

⚠ Notes:

The following is the judgment and inspection of common abnormalities. If simple treatment cannot be eliminated, please send it to the maintenance office for consultation. Please do not disassemble and repair yourself to avoid danger or damage to the water purifier.

- The pump may make slight noise when it operates in the purifying and filtering of the water purifier. You can use it normally.
- If there is any problem in using, please solve as the following methods. For the fault that can not be solved, please contact the local sell service center.

Issues	Troubleshooting
No power supply	Please check if the power is connected.
Failure to heat normally	 Please check whether the supply voltage meets the requirements of 220-240V±15%.
	Please check whether the water tank is installed in place and whether there is water in the raw water tank.
Failure to heat normally	• Please check that the filter is installed in place and the filter cover is in the correct position.
,	Please check whether the water tank and the water inlet connected to the water tank are blocked by foreign objects.
	Please check if the filter life is expired.
The machine does not stop water production for a long time	Please check if the filter life is expired.
	Please check whether the water tank is installed in place.
Water leakage	Please check that the filter is installed in place and the filter cover is in the correct position.
	• Replace the filter.
Odor	● To ensure cleanliness, please clean the machine regularly. When it is not in use for a long time, please pour out the water in the water tank, and hold the "Ambient Water" and "Formula Milk" buttons for 3 seconds to drain all the water in the purified water tank.
The screen does not turn on and the machine cannot be operated	Please unplug the power plug and power on again.

4. Filter Introduction

4-1 Filter introduction

Filter name	Quantity	Filter form	Suggested service life	Function	
Integrated multiple filter(FIST)		PAC layer	12-24 months	Effectively filter mud, sand, rust, suspended solid and other large-grained substance and organic and residual chlorine.	
		RO membrane layer		The theoretical filtering precision of RO membrane filter element is up to 0.0001-0.001 micron. RO membrane filter intercept organics (trichloromethane and carbon tetrachloride), heavy metal (arsenic, lead and cadmium etc.) in water.	
		Carbon block layer		Effectively filter organics (trichloromethane and carbon tetrachloride), remaining chlorine, odour and peculiar smell etc. in water.	

Special Prompt:

- The lifespan of filter element is not quality guarantee time, but the ideal lifespan of filter with the raw water in accordance with the national standard of domestic drinking water and based on the normal water using of a common family.
- The maintenance period of filter is expected time, but the real lifespan is depend on area, the quality of water, the quantity of water using and season(it is subjected to the suggestions of local sell on commission and service site). Only change filter timely, you can drink clear water.

4-2 Filter change

Notes:


- The filter can be replaced by yourself or contact with Toshiba service.
- A small amount of residual water may flow out during the process of replacing filter, which is normal.
- Filter model: FIST.
- 1. When all of the three grids of the filter life flash, please contact with Toshiba service for purchasing new filter.



2. The power must be cut off before replacing the filter.



- 3. As shown below:
- ①Follow the steps shown below to replace the filter.

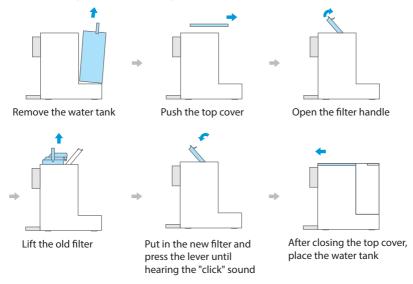

②After replacing the filter, hold the Filter Reset button for 3 seconds to reset the filter life.



5. Technical Parameters

5-1 Basic parameter

Model	TWP-TSR75SHK(W) / TWP-TSR75SHK(M)		
Rated voltage/ frequency	220-240V~ / 50Hz		
Rated hot water capacity	≥90°C, 20L/h		
Rated power	2190W		
Rated quantity of pure water	2500L		
Purified water flow	0.2L/min		
Inlet water pressure	0.05-0.1MPa		
Work pressure of RO membrane	0.45-0.8MPa		
Suitable water resource for using	Municipal water		
Applicable ambient temperature	4-38℃		
Exterior colors	White / Dark Grey		