

# TOSHIBA



## 使用說明書

真空吸塵機（家用）

VC-CL3000XBF

## 目錄

### 產品介紹

注意事項	3
各部位名稱	4
指示燈說明	6

### 使用說明

充電	7
清掃	8
附件使用	9

### 清潔保養

塵杯清潔	10
電動地刷清潔	13
其他清潔	14

### 故障排除及規格售後保養

排除不正常情況	14
產品中有害物質的名稱及含量	15
電池	16
產品廢棄	16

## 產品介紹

### 注意事項

- 為了正確並安全使用本產品，請在使用前仔細閱讀並充分理解此使用說明書。閱讀後請妥善保管，以便隨時瀏覽。
- 請勿將吸塵機接近熱源、輻射或者燃燒的煙蒂，嚴禁吸進下列物件：
  1. 水及溶劑等一切液體。
  2. 石灰、水泥灰等建築粉塵及垃圾。
  3. 發熱物體、如未熄滅碳頭、煙蒂。
  4. 銳利碎片，如玻璃等。
  5. 易燃易爆物品，如汽油或酒精製品。
- 切勿讓小孩玩弄或操作吸塵機、以免發生意外；
- 你的吸塵機是一部電器：其必須按照正常使用條件進行使用，切勿讓吸塵機在無人看管的情況下獨自運轉；
- 清潔、維修或暫時不用吸塵機時、必須切斷電源；
- 切斷電源：不可拉扯電源線，須用手拿住插頭塑料部位拔下插頭；
- 檢查確認供電電壓必須與吸塵機充電電壓一致；
- 吸塵機的電源線，不要讓其穿越鋒利的物品，以免損壞電源線；
- 切忌將吸塵機浸入水中，避免接近發熱器具或暴曬，以免發生火災；
- 切勿通過拖拉電源線以移動充電座；
- 出現下列情況時，請勿使用吸塵機，並及時送至敝公司指定的維修部檢修：
  1. 發生跌落並出現明顯損壞或運轉不正常；
  2. 電源線破損。
- 避免在吸入口堵塞的狀態下長時間運作，以免電機損壞及吸塵機發熱變形；
- 搬運過程中不得按下集塵器按鈕，以防集塵器鬆脫掉落砸傷。
- 本產品不適用與下列人群：兒童，行為能力、感知能力受限的人士，有精神障礙的人士，以及缺乏操作本產品的必要經驗和知識的人士。上述人群需在負責其安全的監護人之監督或指示下，方可操作本產品。應當採取監督措施，確保兒童不會將此產品用作玩具玩耍。

### 充電注意事項




- 在以下情況中，充電時間可能延長：
  1. 在室溫超過35 °C 以上或低於5 °C 的場所充電時；
  2. 停止運作後，立即充電時。
- 不管使用時間長短，清掃結束後請進行充電。
- 不充電時，建議將充電器及時拔下。
- 如果你的機器長時間（2 個月以上）不使用時，請將電源插頭拔下，但為了保證電池壽命，
- 每 2 個月需將其充滿電一次。  
充電過程中、機體或電源適配器可能出現發熱、屬正常現象、請放心使用。
- 只能使用本產品提供的適配器對電池包進行充電。



# 產品介紹

## 各部位名稱

- ① 主機
- ② 延長管
- ③ 電動地刷
- ④ 充電支架
- ⑤ 電源適配器
- ⑥ 床鋪刷
- ⑦ 組合吸刷
- ⑧ 扁吸
- ⑨ 集塵器清潔刷

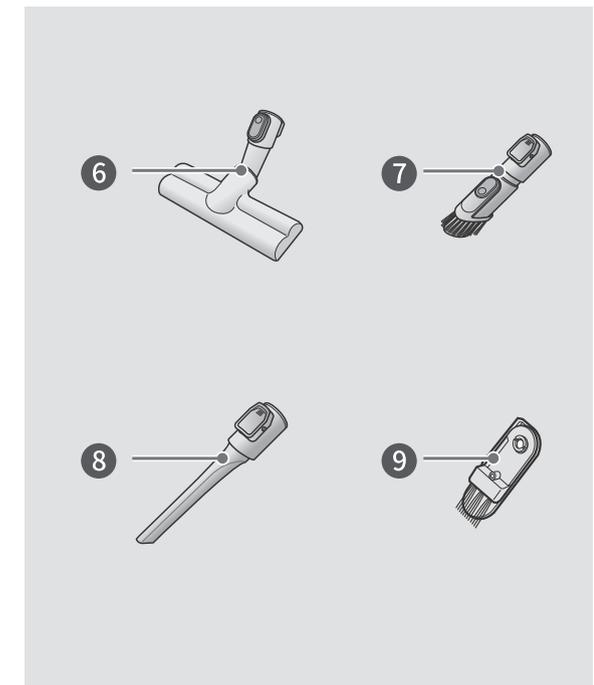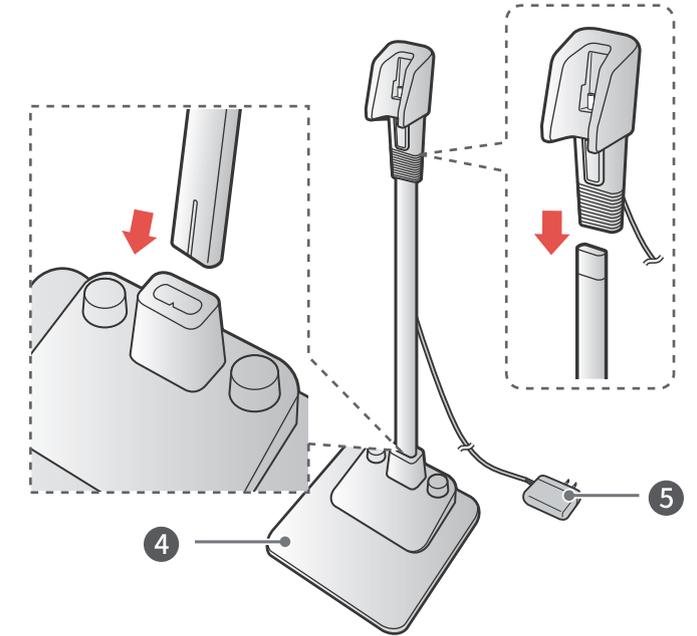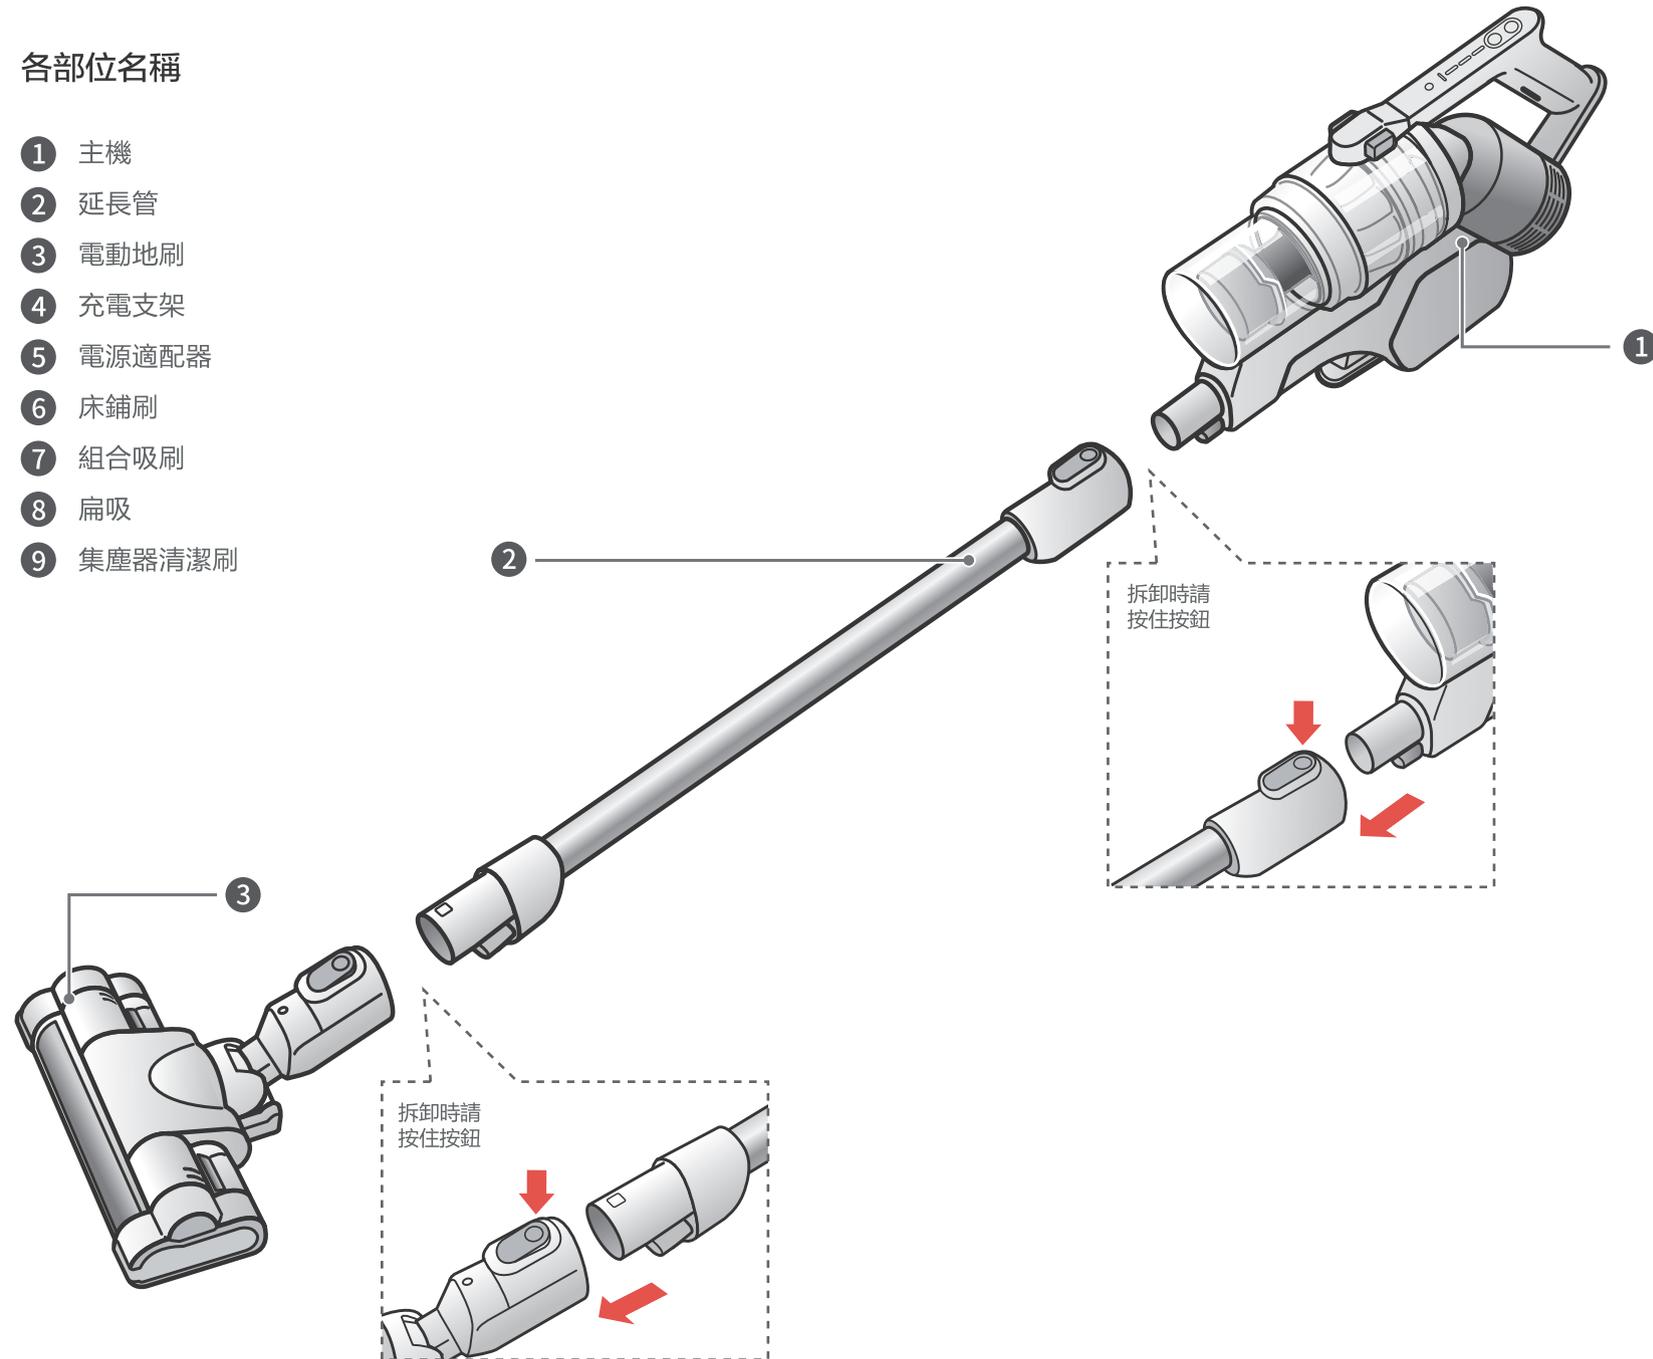


## 產品介紹

### 指示燈說明

- 灰塵感應 / 充電 / 運轉指示燈

功能	狀態	指示
灰塵感應	- 吸入灰塵 - 無灰塵吸入	- 亮燈 - 滅燈
充電指示	- 電量不足 - 充電中 - 電量充滿	- 閃爍 - 亮燈 - 滅燈
運轉指示	- ECO 標準 - Boost 強 - Auto 自動	- 指示燈 1 亮 - 指示燈 1.2.3 亮 - 指示燈 1.2 亮 (無灰塵吸入) - 指示燈 1.2.3 亮 (有灰塵吸入)

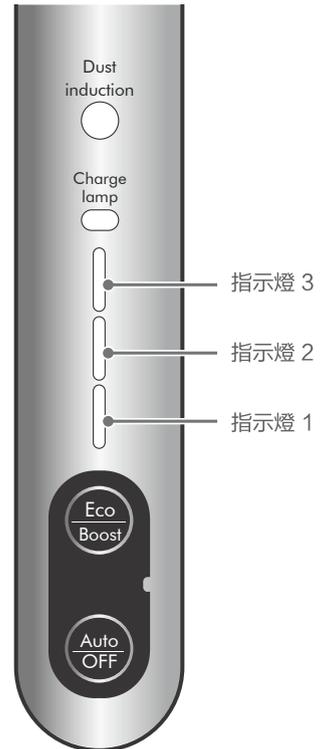

- 電動地刷自動啟停功能


電動地刷從地面抬起運作暫停，放回地面上後會再次開始運作。

## 使用說明

### 充電

出廠時電池未充電，在使用前請務必將電池充滿。

將機器放置在充電支架上，觀察到充電指示燈點亮即開始充電，約需要 3.5 個小時完全充滿。

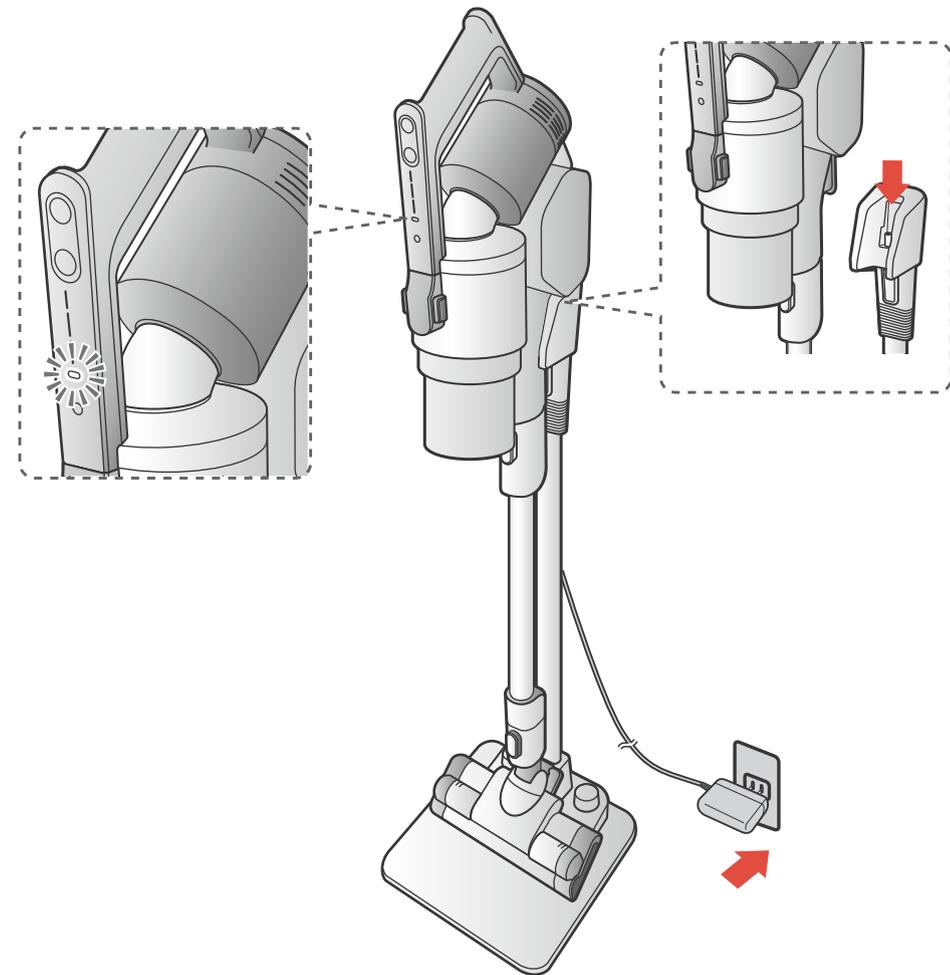

### ⚠ 注意 Caution


1. 充電過程中無法使用，如需使用請將機器從充電支架上取下；
2. 以上高溫請避免在 35 °C 以上高溫，或 5 °C 以下低溫環境下進行充電；
3. 如果你的機器長時間（1 個月以上）不使用時，請將電源插頭拔下，但為了保證電池壽命，每 6 個月需將其充滿電一次。

## 使用說明

### 清掃

開始清掃前、請先清理大塊垃圾、如石塊、包裝膜等、以防堵塞風路或刮傷機體。

1. 將機器從充電支架上取下；
2. 按下[Eco/Boost]/[標準/強]或[Auto/Off]/[自動/關]進行清掃；

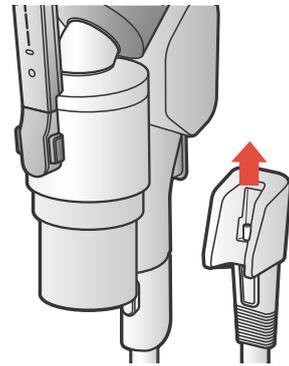

#### • 吸力選擇

**Eco 標準**：適用於長時間清掃；  
使用強模式會操作困難的場合，如窗簾清潔等；

**Boost 強**：適用於垃圾較多的情況；

**Auto自動**：可根據清掃場所的垃圾狀態，自動調整吸力。




3. 清掃結束後，按下[Auto/Off]/[自動/關]按鈕結束運作。

## 使用說明

### 附件使用

附件	使用場境	互配	
		主機	延長管
電動地刷	日常地毯地板等	✓	✓
扁吸	縫隙、狹窄部位	✓	✓
組合吸刷	桌子及櫥櫃等	✓	✓
床鋪刷	棉被等床具	✓	✓
集塵器清潔刷	集塵器清潔	×	×

- 附件可以安裝在主機和延長管上

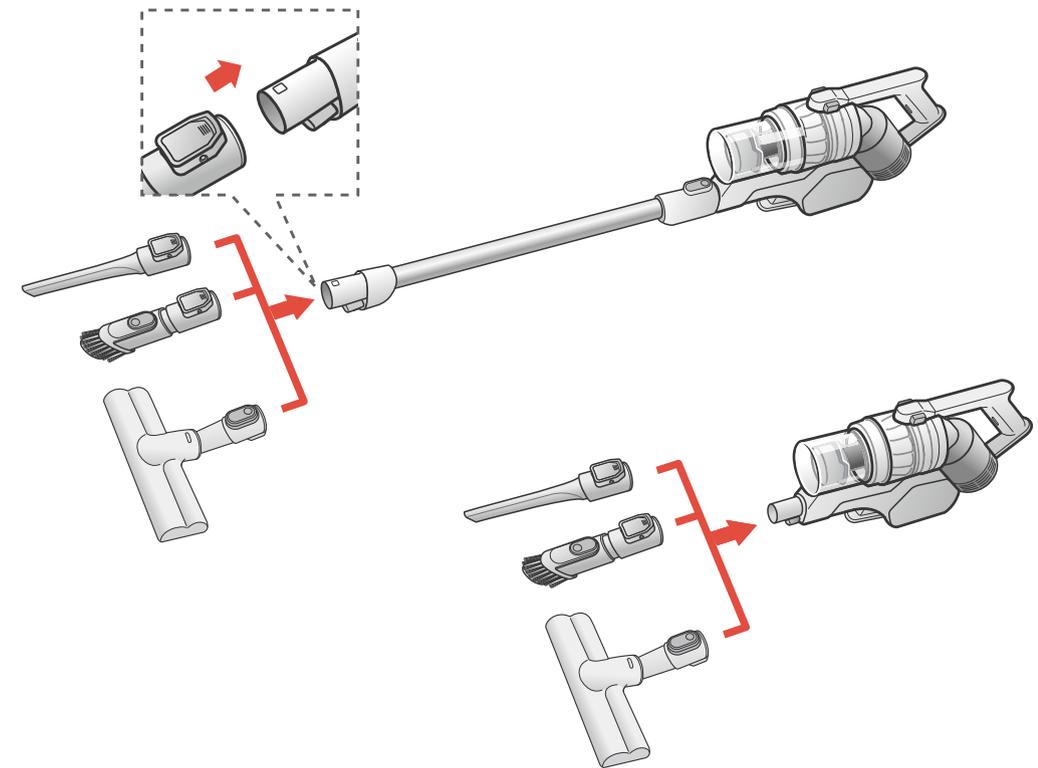


## 清潔保養

### 塵杯清潔

為了保持吸力，結束清掃後，請定期清理垃圾。

- 1 取出集塵器：使機體處於直立的狀態，按壓集塵器按鈕取下集塵器。
- 2 拆下集塵器：逆時針旋轉下塵杯至開鎖符號位置，然後取下
- 3 傾倒垃圾：吸入口朝上，對準垃圾袋或垃圾桶傾倒垃圾。

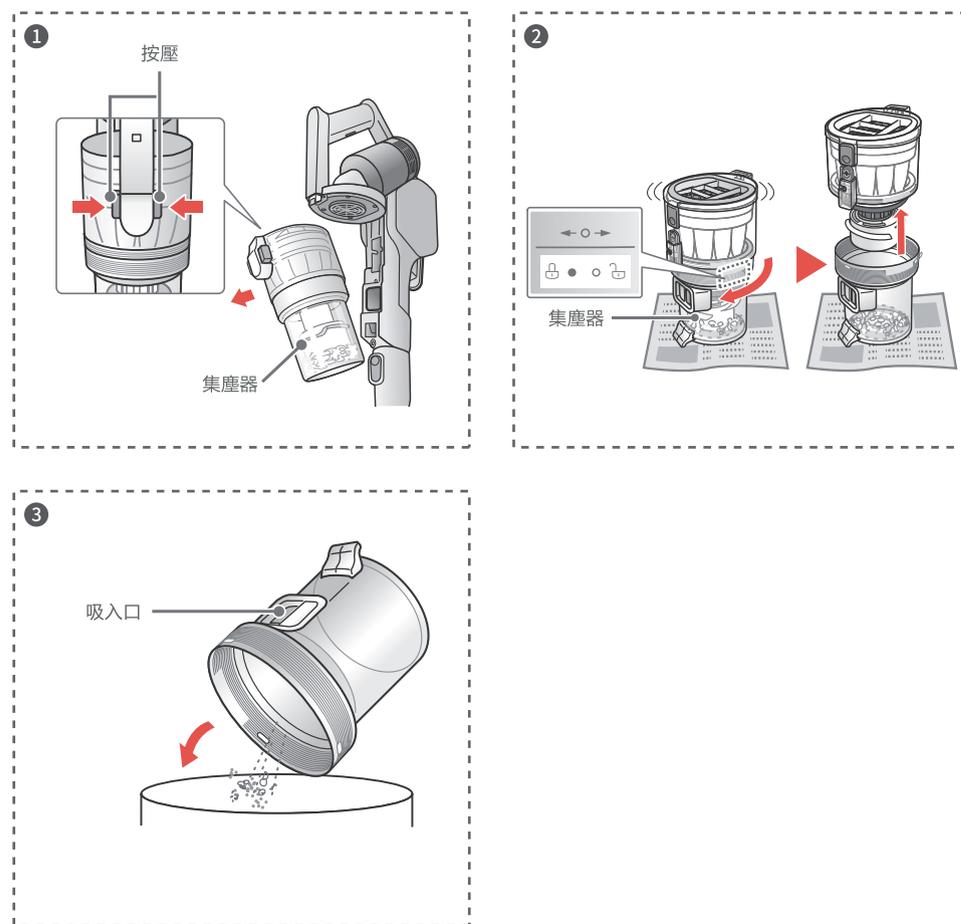

#### ⚠ 注意 Caution


請勿在整機橫放的時候取下集塵器，垃圾可能會灑落。

## 清潔保養

### 塵杯清潔

如經過上述步驟後吸力仍然較低，可以對集塵器進行水洗清潔。

- 1 拆卸部件
  - a. 按壓清潔按鈕，拆下過濾棉、塵杯過濾棉、塵杯過濾棉支架；
  - b. 拆下上塵杯和灰塵分離器（逆時針旋轉取下）。

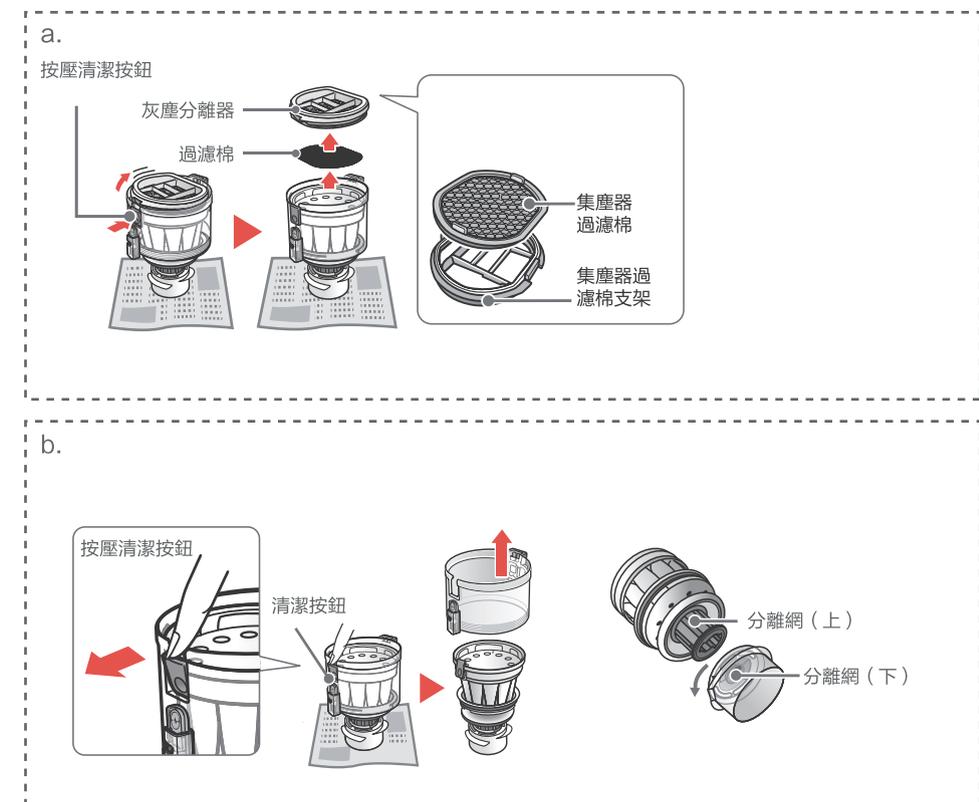


## 清潔保養

### 塵杯清潔

#### ② 灰塵清潔


使用清潔刷清理附著的垃圾。

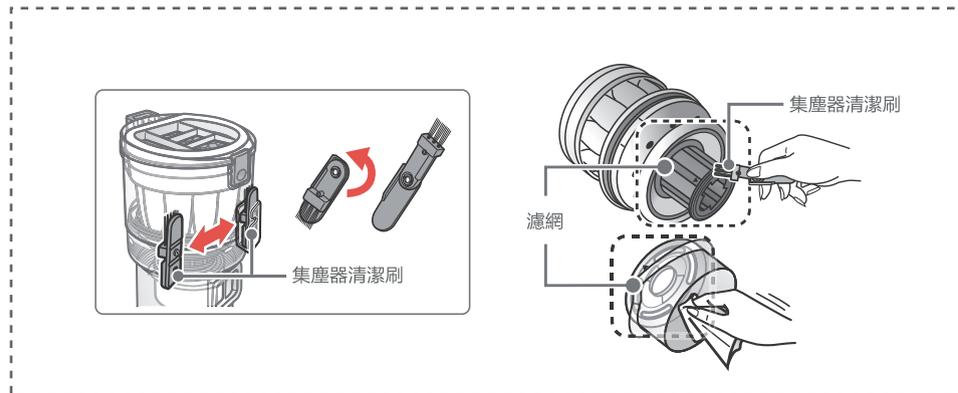

#### ③ 水洗清潔

a. 水洗各部件。

b. 甩乾集塵器過濾棉至無水沫飛濺後，再置於陰涼處晾乾。

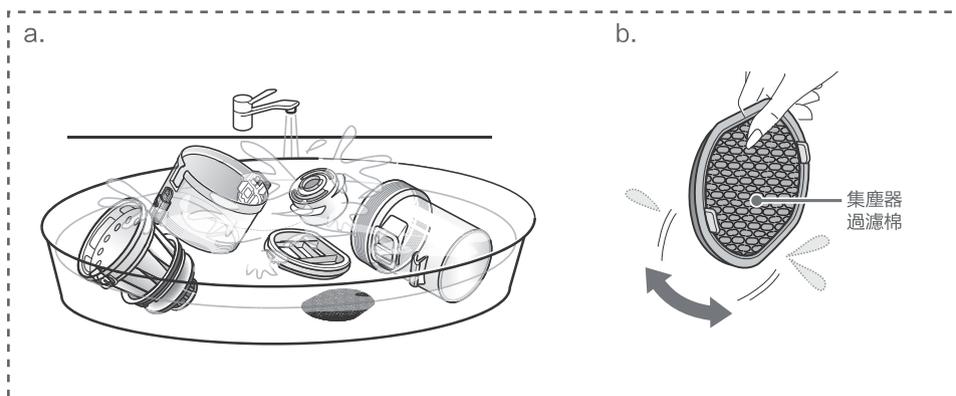

#### ⚠ 注意 Caution

1. 清潔時請勿使用洗潔精等清潔劑；
2. 水洗後務必完全晾乾方可裝回使用；
3. 切勿使用吹風機等進行烘乾；
4. 集塵器過濾棉屬於消耗品，如需更換請聯絡東芝售後進行更換。

## 清潔保養

### 電動地刷清潔

當滾刷、輪子被垃圾纏繞或髒污時、請進行清潔。

#### ① 拆卸地刷

a. 將左右拆裝卡扣沿著箭頭方向移動；

b. 拆下護蓋；



c. 拆下滾刷。

#### ② 清理垃圾

a. 用剪刀或者刀片剪斷並清理纏繞在滾刷部分的垃圾；

b. 用鑷子取出纏繞在輪子、自動停止裝置部位的垃圾。

滾刷可水洗，水洗後，請充分晾乾。

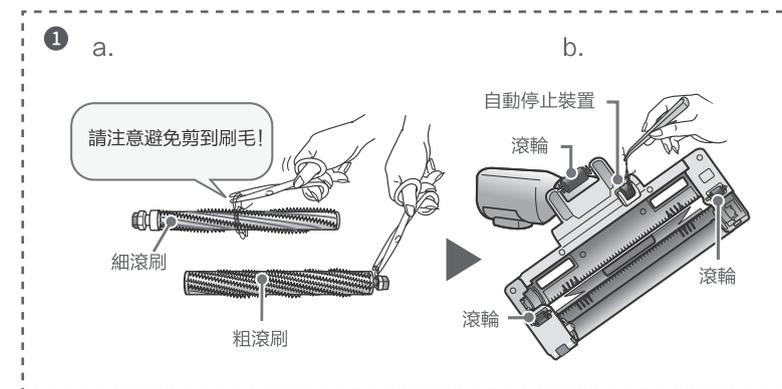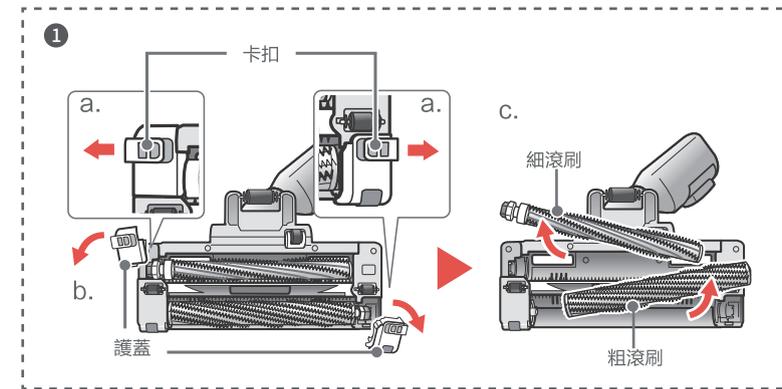

#### ⚠ 注意 Caution


1. 地板刷子的風路內有垃圾堆積的時候，請用舊的一次性筷子等除去；
2. 地板刷子的過濾部分積滿灰塵時，請用扁吸去除；
3. 除旋轉部和護蓋以外請不要水洗（否則會導致故障）；
4. 請不要在旋轉部的兩端注油（可能會導致旋轉不良）。

## 清潔保養

### 其他清潔

- 灰塵感應部位

灰塵感應燈不亮燈或不熄滅時，可能是灰塵感應部位髒污，請進行清潔。

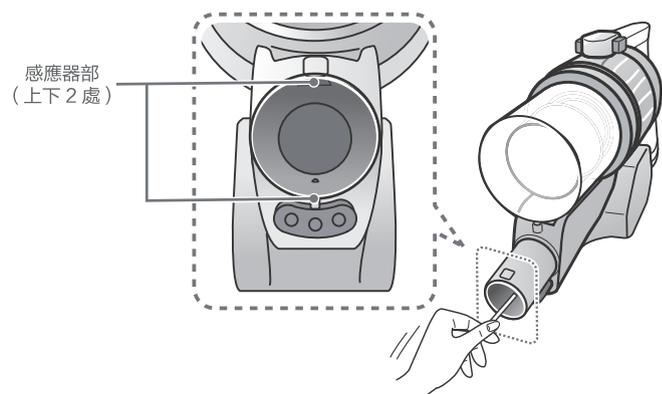

## 故障排除及規格售後保養

### 排除不正常情況

嚴禁私自改造機體或附件，嚴禁私自更換電源線或電池。

除專門維修技術人員外，請勿拆卸或修理本產品。



充電過程中不正常時，請拔掉電源插頭，約 15 秒後重新插入進行充電。

不正常情況仍未消除或者運作過程不正常時，請按下「關」停止運作，再檢查以下事項。

不正常情況	可能原因	處理方法
無法運作或突然停止運作	<ul style="list-style-type: none"> <li>電量不足</li> <li>電源插頭剛剛拔下，此時處於保護狀態</li> <li>集塵器濾網堵塞</li> <li>環境溫度過高或過低</li> </ul>	<ul style="list-style-type: none"> <li>充電後使用</li> <li>等待約 3 秒後運作</li> <li>請參閱第 12 頁操作</li> <li>請在適當環境內使用</li> </ul>
電動地刷滾刷不旋轉	<ul style="list-style-type: none"> <li>地刷自動開始或停止</li> <li>根據地毯的種類（電熱毯、長絨或絨毛密度較大的地毯），滾刷可能停止運作</li> <li>滾刷部位被大量線頭或毛髮纏繞</li> </ul>	<ul style="list-style-type: none"> <li>請參閱第 6 頁操作</li> <li>按下[Off]/[關]停止運作，再次啟動吸塵機</li> <li>清理毛髮後進行使用</li> </ul>

## 故障排除及規格售後保養

不正常情況	可能原因	處理方法
充電時指示燈不亮 / 閃爍	<ul style="list-style-type: none"> <li>充電線未牢固連接</li> <li>運轉停止後立即進行充電</li> </ul>	<ul style="list-style-type: none"> <li>重新連接充電線路</li> <li>為保護電路，請耐心等待</li> </ul>
充電時間變長	<ul style="list-style-type: none"> <li>環境溫度過高或過低</li> <li>使用結束後立即進行充電</li> </ul>	<ul style="list-style-type: none"> <li>請在適當環境充電</li> <li>為保護電路，請耐心等待</li> </ul>
運作時吸力變弱	<ul style="list-style-type: none"> <li>使用環境溫度過高且持續運轉</li> <li>使用[Auto] / 自動模式</li> <li>過濾網 / 吸入口被堵塞的狀態下持續運作</li> </ul>	<ul style="list-style-type: none"> <li>請在適當環境充電</li> <li>檢測到垃圾較少減弱吸力，並非不正常</li> <li>請清潔後使用</li> </ul>

### 產品中有害物質的名稱及含量

零部件名稱	中國 RoHS 管控物質或元素					
	鉛	汞	鎘	六價鉻	多溴聯苯	多溴二苯醚
電池	○	○	○	○	○	○
適配器	○	○	○	○	○	○
下蓋組件	○	○	○	○	○	○
上蓋組件	○	○	○	○	○	○
手柄	○	○	○	○	○	○
電機組件	○	○	○	○	○	○
集塵器組件	○	○	○	○	○	○
延長管	○	○	○	○	○	○
電動地刷	○	○	○	○	○	○
附件	○	○	○	○	○	○
電子電路	○	○	○	○	○	○

#### 備註：

- 本表格依據 SJ/T 11364 的規定編制。
- ：表示該有害物質在該部件所有均質材料中的含量均在 2011/65/EU 規定的限量要求以下。
- ×：表示該有害物質至少在該部件的某一均質材料中的含量超出 2011/65/EU 規定的限量要求。
- 本表中的有 × 的所有部件均符合歐盟的 RoHS 指令，即「歐洲議會和理事會關於在電子電氣設備中限制使用某些有害物質的第 2011/65/EU 指令」及其修正案。

## 故障排除及規格售後

### 產品規格

電池	Li-ion 25.2 V	2.2 Ah
集塵容量	0.2 L	
充電時間	約 3.5 小時 * 根據室溫和使用時間等會有所不同。	
放電時間	<b>Boost 強:</b> 約 10 分鐘 <b>Auto 自動:</b> 約 10 ~ 30 分鐘 <b>ECO 標準:</b> 約 40 分鐘 (含電動地刷) 約 60 分鐘 (不含電動地刷) (電池使用初期、室溫 20 °C) * 根據地面材質、清掃場所的垃圾量及使用環境會有所不同。	
充電輸入	100-240 V ~ 50 / 60 Hz 0.8 A	
充電輸出	28.7 V = 0.8 A	
電源線長度	1.85 m	

### 產品廢棄

除廢棄產品外，嚴禁私自拆卸電池，以免發生危險。


廢棄後的電池嚴禁再次使用。

電池包更換請找專業人士更換。

當你準備廢棄產品時，請務必嚴格遵循以下步驟操作。

請將電池電量耗盡後再進行拆解。

- 1 放電至不再運轉後，用螺絲批拆下 5 處螺絲，取出電池；
- 2 拆下電池與整機相連接的連接器（2 條），並用膠帶對連接器進行絕緣處理。

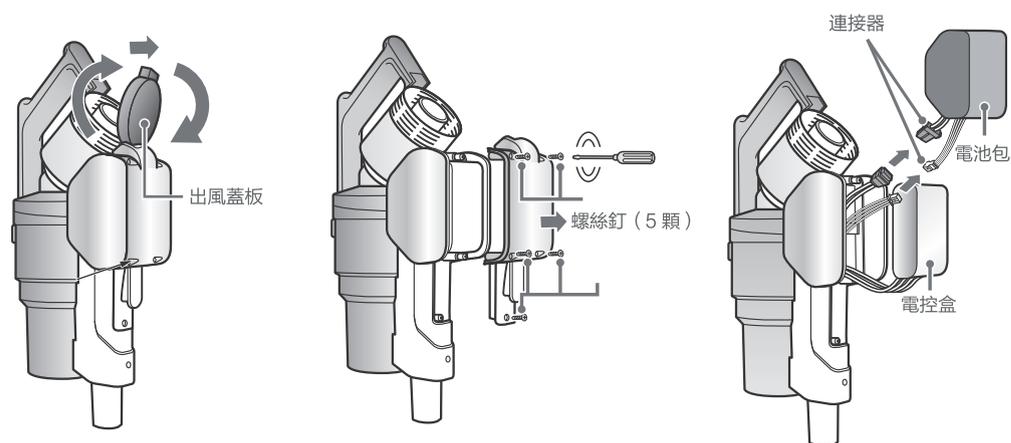

### 電池的回收利用

廢棄電池是重要資源。廢棄產品時，請勿隨意丟棄電池。

請依照政府法規對其進行妥善處理。

為了防止短路請務必在金屬端子部貼上膠布進行絕緣處理。

# TOSHIBA



**User's Manual**

Vacuum Cleaner (Household)

VC-CL3000XBF

# Contents

## Product Introduction

Precautions ..... 3  
Parts name ..... 4  
Description of Indicators ..... 6

## Instructions for Use

Charging ..... 7  
Cleaning ..... 8  
Accessories ..... 9

## Cleaning and Maintenance

Dust Cup Cleaning ..... 10  
Electric Floor Brush Cleaning ..... 13  
Other Cleaning ..... 14

## Troubleshooting and Specifications

Troubleshooting ..... 14  
Name and Content of Hazardous Substances in Products ..... 15  
Battery ..... 16  
Product Disposal ..... 16

# Product Introduction



## Safety Warning

### Precautions

- In order to use this product correctly and safely, please carefully read and fully understand this manual before use. Keep it properly for future reference.
- Do not bring the vacuum cleaner close to heat sources, radiation or burning cigarette butts, and it is strictly forbidden to suck the following objects:
  1. All liquids such as water and solvents;
  2. Building dust and garbage such as lime and cement ash;
  3. Heat-generating objects, such as carbon butts and cigarette butts that have not been extinguished;
  4. Sharp fragments such as glass, etc.;
  5. Flammable and explosive materials, such as gasoline or alcohol products.
- Do not let children play with or operate the vacuum cleaner in order to avoid accidents;
- Your vacuum cleaner is an electric appliance: it must be used under normal conditions, and unattended use is prohibited;
- Cut off the power before cleaning, repairing or when it is temporarily not in use;
- To cut off the power supply: Do not drag the power cord; hold the plastic part of the plug and pull it out;
- Check and ensure that the power supply voltage is consistent with the charging voltage of the vacuum cleaner;
- Do not let the power cord of the vacuum cleaner pass through sharp objects, so as to avoid damage;
- Never immerse the vacuum cleaner in water, and avoid close to heating appliances or exposure to the sun in order to prevent fire;
- Do not move the charging stand by dragging the power cord;
- Do not use the vacuum cleaner in the following situations, and send it to the service department designated by our company for inspection and repair in time:
  1. Drop occurs and there is obvious damage or abnormal operation;
  2. The power cord is damaged.
- Avoid running for a long time with the suction port blocked in order to avoid damage to the motor and deformation of the vacuum cleaner;
- Do not press the button of the dust cup during transportation to prevent the dust cup from falling off and causing injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.




### Charging Precautions

- In the following cases, the charging time may be extended:
  1. When charging in a place where the room temperature exceeds 35°C or below 5°C;
  2. When charging immediately after stopping operation.
- Regardless of the time of use, please charge it after cleaning.
- It is recommended to unplug the charger when it is not charging.
- If your machine will not be used for a long time (more than 2 months), please unplug the power plug. It is recommended to fully charge every 2 months in order to ensure the battery life.
- During the charging process, the cleaner body or power adapter may heat up. This is normal.
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

# Product Introduction

## Parts name

- 1 Main unit
- 2 Extension tube
- 3 Electric floor brush
- 4 Charging stand
- 5 Power adapter
- 6 Bed brush
- 7 Combination brush
- 8 Flat nozzle
- 9 Dust cup cleaning brush

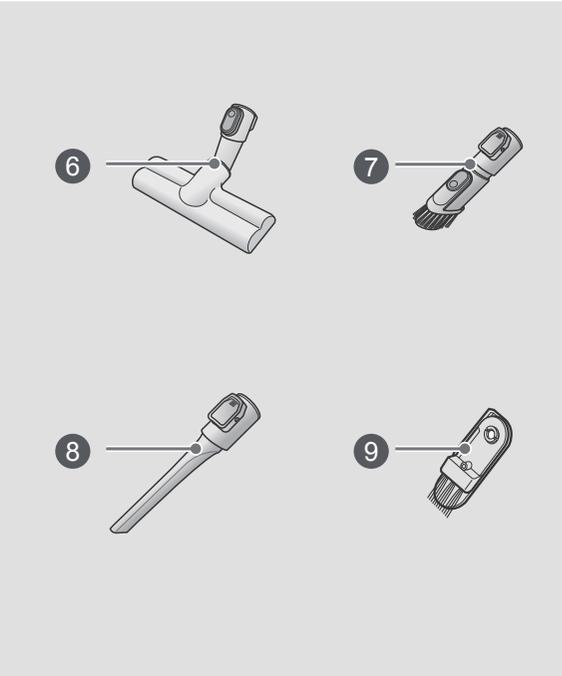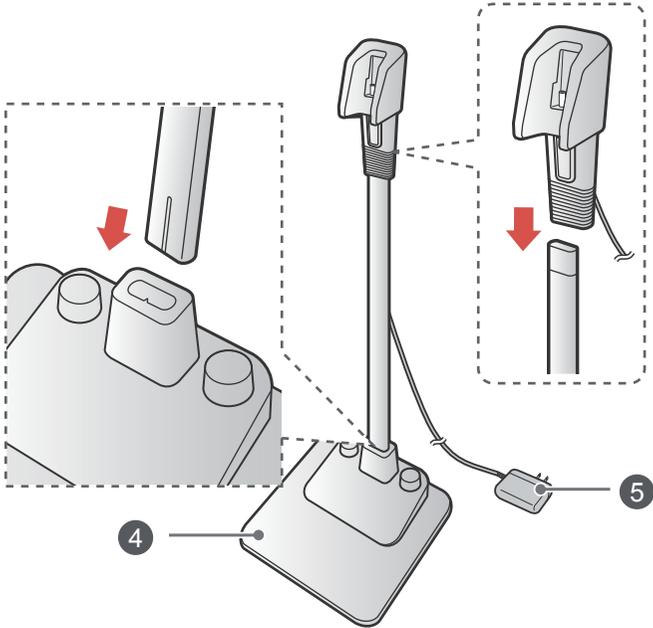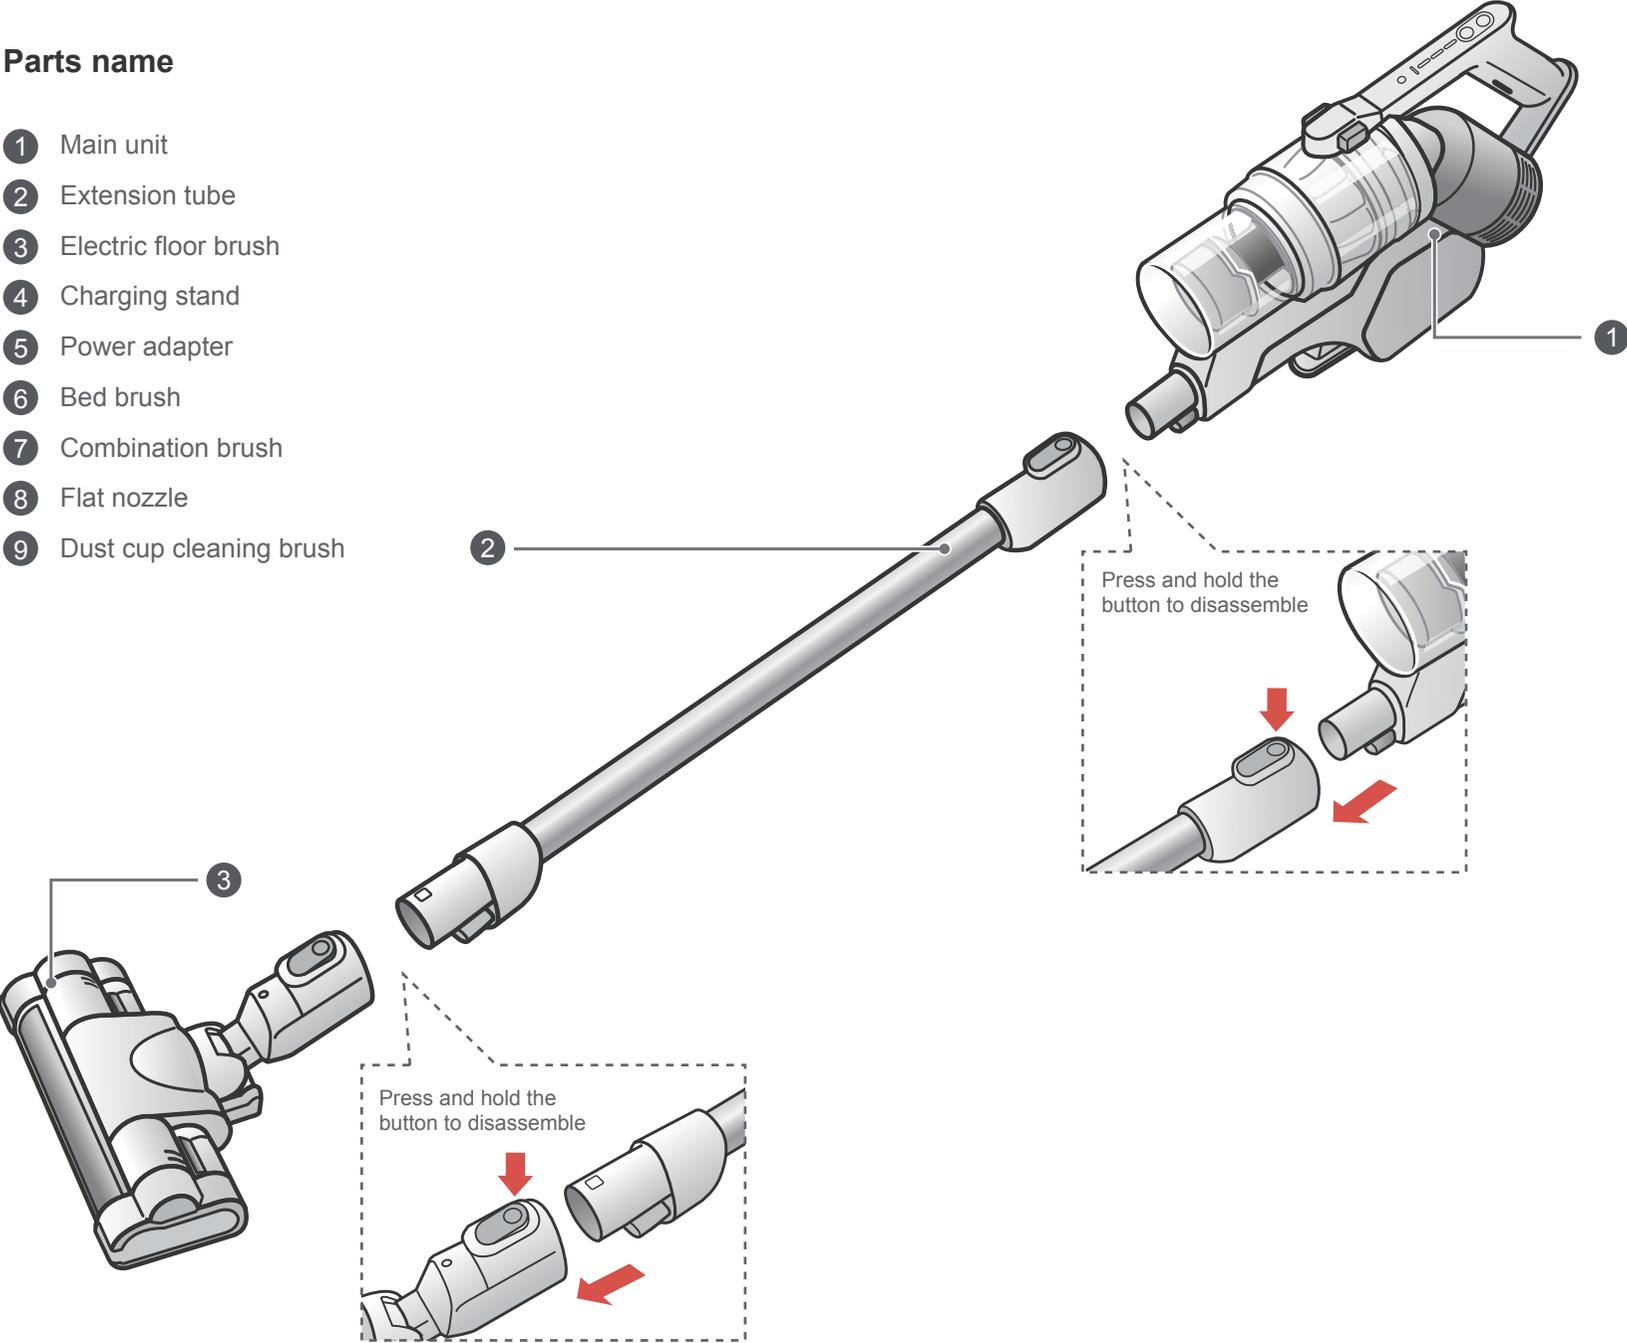


# Product Introduction

## Description of Indicators

- Dust sensing/charging/operation indicators

Function	Status	Indication
Dust sensing	- Dust sucked - No dust sucked	- On - Off
Charging	- Low battery - Charging - Fully charged	- Flashing - On - Off
Operation	- ECO - Boost - Auto	- Indicator 1 on - Indicators 1, 2, 3 on - Indicators 1, 2 on (no dust sucked) - Indicators 1, 2, 3 on (dust sucked)

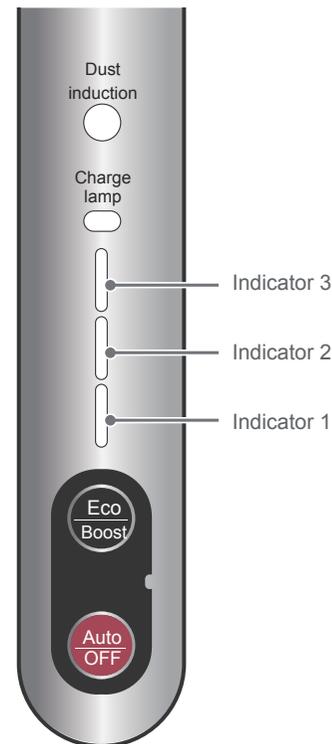

- Automatic start and stop function of electric floor brush


The operation is suspended when the electric floor brush is lifted from the ground, and the operation resumes when it is put back on the ground.

# Instructions for Use

## Charging

The battery is not charged when the product is delivered. Please be sure to fully charge the battery before use.

Place the cleaner on the charging stand and the charging start when the charging indicator light turns on. It takes about 3.5 hours to fully charge.

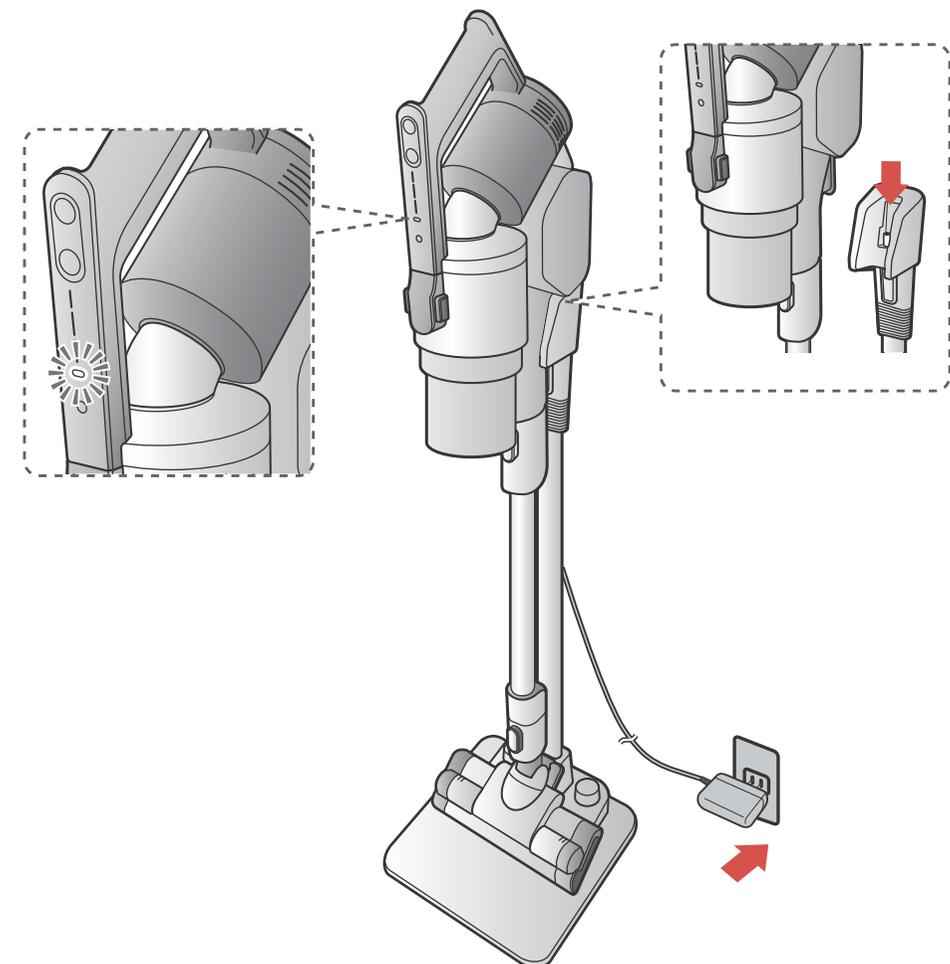

### ! Caution


1. The cleaner can't be used during the charging process. If you need to use it, please remove it from the charging stand;
2. Avoid charging in high temperature above 35°C or low temperature below 5°C;
3. If your cleaner is not in use for a long time (more than 2 months), please unplug the power plug; in order to ensure the battery life, it is recommended to fully charge it every 2 months;

# Instructions for Use

## Cleaning

Before you start cleaning, please clean up large garbage, such as rocks and packaging film, in order to prevent blocking the air duct or scratching the cleaner.

1. Remove the cleaner from the charging stand;
2. Press “ECO/Boost” or “Auto/OFF” to clean;

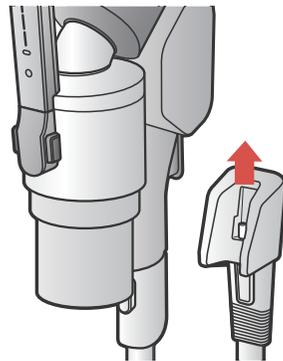

- Suction selection

ECO: suitable for long time cleaning;  
Occasions that difficult to operate in strong mode, such as curtain cleaning;

Boost: suitable for situations with a lot of garbage;

Auto: The suction power can be adjusted automatically according to the garbage of the place.




3. After cleaning, press “Auto/OFF” to end the operation.

# Instructions for Use

## Accessories

Accessories	Scenes	Interworking	
		Main unit	Extension tube
Electric floor brush	Carpet, floor, etc.	√	√
Flat nozzle	Gaps, narrow parts	√	√
Combination brush	Tables, cabinets, etc.	√	√
Bed brush	Bedding such as quilts	√	√
Dust cup cleaning brush	Dust cup cleaning	×	×

- Accessories can be installed on the main unit and extension pipe



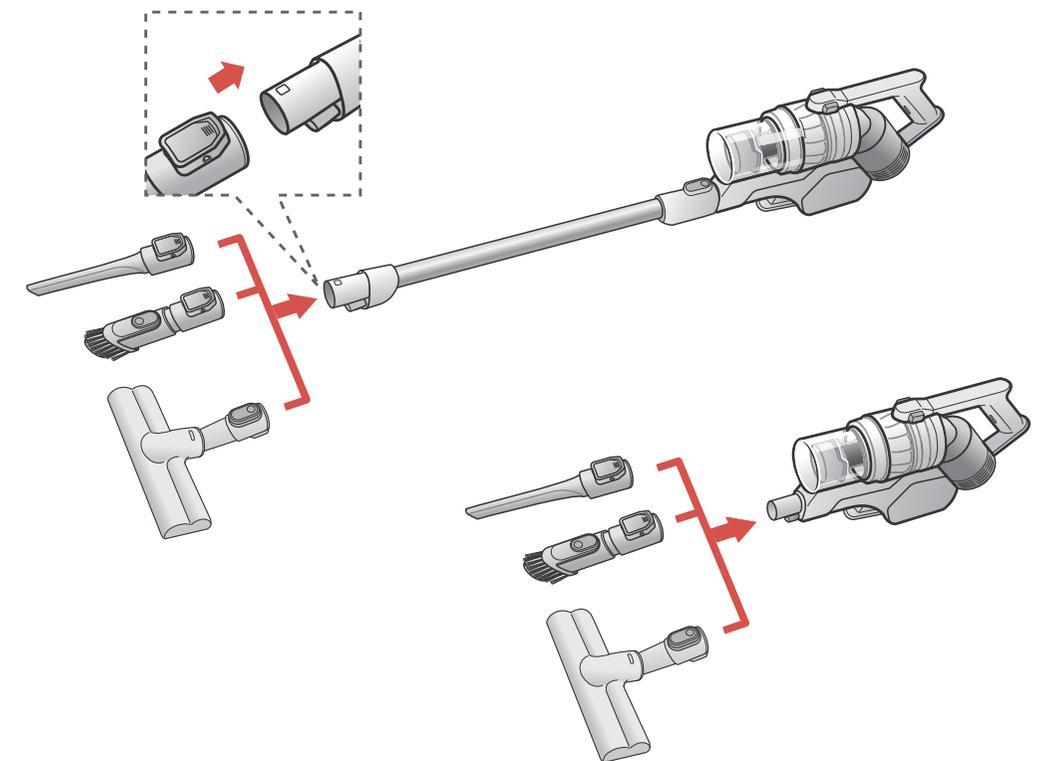


# Cleaning and Maintenance

## Dust Cup Cleaning

In order to maintain the suction power, please clean up the garbage regularly after finishing cleaning.

- 1 Take out the dust cup: Keep the cleaner in an upright state, press the dust cup button and take out the dust cup.
- 2 Remove the dust cup: Turn the dust cup counterclockwise to the (unlock symbol) position, and then remove it.
- 3 Pour out garbage: With the suction inlet facing upwards, aim at the garbage bag (bucket) to pour out the garbage.

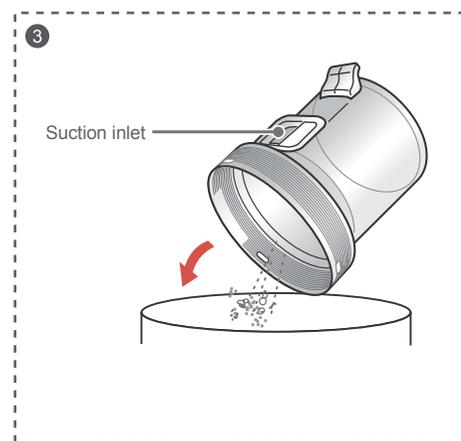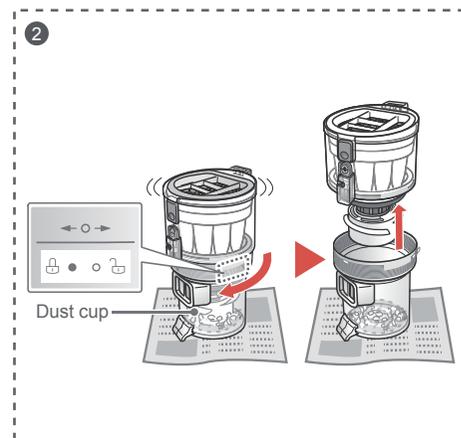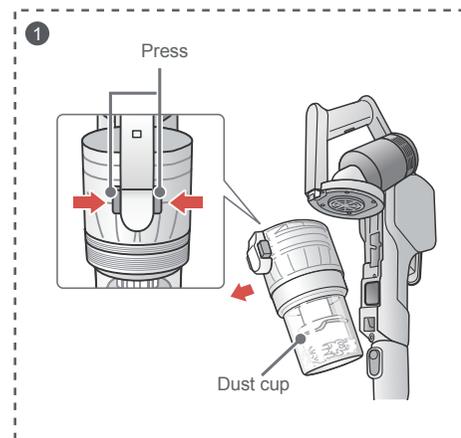

### Caution


Do not remove the dust cup when the cleaner is placed horizontally, or else the garbage may be scattered.

# Cleaning and Maintenance

## Dust Cup Cleaning

If the suction power is still low after the above steps, please wash the dust cup

- 1 Disassemble parts
  - a. Press the clean button to remove the filter, dust cup cotton filter, and dust cup cotton filter holder.
  - b. Remove the upper dust cup and separation mesh (bottom).

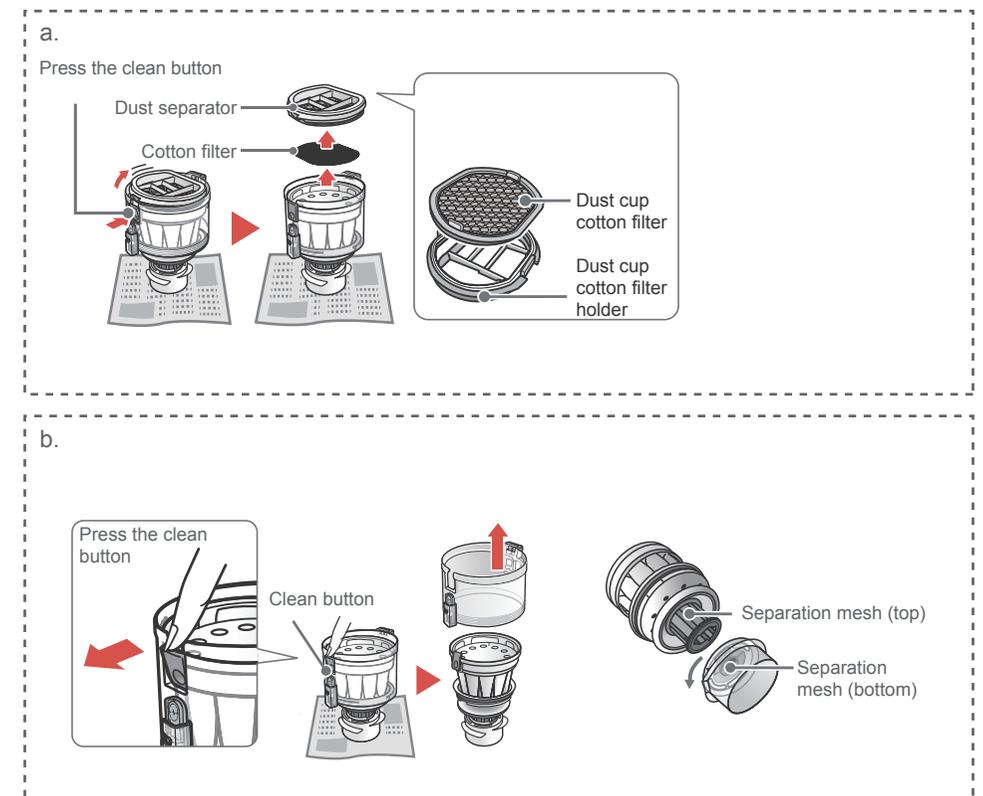


# Cleaning and Maintenance

## Dust Cup Cleaning


### 2 Dust cleaning

Use the cleaning brush on the dust cup to clean up the attached garbage.

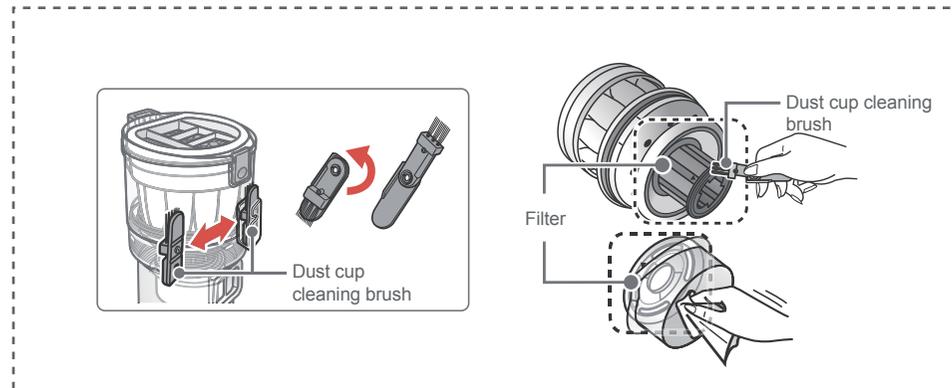

### 3 Washing

- Wash all parts with water.
- Dry the cotton filter of the dust cup until no water splashes, and then place it in a cool place.

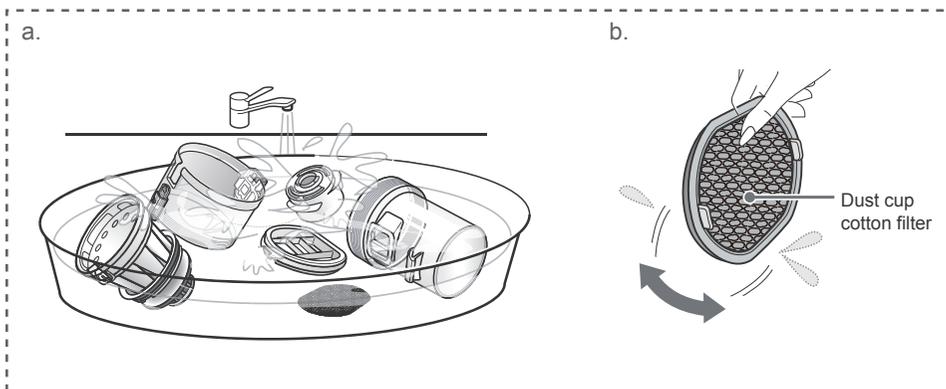

### ! Caution

- Do not use detergent or other agents for cleaning;
- After washing, it must be completely dried before putting it back into use;
- Do not use hair dryer for drying;
- The dust cup cotton filter is consumable. To replace it, please contact TOSHIBA after sales.

# Cleaning and Maintenance

## Electric Floor Brush Cleaning

Please clean the roller brush and wheels when they are entangled or soiled by garbage.



### 1 Remove the floor brush

- Move the left and right disassembly/assembly buckles in the direction of the arrow;
- Remove the protective cover;
- Remove the roller brush.

### 2 Clear the garbage

- Use scissors or a blade to cut and clear the garbage entangled in the roller brush;
- Use tweezers to take out the garbage wrapped around the wheels and automatic stop device.

The roller brush can be washed with water. After washing, please let it dry sufficiently.

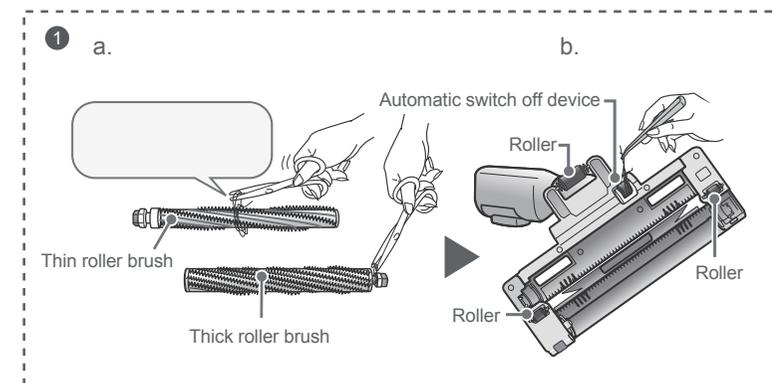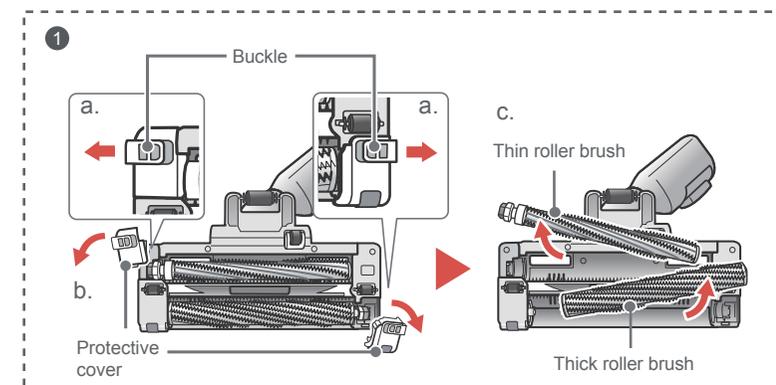


## Cleaning and Maintenance

### Other Cleaning

- Dust sensor

When the dust sensor light does not turn on or off, the dust sensor may be dirty, so please clean it.

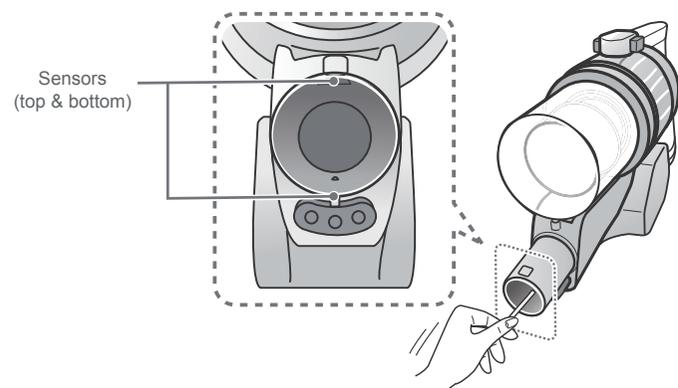

## Troubleshooting and Specifications

### Troubleshooting

**It is strictly forbidden to modify the cleaner or accessories without permission, and it is strictly forbidden to change the power cord or battery without permission.**



Except for specialized service technicians, please do not disassemble or repair this product. When an exception occurs during the charging process, please unplug the power plug and plug it in again after 15 seconds.

If the exception can't be eliminated or the operation process is abnormal, please press OFF to stop the operation, and then check the following items.

Problem	Possible causes	Solution
Do not run or stop running suddenly	<ul style="list-style-type: none"> <li>- Insufficient battery power</li> <li>- The power plug has just been unplugged and is now in a protected state</li> <li>- Dust cup filter is blocked</li> <li>- Ambient temperature is too high or too low</li> </ul>	<ul style="list-style-type: none"> <li>- Use after charging</li> <li>- Wait about 3s before running</li> <li>- Refer to P.12 for operation</li> <li>- Please use in a suitable environment</li> </ul>
Electric floor brush does not rotate	<ul style="list-style-type: none"> <li>- Automatic start/stop of floor brush</li> <li>- Depending on the type of carpet (electric blanket, long pile or carpet with high pile density), the roller brush may stop running</li> <li>- The brushing area is entangled with a lot of thread or hair</li> </ul>	<ul style="list-style-type: none"> <li>- Refer to P.6 for operation</li> <li>- Press "Off" to stop the operation and start the vacuum cleaner again</li> <li>- Clear the hair before using</li> </ul>

## Troubleshooting and Specifications

Problem	Possible causes	Solution
The indicator light does not light up/flash when charging	<ul style="list-style-type: none"> <li>- The charging cable is not firmly connected</li> <li>- Charge immediately after stopping operation</li> </ul>	<ul style="list-style-type: none"> <li>- Reconnect the charging cable</li> <li>- To protect the circuit, please wait patiently</li> </ul>
Charging time becomes longer	<ul style="list-style-type: none"> <li>- Ambient temperature is too high or too low</li> <li>- Charge immediately after use</li> </ul>	<ul style="list-style-type: none"> <li>- Please charge in a suitable environment</li> <li>- To protect the circuit, please wait patiently</li> </ul>
The suction power becomes weak during operation	<ul style="list-style-type: none"> <li>- The environment temperature is too high and continuous operation</li> <li>- Use automatic mode</li> <li>- Continuous operation when the filter/suction port is blocked</li> </ul>	<ul style="list-style-type: none"> <li>- Please charge in a suitable environment</li> <li>- It is normal that less garbage is detected and the suction power is reduced</li> <li>- Please use after cleaning</li> </ul>

### Name and Content of Hazardous Substances in the Product

Part name	Hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybromobiphenyl (PBBs)	polybrominated diphenyl ethers (PBDEs)
Battery	○	○	○	○	○	○
Adapter	○	○	○	○	○	○
Lower cover assembly	○	○	○	○	○	○
Upper cover assembly	○	○	○	○	○	○
Handle	○	○	○	○	○	○
Motor assembly	○	○	○	○	○	○
Dust cup assembly	○	○	○	○	○	○
Extension tube	○	○	○	○	○	○
Electric floor brush	○	○	○	○	○	○
Accessories	○	○	○	○	○	○
Electronic circuit	○	○	○	○	○	○

### Remarks:

1. This form is prepared in accordance with SJ/T11364.
2. ○: Indicates that the content of the hazardous substance in all homogeneous materials of corresponding part is below the limit specified in GB/T 26572.
3. X: Indicates that the content of the hazardous substance in one or more homogeneous materials of corresponding part exceeds the limit specified in GB/T 26572.
4. All components marked with X in table above comply with the EU RoHS directive, namely Directive 2011/65/EU of the European Parliament and of the Council on the Restriction of the Use of Certain Hazardous substances in Electrical and Electronic Equipment and its amendments.

# Troubleshooting and Specifications

## Battery

Battery	Li-ion 25.2 V	2.2 Ah
Dust collection capacity	0.2 L	
Charging time	About 3.5h *Vary depending on room temperature and usage time.	
Discharging time	Boost: about 10 min Auto: 10~30 min Eco: about 40 min (including electric floor brush) About 60 min (without electric floor brush) (In the initial stage of battery use, room temperature is 20°C) * Vary depending on the ground material, the amount of garbage in the cleaning place, and the environment of use.	
Charging input	100-240 V ~ 50 / 60 Hz 0.8 A	
Charging output	28.7 V --- 0.8 A	
Power cord length	1.85 m	

## Product Disposal

Except for discarded products, it is strictly prohibited to disassemble the battery without authorization in order to avoid danger.

It is strictly prohibited to use discarded batteries.


This appliance contains batteries that are only replaceable by skilled persons.

When you are going to discard the product, please strictly follow the steps below.

Please run out the battery power before disassembling.



- 1 Discharge until there is no operation, use a screwdriver to remove 2 screws and take out the battery;
- 2 Remove the connectors (2) connecting the battery and the cleaner, and use tape to insulate the connectors.

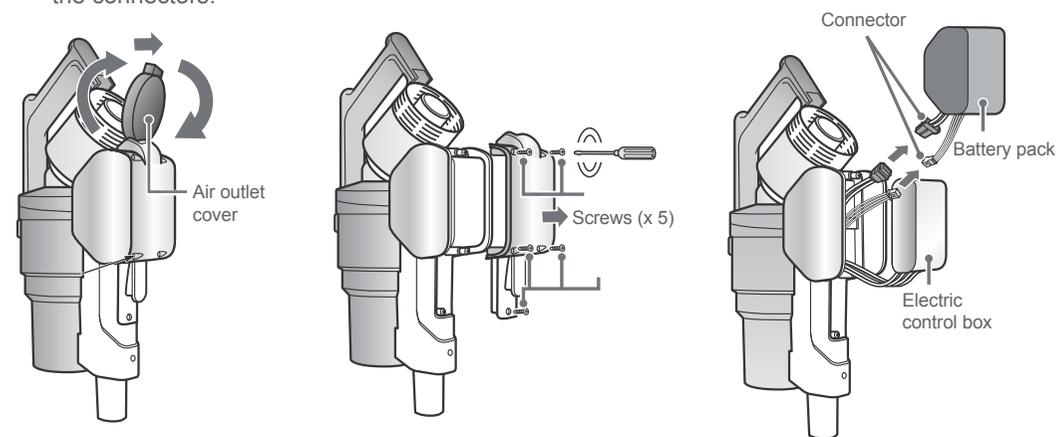

## Battery Recycling

Waste batteries are an important resource. When disposing of the product, do not throw away the battery at will.

Please handle the battery properly in accordance with government regulations.

To prevent short circuits, be sure to put tape on the metal terminals for insulation.