

# TOSHIBA



使用說明書

真空吸塵器 (家用)

VC-CLS1BF

## 目錄

### 產品介紹

注意事項.....	3
各部位名稱.....	4
指示燈說明.....	6

### 使用說明

充電.....	7
清掃.....	8
附件使用.....	9

### 清潔保養

塵杯清潔.....	10
電動地刷清潔.....	13
其它部件清潔.....	15

### 故障排除及規格售後

異常排除.....	16
產品規格.....	17
產品中有害物質的名稱及含量.....	17
產品廢棄.....	18

## 產品介紹

### 注意事項

- 為了正確並安全使用本產品，請在使用前仔細閱讀並充分理解此使用說明書。閱讀後請妥善保管，以便隨時流覽。
- 請勿將吸塵器接近熱源，輻射或者燃燒的煙頭，嚴禁吸入下列物體：
  1. 水及溶劑等一切液體。
  2. 石灰、水泥灰等建築粉塵及垃圾。
  3. 發熱物體，如未熄滅碳頭、煙頭。
  4. 銳利碎片，如玻璃等。
  5. 易燃易爆物品，如汽油或酒精製品。
- 切勿讓小孩玩弄、操作吸塵器，以免發生意外；
- 您的吸塵器是一台電動器具：它必須按照正常使用條件進行使用，切莫讓吸塵器在無人看管的情況下獨自運轉；
- 清潔、維修或暫時不用吸塵器時，必須切斷電源；
- 切斷電源：不可拉電源線，應用手拿住插頭塑膠部位拔下插頭；
- 檢查確認供電電壓必須與吸塵器充電電壓一致；
- 吸塵器的電源線，不要讓它穿越鋒利的物品，以免損壞電源線；
- 切忌將吸塵器浸入水中，避免接近發熱器具或暴曬，以免發生火災；
- 切勿拖拉電源線來移動充電座；
- 下列情形時，請不要使用吸塵器，並及時送至本公司指定的維修部檢修：
  1. 發生跌落並出現明顯損壞或運轉不正常；
  2. 電源線破損；
- 避免在吸入口堵住的狀態下長時間運行，以免電機損壞及吸塵器發熱變形。
- 搬運過程中不得按塵杯按鈕，以防塵杯松脫掉落砸傷。
- 本產品不適用與下列人群：兒童，行為能力、感知能力受限的人士，有精神障礙的人士，以及缺乏操作本產品的必要經驗和知識的人士。上述人群需在負責其安全的監護人之監督或指示下，方可操作本產品。應當採取監督措施，確保兒童不會將此產品用作玩具玩耍。

### 充電注意事項



- 在以下情況中，充電時間可能延長：
  1. 在室溫超過35°C：以上或低於5°C的場所充電時；
  2. 停止運行後，立即充電時。
- 不管使用時間長短，清掃結束後請進行充電。
- 不充電時，建議將充電器及時拔下。
- 若您的機器長時間（1個月以上）不使用時，請將電源插頭拔下，但為了保證電池壽命，每6個月需將其充滿電一次。
- 充電過程中，機體或電源適配器可能出現發熱，屬正常現象，請放心使用。
- 只能使用本产品提供的适配器对电池包进行充电。



# 產品介紹

## 各部位名稱

- ① 主機
- ② 延長管
- ③ 電動地刷
- ④ 扁吸
- ⑤ 圓刷
- ⑥ 電源配器
- ⑦ 塵杯清潔刷

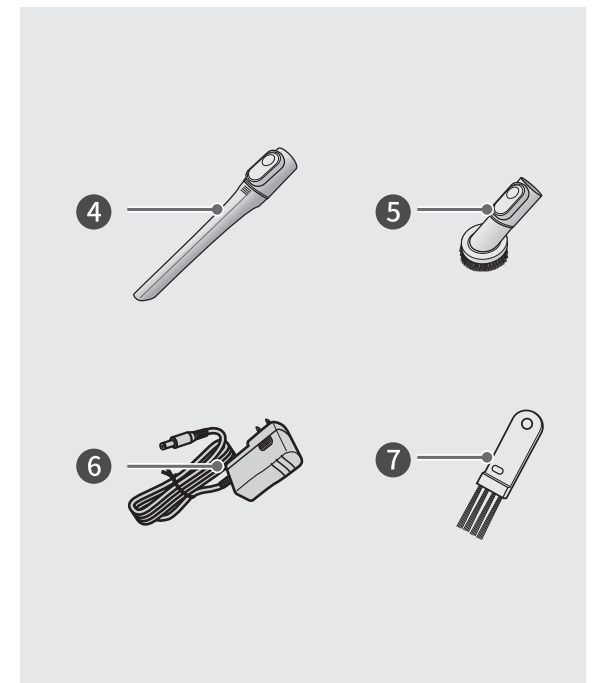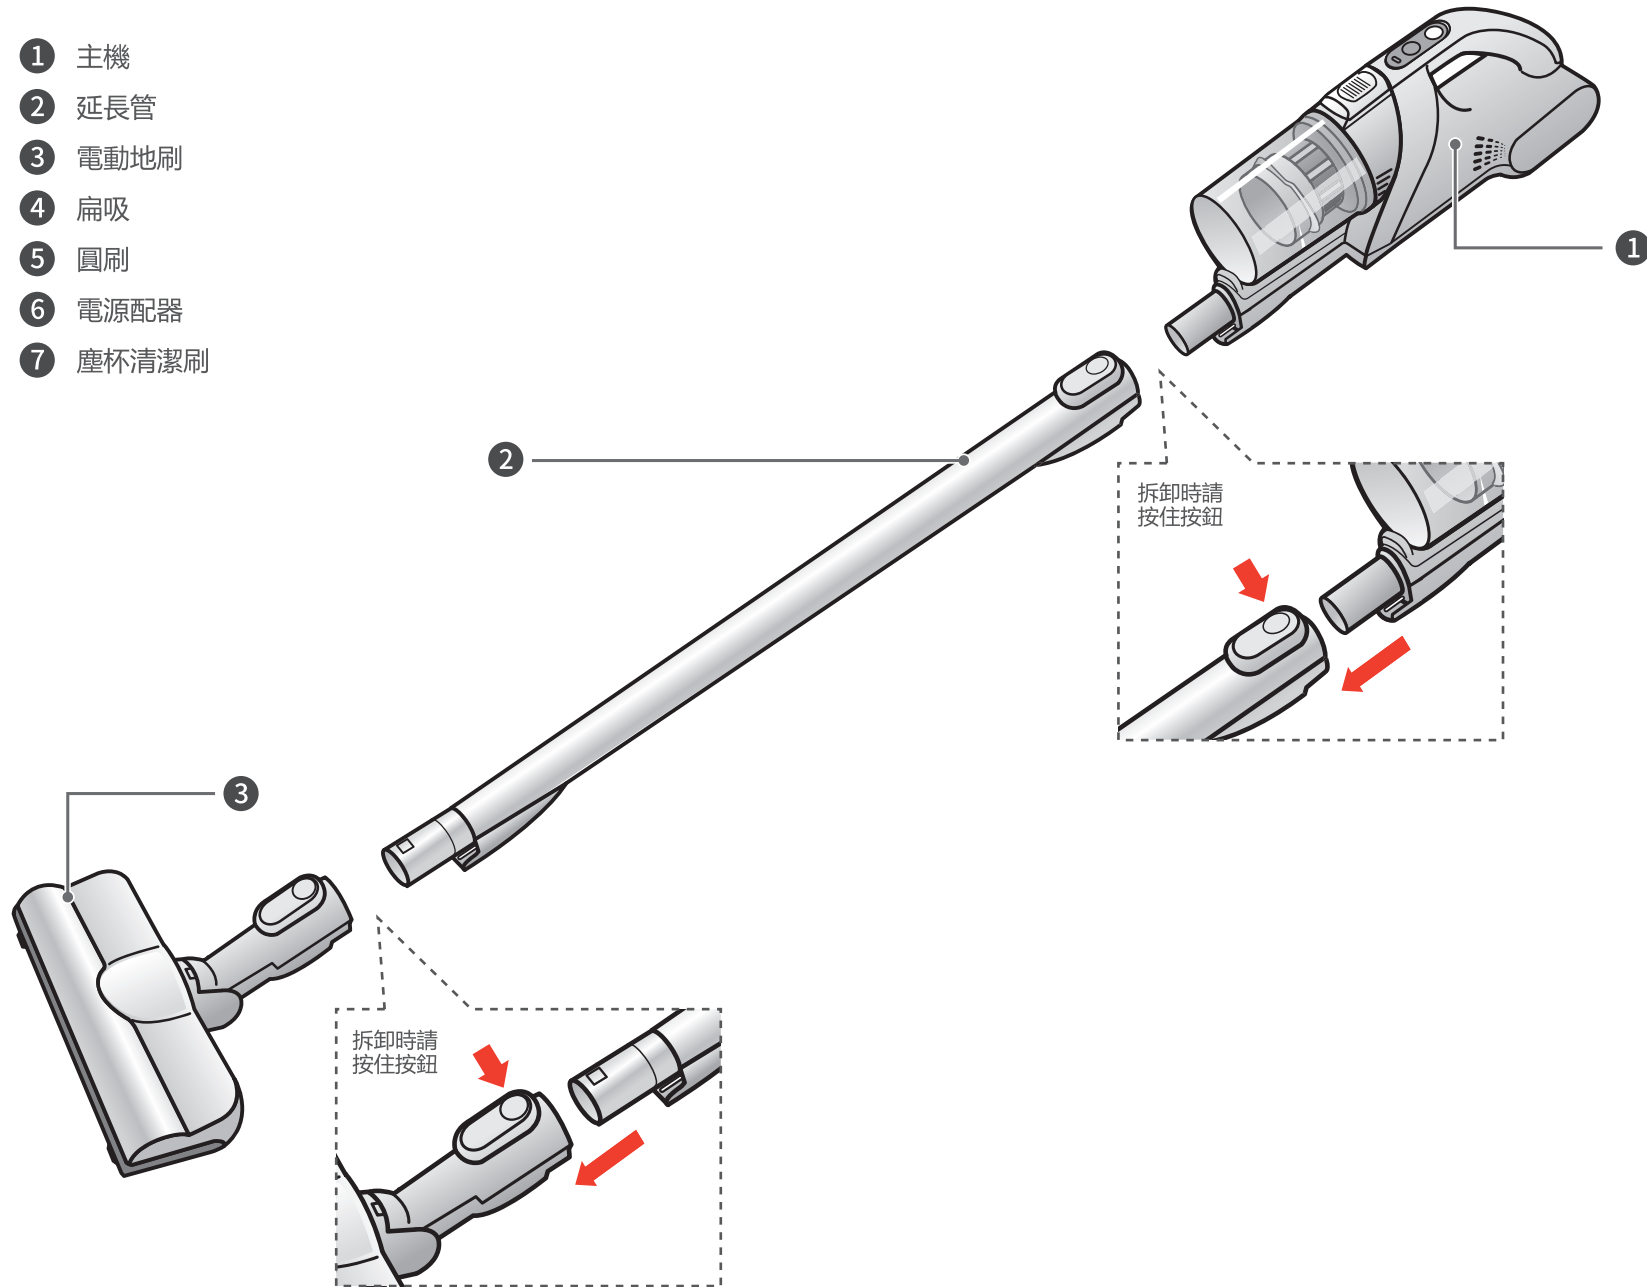


# 產品介紹

## 指示燈說明

### • 充電/運轉指示燈

功能	狀態	指示
運轉指示	-機器運行中	燈不亮
電量指示	-電量不足 -充電中 -電量充滿	-閃爍 (紅色) -亮燈 (紅色) -滅燈
異常指示	-塵杯微堵 -塵杯堵死停機 -適配器未斷開時 按開機鍵	-閃爍 (藍色) -閃爍3s (藍色) -閃爍5s (藍色)

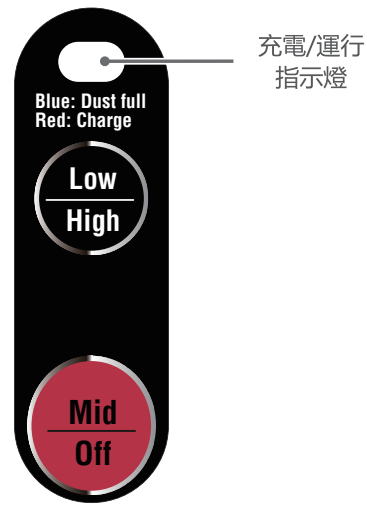


# 使用說明

## 充電

出廠時電池未充電，在使用前請務必將電池充滿。

將充電插頭插入機身充電口處，觀察到充電指示燈（紅色）點亮即開始充電，約需要4.5個小時完全充滿。

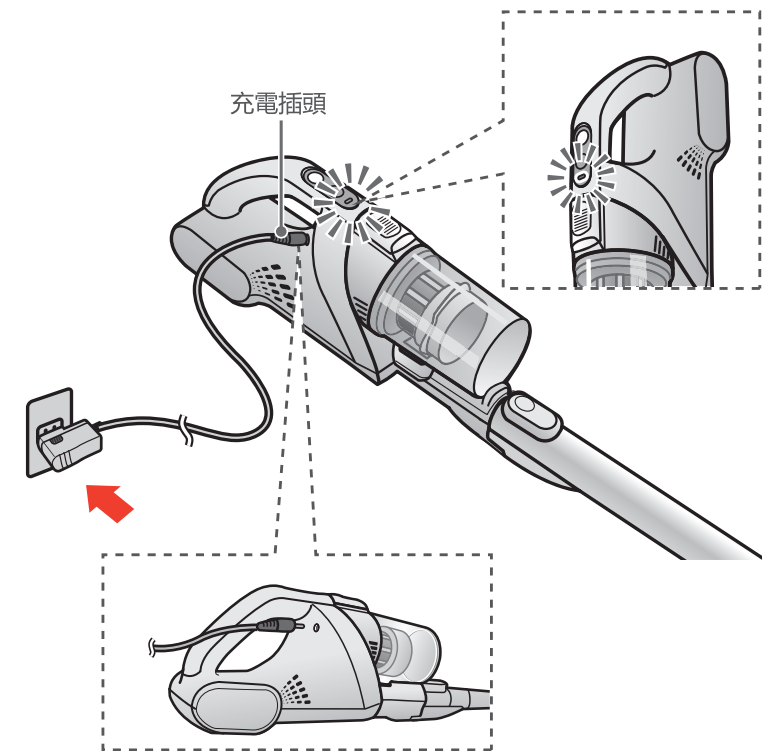

### ⚠ 注意 Caution

1. 充電過程中無法使用，如需使用請將充電插頭從機身上取下；
2. 請避免在35°C以上高溫，或5°C以下低溫環境下進行充電；
3. 若您的機器長時間（1個月以上）不使用時，請將電源插頭拔下，但為了保證電池壽命，每6個月需將其充滿電一次。




# 使用說明

## 清掃

開始清掃前，請先清理大塊垃圾，如石塊、包裝膜等，以防堵塞風路或刮傷機體。

1. 拔出充電插頭；
2. 按下 [Low/High] / [Mid/Off] / [弱/強] / [標準/關] 進行清掃；

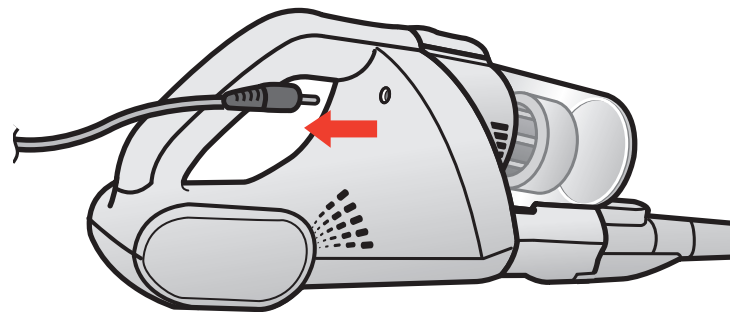

### • 吸力選擇

Low/弱：適用於長時間清掃；  
使用強模式會操作困難的場合，如窗簾清潔等；

High/強：適用於垃圾較多的情況；

Mid/標準：適用於垃圾較少的情况。

3. 清掃結束後，按下 [Mid/Off] / [標準/關] 按鈕結束運行。




# 使用說明

## 附件使用

附件	使用場景	互配	
		機體	延長管
電動地刷	日常地毯地板等	✓	✓
扁吸	縫隙、狹窄部位	✓	✓
圓刷	桌子及櫥櫃等	✓	✓
塵杯清潔刷	塵杯清潔	×	×

- 附件可以安裝在主機和延長管上



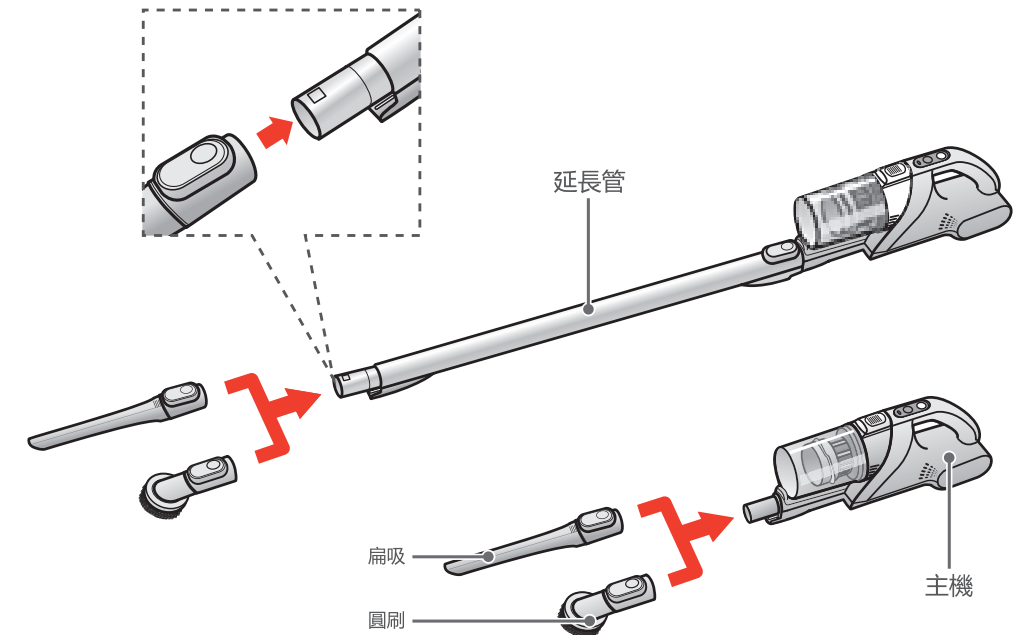


## 清潔保養

### 塵杯清潔

為了保持吸力，結束清掃後，請定期清理垃圾。

- 1 取出塵杯：使機體處於豎立的狀態，向下推塵杯按鈕取下塵杯。
- 2 開啟塵杯：將分離網上O和杯體的O對齊後取下。
- 3 傾倒垃圾：對準垃圾袋（桶）傾倒垃圾。

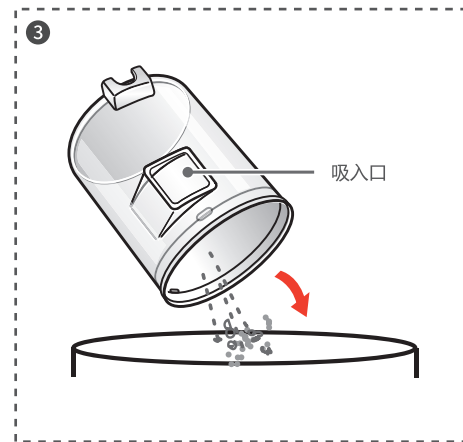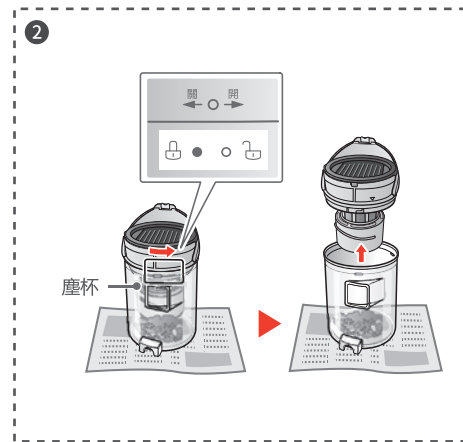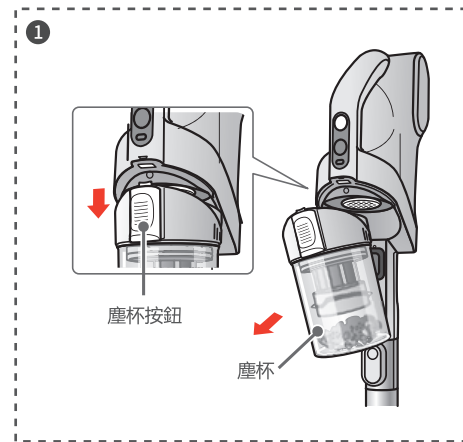

#### ⚠ 注意 Caution



請勿在整機橫放的時候取下塵杯，垃圾可能會灑落。

## 清潔保養

### 塵杯清潔

為了保持吸力，結束清掃後，請定期清理垃圾。

- 1 取出過濾器：同時捏住過濾器兩邊，向上取出過濾器。
- 2 清潔過濾器：用手掌敲打幾次，如果灰塵不容易掉落，請用水清洗。切忌用刷子清潔過濾棉。
- 3 傾倒垃圾：對準垃圾袋（桶）傾倒垃圾。

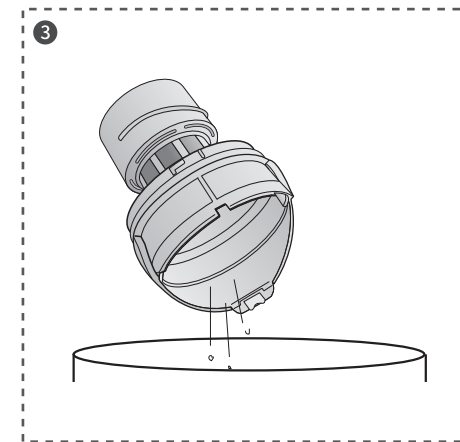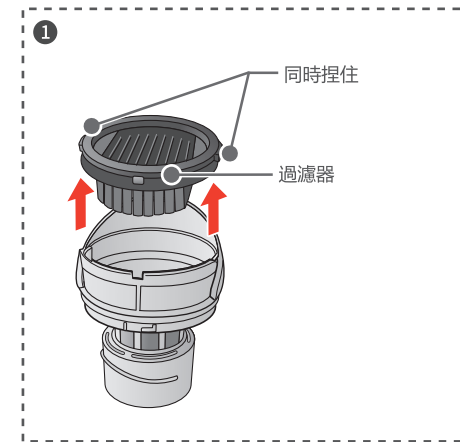

#### ⚠ 注意 Caution


1. 清潔時請勿使用洗潔精等清潔製劑；
2. 水洗後務必完全晾乾方可裝回使用；
3. 切勿使用吹風機等進行烘乾；
4. 塵杯過濾器屬於消耗品，如需更換請聯繫東芝售後進行更換。

# 清潔保養

## 塵杯清潔

如經過上述步驟後吸力仍然較低，可以對塵杯進行水洗清潔。

- 1 清潔分離網：將帶網的部分和杯子邊緣上的垃圾用清潔刷除去，用濕布擦拭。
- 2 水洗清潔：水洗各部件，用於塵杯過濾器至無水沫飛濺後，再置於陰涼處晾乾。

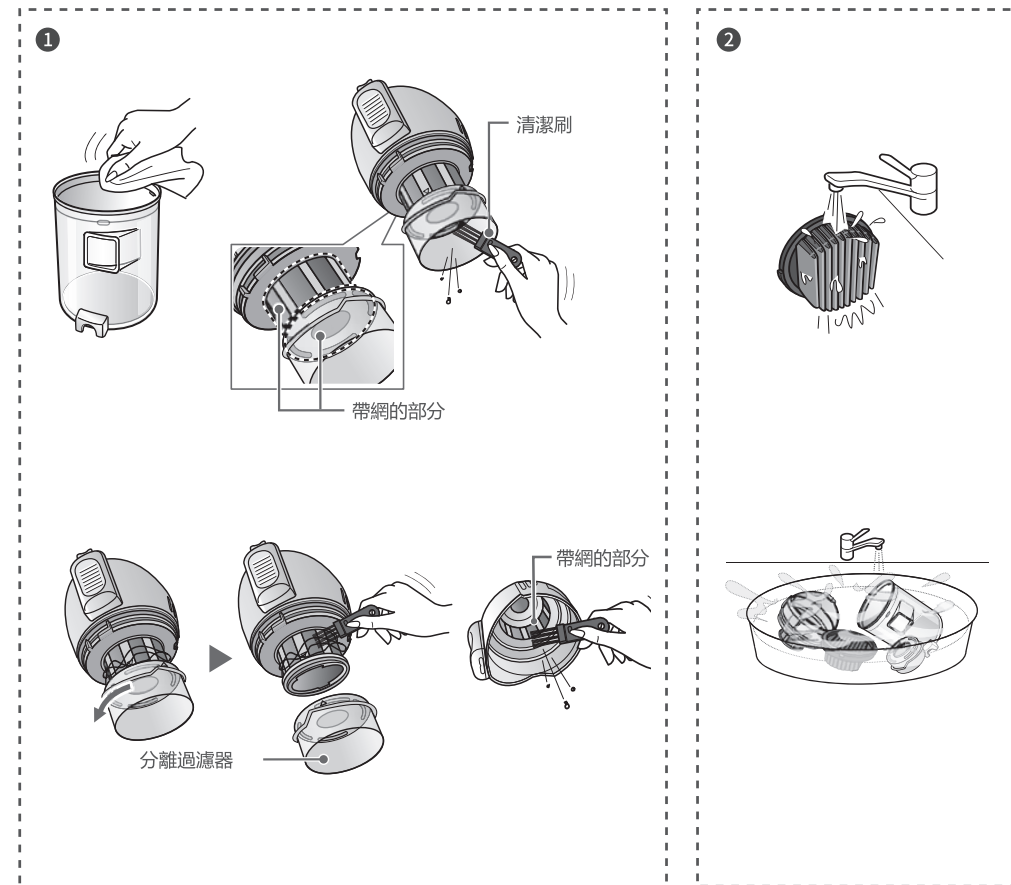

### ⚠ 注意 Caution


1. 清潔時請勿使用洗潔精等清潔製劑；
2. 水洗後務必完全晾乾方可裝回使用；
3. 切勿使用吹風機等進行烘乾；
4. 分離過濾器屬於消耗品，如需更換請聯繫東芝售後進行更換。

# 清潔保養


## 電動地刷清潔

當滾刷部分、輪子被垃圾纏繞或髒汙時，請進行清潔。

- 1 拆卸地刷
  - a. 用硬幣等工具將地刷拆裝卡扣沿著箭頭方向移動；
  - b. 拆下護蓋；
  - c. 拉起皮帶；
  - d. 提起滾刷。

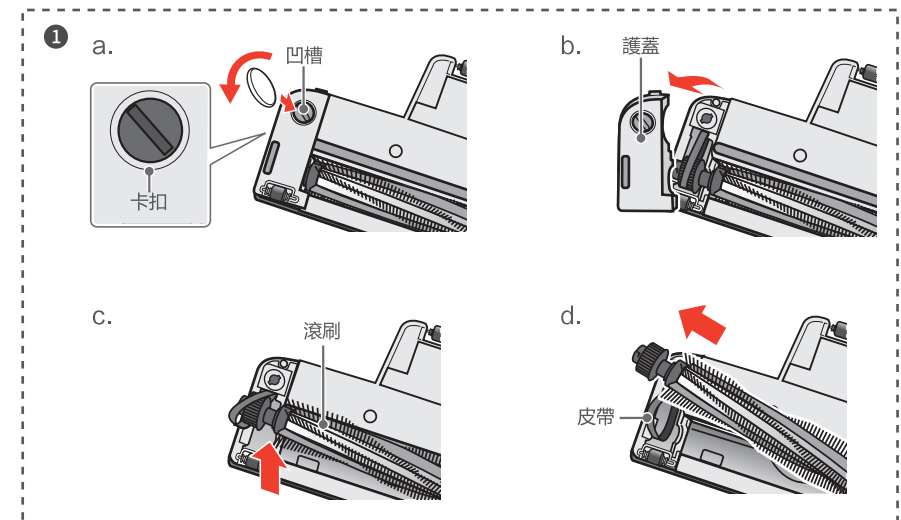


- 2 清理垃圾
  - a. 將纏繞在滾輪上的垃圾用鑷子除去，內側用幹布擦拭；
  - b. 將纏繞在滾刷上的垃圾用剪刀剪開，去除兩端間隙的垃圾；
  - c. 齒輪上的垃圾用刷子等去除旋轉部和護蓋可以水洗。水洗完後，請在陰乾處充分晾乾。

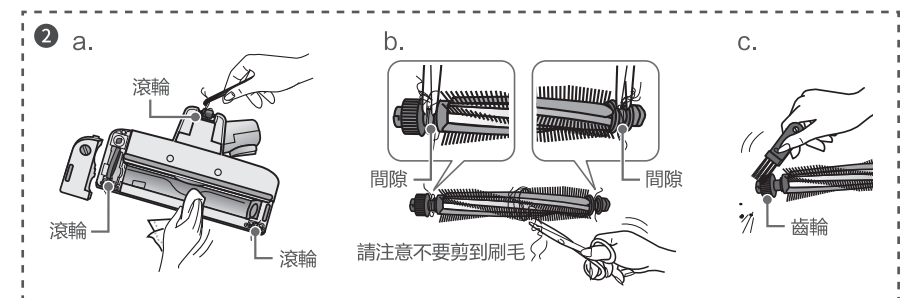

## 清潔保養


### ③ 清潔後按下圖順序安裝

- 將滾刷對準孔插入；
- 將滾刷齒輪位置套上皮帶；
- 安裝護蓋；
- 用硬幣等將地刷拆裝卡扣按圖示方向鎖好。

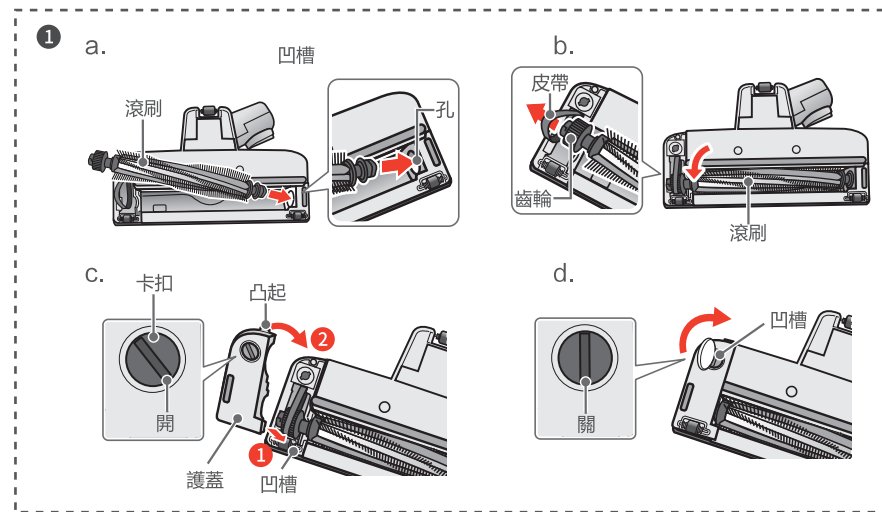

### ⚠ 注意 Caution

- 地板刷子的風路內有垃圾堆積的時候，請用舊的一次性筷子等除去；
- 地板刷子的過濾部分積滿灰塵時，請用扁吸除去；
- 除旋轉部和護蓋以外請不要水洗。（否則會導致故障）；
- 請不要在旋轉部的兩端注油。（可能會導致旋轉不良）。

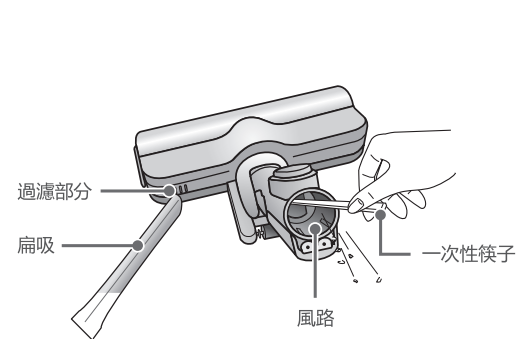


## 清潔保養

### 其他部件清潔


#### ① 主機

幹布擦拭，本體網上附著的垃圾請用附帶的清潔刷去除。

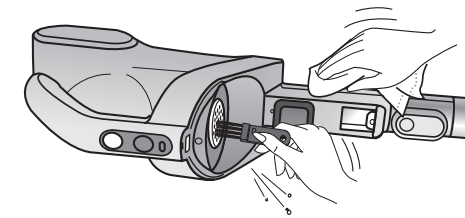

#### ② 延長管

幹布擦拭。

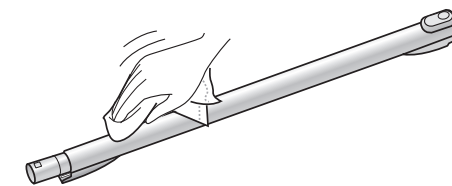

#### ③ 圓刷、扁吸

可水洗，晾乾。



## 故障排除及規格售後

### 異常排除

嚴禁私自改造機體或附件，嚴禁私自更換電源線或電池。

除專門維修技術人員外，請勿拆卸或修理本產品。



充電過程中發生異常時，請拔掉電源插頭，約15秒後重新插入進行充電。

異常情況仍未消除或者運行過程發生異常時，請按下 [關] 停止運行，再檢查以下事項。

異常情況	可能原因	處理方法
不運行或突然停止運行	<ul style="list-style-type: none"> <li>- 電量不足</li> <li>- 電源插頭剛剛拔下，此時處於保護狀態</li> <li>- 塵杯濾網堵死</li> <li>- 環境溫度過高或過低</li> </ul>	<ul style="list-style-type: none"> <li>- 充電後使用</li> <li>- 等待約3s後運行</li> <li>- 參照P. 12操作</li> <li>- 請在適宜環境內使用</li> </ul>
電動地刷滾刷不旋轉	<ul style="list-style-type: none"> <li>- 根據地毯的種類(電熱毯、長絨或絨毛密度較大的地毯)，滾刷可能停止運行</li> <li>- 滾刷部位被大量線頭或毛髮纏繞</li> </ul>	<ul style="list-style-type: none"> <li>- 按下 [Off] / [關] 停止運行，再次啟動吸塵器</li> <li>- 清理毛髮後進行使用</li> </ul>
充電時指示燈不亮/閃爍	<ul style="list-style-type: none"> <li>- 充電用線未牢固連接</li> <li>- 運轉停止後立即進行充電</li> </ul>	<ul style="list-style-type: none"> <li>- 重新連接充電線路</li> <li>- 為保護電路，請耐心等待</li> </ul>
充電時間變長	<ul style="list-style-type: none"> <li>- 環境溫度過高或過低</li> <li>- 使用結束後立即進行充電</li> </ul>	<ul style="list-style-type: none"> <li>- 請在適宜環境內充電</li> <li>- 為保護電路，請耐心等待</li> </ul>
運行時吸力變弱	<ul style="list-style-type: none"> <li>- 使用環境溫度過高且持續運轉</li> <li>- 過濾網/吸入口被堵塞的狀態下持續運行</li> </ul>	<ul style="list-style-type: none"> <li>- 請在適宜環境內充電</li> <li>- 請清潔後使用</li> </ul>

## 故障排除及規格售後

### 產品規格

電池	Li-ion 10.8 V=== 2.0 Ah
集塵容量	0.15 L
充電時間	約4.5 h *根據室溫和使用時間等會有所不同。
放電時間	High/強: 約8 min Mid/標準: 約20 min Low/弱: 約32 min (含電動地刷) 約35 min (不含電動地刷) (電池使用初期、室溫20°C) *根據地面材質、清掃場所的垃圾量及使用環境會有所不同。
充電輸入	100-240 V ~ 50 / 60 Hz 0.8A Max
充電輸出	12.3 V === 0.5 A
電源線長度	2 m

### 產品中有害物質的名稱及含量

零部件名稱	中國RoHS管控物質或元素					
	鉛	汞	鎘	六價鉻	多溴聯苯	多溴二苯醚
電池	○	○	○	○	○	○
適配器	○	○	○	○	○	○
下蓋組件	○	○	○	○	○	○
上蓋組件	○	○	○	○	○	○
電機組件	○	○	○	○	○	○
軟管組件	○	○	○	○	○	○
塵杯組件	○	○	○	○	○	○
延長管	○	○	○	○	○	○
電動地刷	○	○	○	○	○	○
電子電路	○	○	○	○	○	○

#### 備註:

1. 本表格依據 SJ/T 11364 的規定編制。
2. ○: 表示該有害物質在該部件所有均質材料中的含量均在 2011/65/EU 規定的限量要求以下。
3. ×: 表示該有害物質至少在該部件的某一均質材料中的含量超出 2011/65/EU 規定的限量要求。
4. 本表中的有 × 的所有部件均符合歐盟的 RoHS 指令，即「歐洲議會和理事會關於在電子電氣設備中限制使用某些有害物質的第 2011/65/EU 指令」及其修正案。

# 故障排除及規格售後

## 產品廢棄

除廢棄產品外，嚴禁私自拆卸電池，以免發生危險。


廢棄後的電池嚴禁再次使用。

電池包更換請找專業人士更換。

當您準備廢棄產品時，請務必嚴格遵循以下步驟操作。

請將電池電量耗盡後再進行拆解。

- 1 放電至不再運轉後，使用螺絲刀，取下電池蓋的螺絲（4處）；
- 2 拆下電池與整機相連接的連接器（2條），並用膠帶對連接器進行絕緣處理。

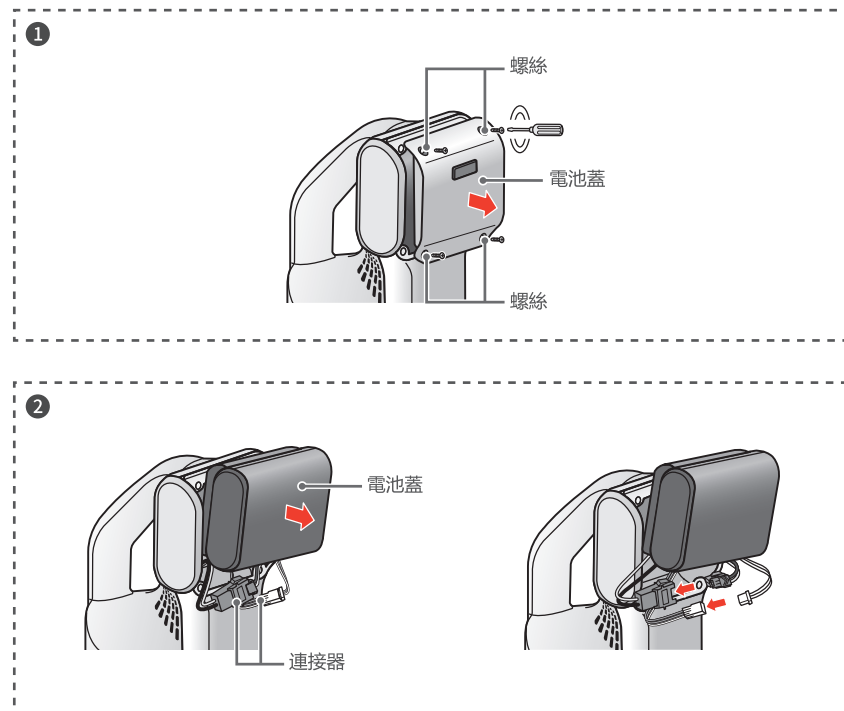

### • 電池的回收利用

廢棄電池是重要的資源。廢棄產品時，請勿隨意丟棄電池。

請依照政府法規對其進行妥善處理。

為了防止短路請務必在金屬端子部貼上膠布進行絕緣處理。

### 注意 Caution

請不要將取下的電池再次連接到主機上，有電池漏液、發熱、破裂、起火的風險。



# TOSHIBA



**User's Manual**

Vacuum Cleaner  
(Household)

**VC-CLS1BF**



## Contents

### Product Introduction

Precautions .....	3
Name of Each Part .....	4
Description of Indicators .....	6

### Instructions for Use

Charging .....	7
Cleaning .....	8
Accessories .....	9

### Cleaning and Maintenance

Dust Cup Cleaning .....	10
Electric Floor Brush Cleaning .....	13
Other Cleaning .....	15

### Troubleshooting and Specifications

Troubleshooting .....	16
Product specification .....	17
Name and Content of Hazardous Substances in Products .....	17
Product Disposal .....	18

## Product Introduction



### Safety Warning

#### Precautions

- In order to use this product correctly and safely, please carefully read and fully understand this manual before use. Keep it properly for future reference.
- Do not bring the vacuum cleaner close to heat sources, radiation or burning cigarette butts, and it is strictly forbidden to suck the following objects:
  1. All liquids such as water and solvents;
  2. Building dust and garbage such as lime and cement ash;
  3. Heat-generating objects, such as carbon butts and cigarette butts that have not been extinguished;
  4. Sharp fragments such as glass, etc.;
  5. Flammable and explosive materials, such as gasoline or alcohol products.
- Do not let children play with or operate the vacuum cleaner in order to avoid accidents;
- Your vacuum cleaner is an electric appliance: it must be used under normal conditions, and unattended use is prohibited;
- Cut off the power before cleaning, repairing or when it is temporarily not in use;
- To cut off the power supply: Do not drag the power cord; hold the plastic part of the plug and pull it out;
- Check and ensure that the power supply voltage is consistent with the charging voltage of the vacuum cleaner;
- Do not let the power cord of the vacuum cleaner pass through sharp objects, so as to avoid damage;
- Never immerse the vacuum cleaner in water, and avoid close to heating appliances or exposure to the sun in order to prevent fire;
- Do not move the charging stand by dragging the power cord;
- Do not use the vacuum cleaner in the following situations, and send it to the service department designated by our company for inspection and repair in time:
  1. Drop occurs and there is obvious damage or abnormal operation;
  2. The power cord is damaged.
- Avoid running for a long time with the suction port blocked in order to avoid damage to the motor and deformation of the vacuum cleaner;
- Do not press the button of the dust cup during transportation to prevent the dust cup from falling off and causing injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



#### Charging Precautions

- In the following cases, the charging time may be extended:
  1. When charging in a place where the room temperature exceeds 35°C or below 5°C;
  2. When charging immediately after stopping operation.
- Regardless of the time of use, please charge it after cleaning.
- It is recommended to unplug the charger when it is not charging.
- If your machine will not be used for a long time (more than 2 months), please unplug the power plug. It is recommended to fully charge every 2 months in order to ensure the battery life.
- During the charging process, the cleaner body or power adapter may heat up. This is normal.
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

# Product Introduction

## Name of Each Part

- 1 Main unit
- 2 Extension tube
- 3 Electric floor brush
- 4 Flat nozzle
- 5 Round brush
- 6 Power adapter
- 7 Dust cup cleaning brush

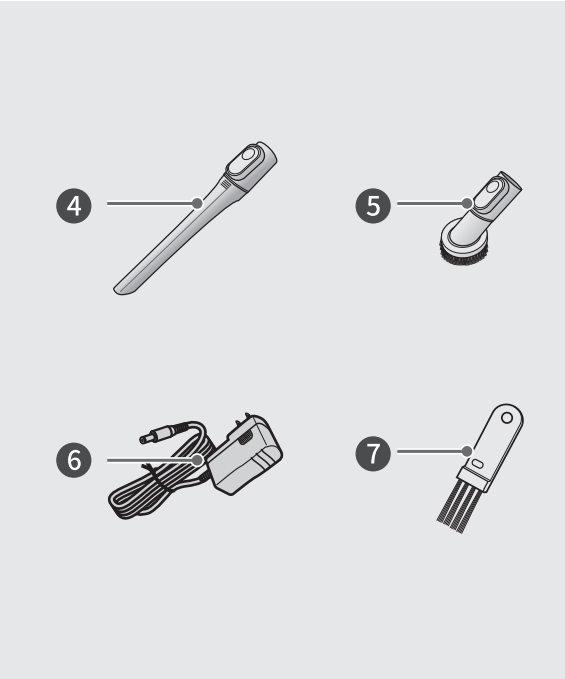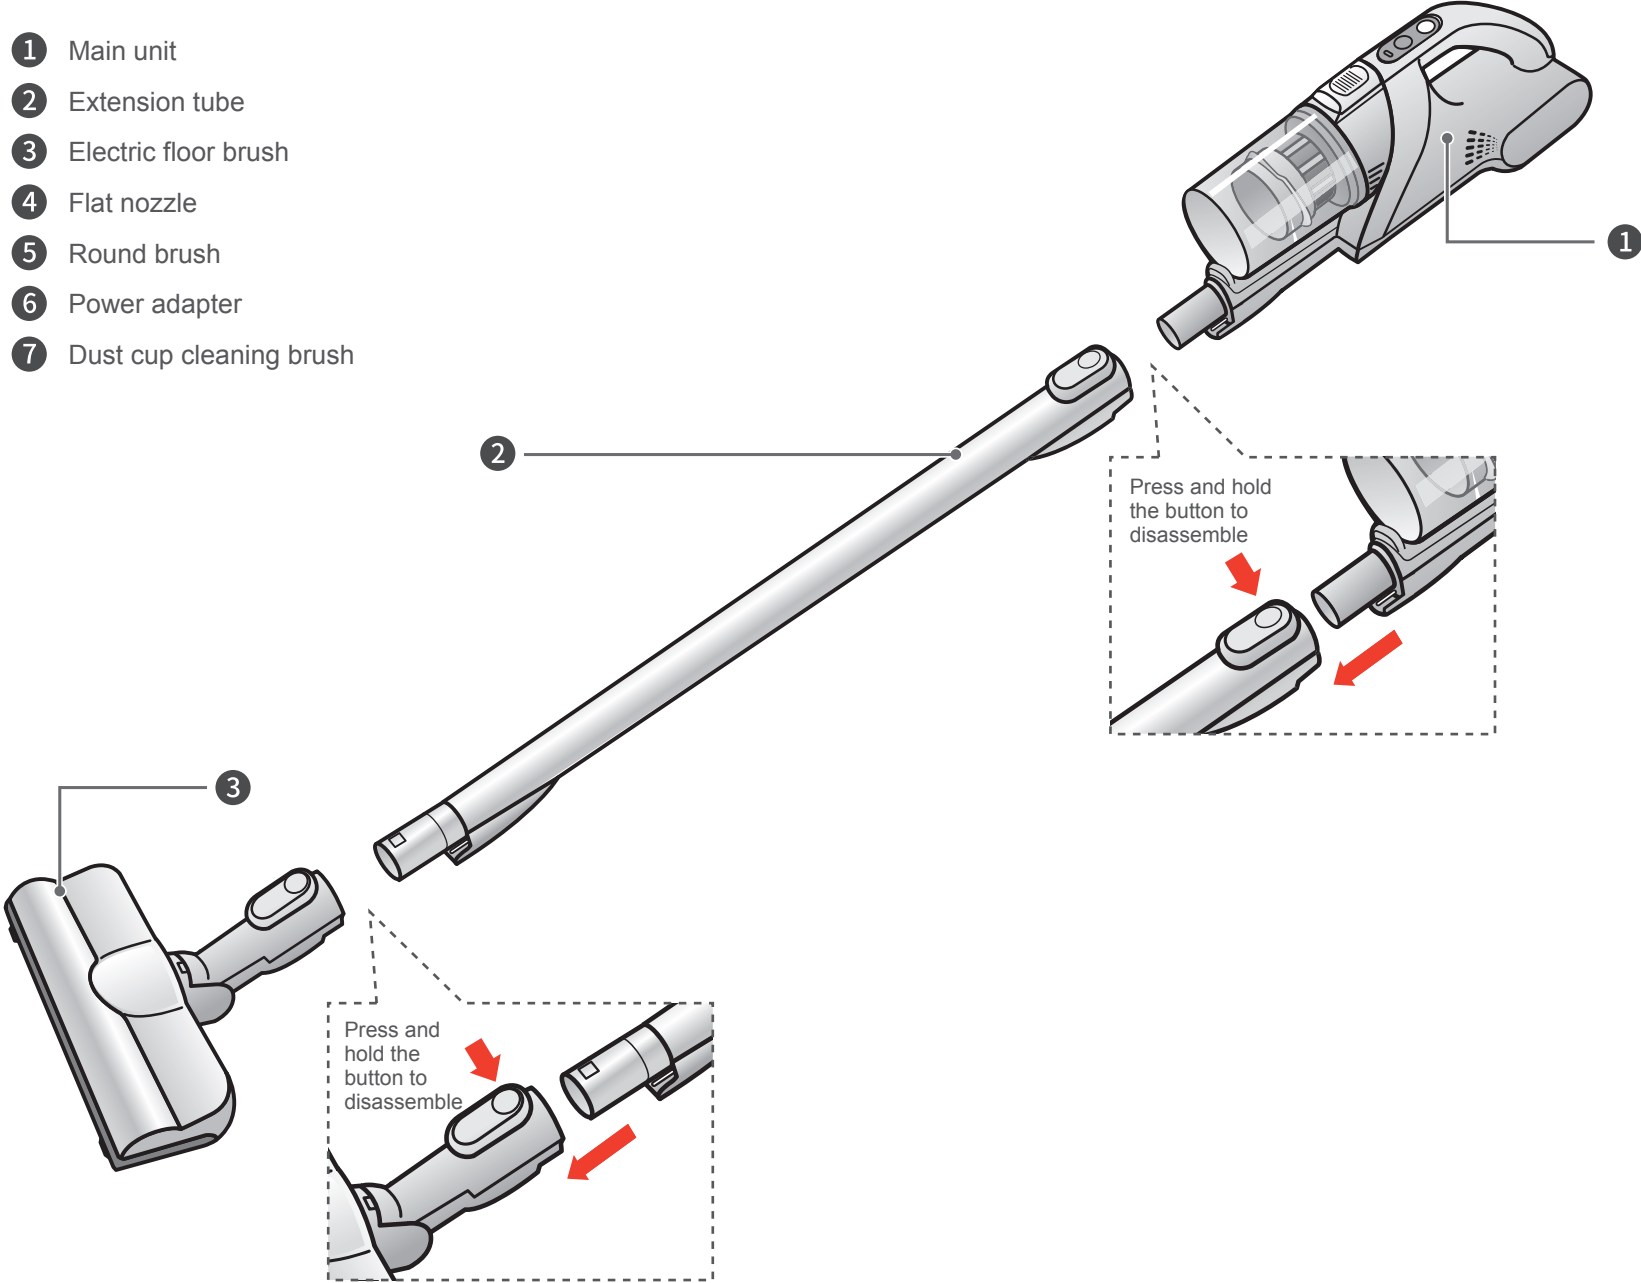


# Product Introduction

## Description of Indicators

- **Charging/operation indicators**

Function	Status	Indication
Running indication	- The machine is running	The indicator light is off
Battery indication	- Low battery - Charging - Fully charged	- Flashing (red) - On (red) - Off
Exception indication	- Slight clogging of dust cup - Shutdown due to dust cup block - Power button is pressed when the adapter is not disconnected	- Flashing (blue) - Flashing for 3s (blue) - Flashing for 5s (blue)

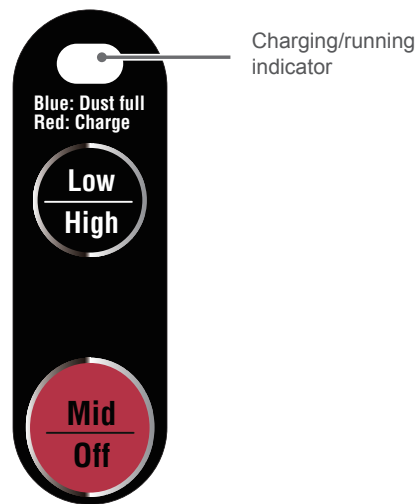


# Instructions for Use

## Charging

The battery is not charged when the product is delivered. Please be sure to fully charge the battery before use.

Place the cleaner on the charging stand and the charging start when the charging indicator light (red) turns on. It takes about 4.5 hours to fully charge.

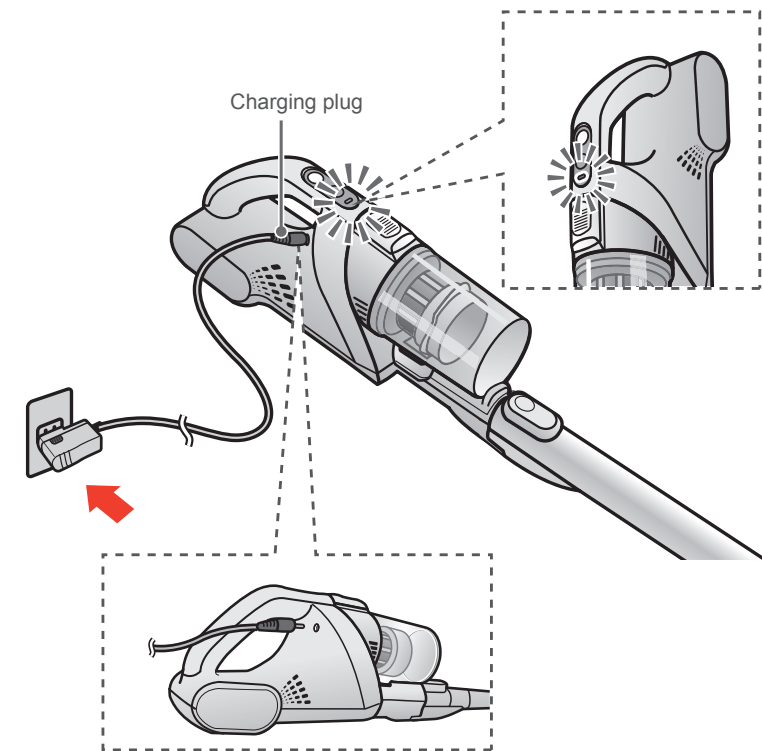

### **Caution**


1. The cleaner can't be used during the charging process. If you need to use it, please remove it from the machine body;
2. Avoid charging in high temperature above 35°C or low temperature below 5°C;
3. If your cleaner is not in use for a long time (more than 1 month), please unplug the power plug; in order to ensure the battery life, it is recommended to fully charge it every 6 months;

# Instructions for Use

## Cleaning

Before you start cleaning, please clean up large garbage, such as rocks and packaging film, in order to prevent blocking the air duct or scratching the cleaner.

1. Pull out the charging plug;
2. Press "Low/High" or "Mid/Off" to clean;

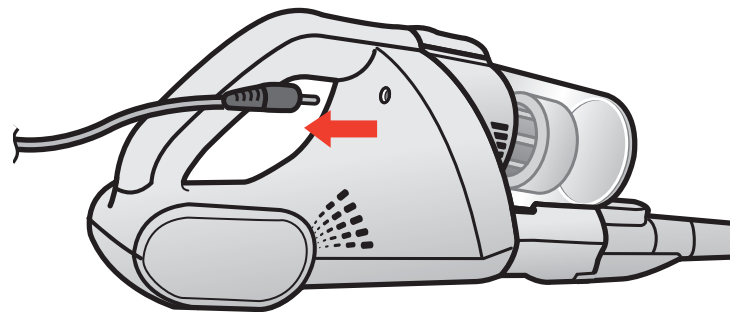

### • Suction selection

Low: Suitable for long-term cleaning;

Using strong mode will be difficult in some occasions, such as curtain cleaning, etc.;

High: Suitable for situations with a lot of garbage;

Mid: Suitable for situations with less garbage.

3. After cleaning, press the "Mid/Off" button to end the operation.




# Instructions for Use

## Accessories

Accessories	Scenes	Interworking	
		Main unit	Extension tube
Electric floor brush	Carpet, floor, etc.	✓	✓
Flat nozzle	Gaps, narrow parts	✓	✓
Round brush	Tables, cabinets, etc.	✓	✓
Dust cup cleaning brush	Dust cup cleaning	×	×

- Accessories can be installed on the main unit and extension tube



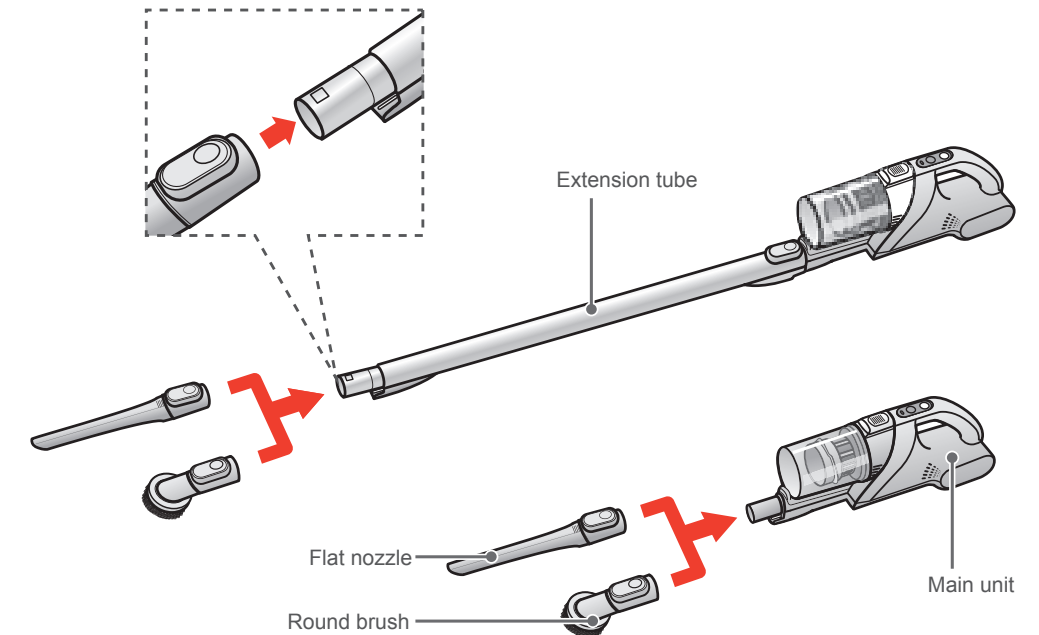


# Cleaning and Maintenance

## Dust Cup Cleaning

In order to maintain the suction power, please clean up the garbage regularly after finishing cleaning.

- 1 Take out the dust cup: Keep the cleaner in an upright state, press the dust cup button and take out the dust cup.
- 2 Open the dust cup: Align the O on the separate mesh with the O on the cup body and then remove it.
- 3 Pour out garbage: aim at the garbage bag (bucket) to pour out the garbage.

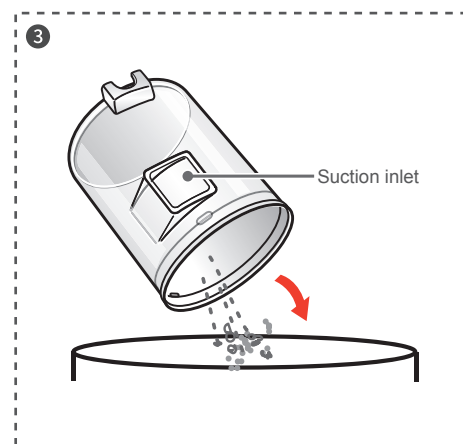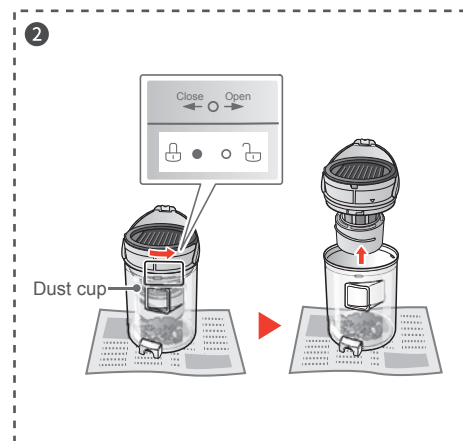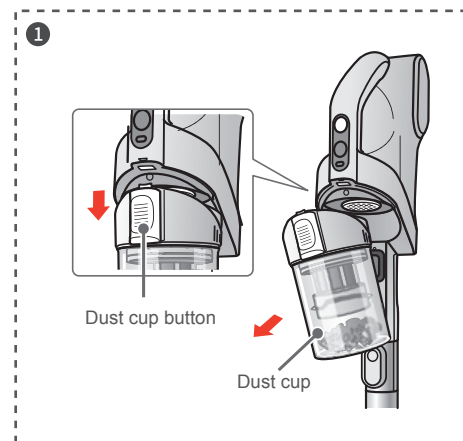

### ⚠ Caution




Do not remove the dust cup when the cleaner is placed horizontally, or else the garbage may be scattered.

# Cleaning and Maintenance

## Dust Cup Cleaning

In order to maintain the suction power, please clean up the garbage regularly after finishing cleaning.

- 1 Take out the filter: Pinch both sides of the filter at the same time, and take out the filter upwards.
- 2 Clean the filter: Tap it several times with the palm of your hand. If the dust doesn't fall off, please wash it with water. Never clean the filter cotton with a brush.
- 3 Pour out garbage: Aim at the garbage bag (bucket) to pour out the garbage.

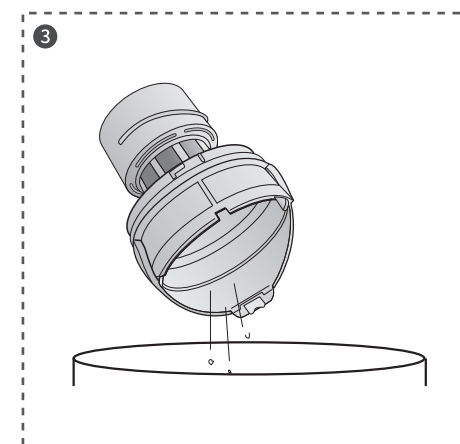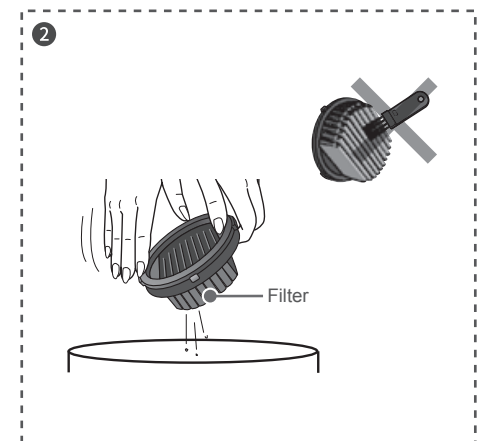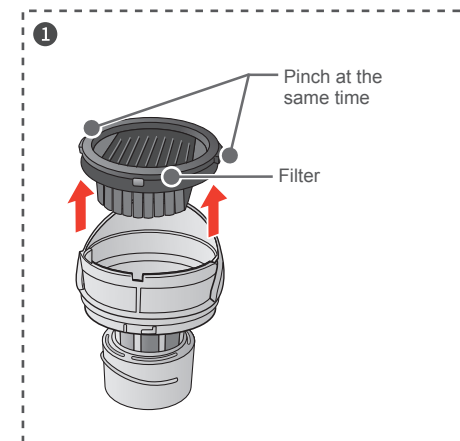

### ⚠ Caution


1. Do not use detergent or other agents for cleaning;
2. After washing, it must be completely dried before putting it back into use;
3. Do not use hair dryer for drying;
4. The dust cup cotton filter is consumable. To replace it, please contact the TOSHIBA After Sales.

## Cleaning and Maintenance

### Dust Cup Cleaning

If the suction power is still low after the above steps, wash the dust cup with water.

- ① Clean the separate mesh: Remove the garbage on the mesh part and the edge of the cup with a cleaning brush, and wipe it with a damp cloth.
- ② Wash with water: Wash the parts with water, dry the dust cup filter until no water splashes, and then place it in a cool place to dry.

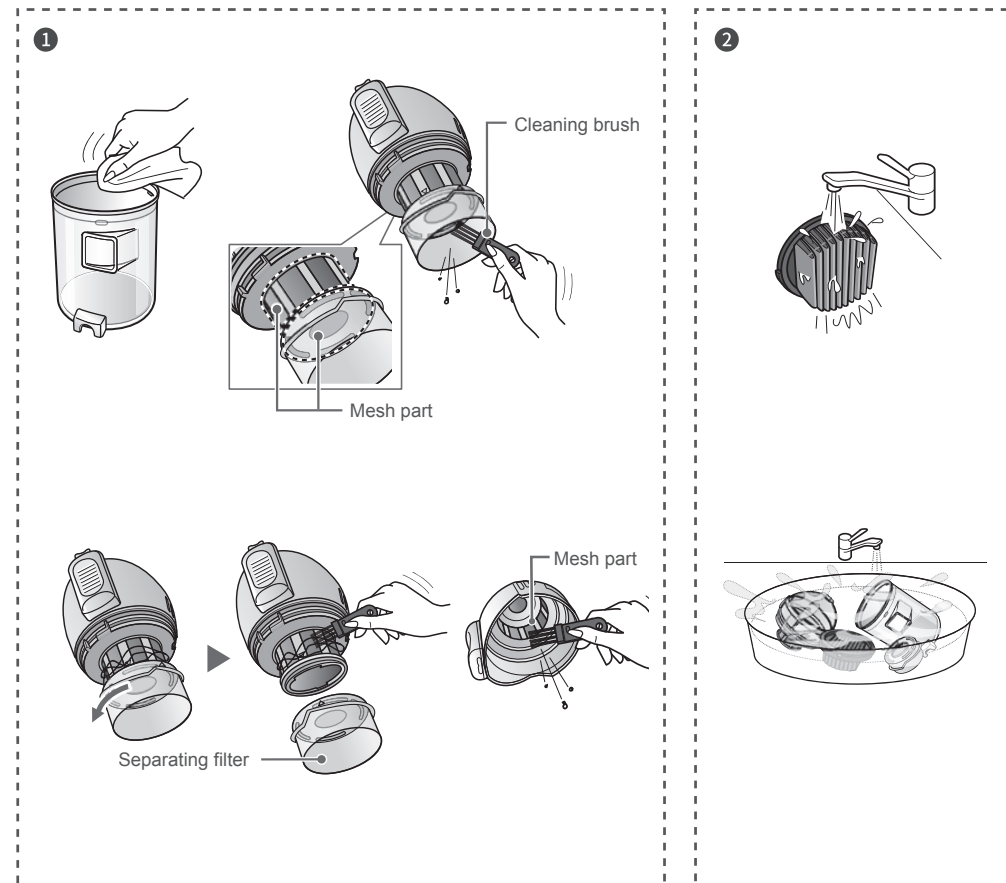

### ⚠ Caution


1. Do not use detergent or other agents for cleaning;
2. After washing, it must be completely dried before putting it back into use;
3. Do not use hair dryer for drying;
4. The dust cup cotton filter is consumable. To replace it, please contact the TOSHIBA After Sales.

## Cleaning and Maintenance


### Electric floor brush cleaning

When the roller brush or wheels are entangled with garbage or dirty, please clean them.

- ① Remove the floor brush
  - a. Use a coin or other tools to move the floor brush buckle in the direction of the arrow;
  - b. Remove the protective cover;
  - c. Pull up the belt;
  - d. Lift the roller brush.

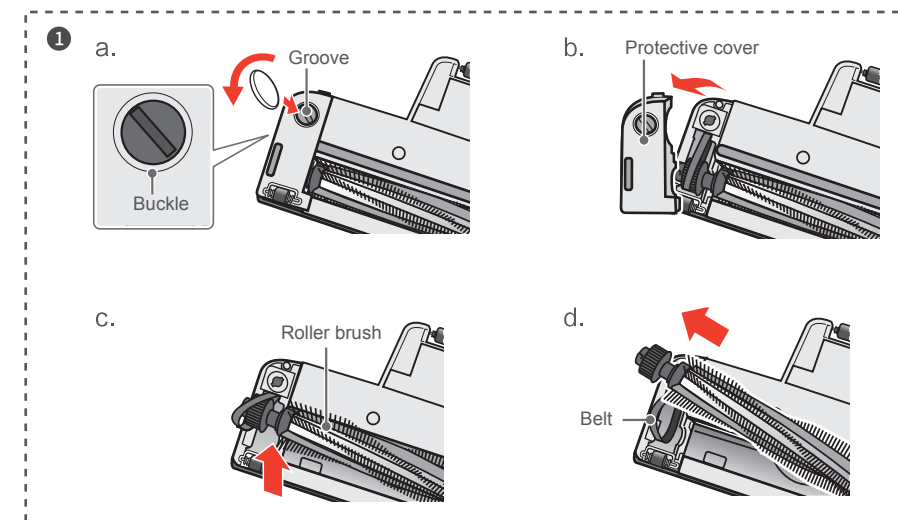


- ② Clear garbage
  - a. Remove the garbage wrapped around the roller with tweezers, and wipe the inside with a dry cloth;
  - b. Cut off the garbage entangled on the roller brush with scissors, and remove the garbage in the gap between the two ends;
  - c. Remove the garbage on the gear with a brush. The rotating part and the protective cover can be washed with water. After washing, please fully dry it in a dry place.

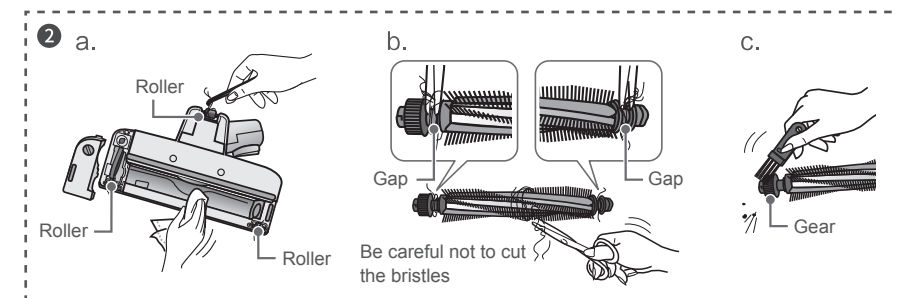




## Cleaning and Maintenance

- 3 After cleaning, install in the order as shown in the figure below
  - a. Align the roller brush with the hole and insert;
  - b. Put the belt on the gear position of the roller brush;
  - c. Install the protective cover;
  - d. Use a coin to lock the floor brush buckle according to the direction shown in the figure.

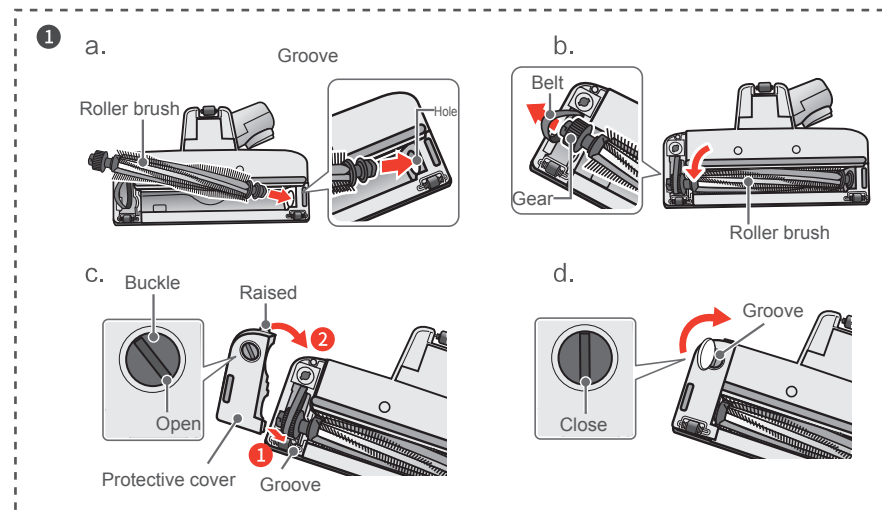

### ⚠ Caution


1. When there is garbage accumulated in the air path of the floor brush, please remove it with disposable chopsticks;
2. When the filter part of the floor brush is full of dust, please remove with flat nozzle;
3. Do not wash with water except for the rotating part and the cover (or else it will cause malfunction);
4. Do not inject oil on both ends of the rotating part (or else it may cause poor rotation).

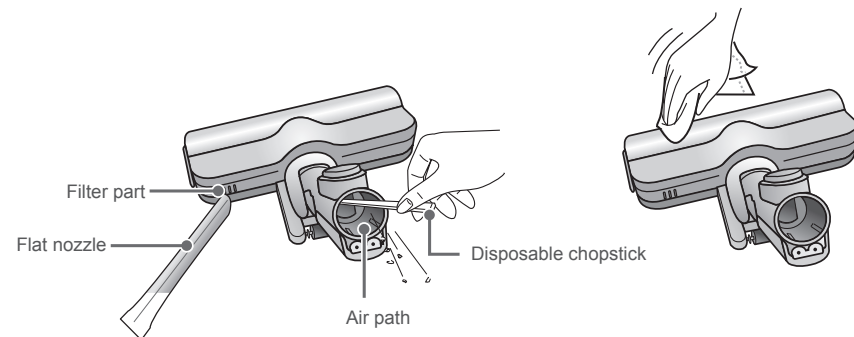


## Cleaning and Maintenance

### Other Cleaning

- 1 Main unit  
Wipe with a dry cloth. Please remove the garbage attached to the main unit with the provided cleaning brush.

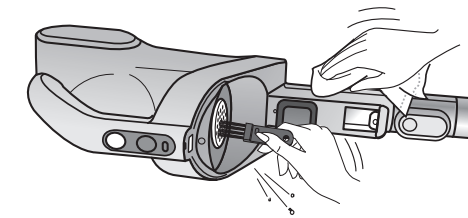

- 2 Extension tube  
Wipe with a dry cloth.

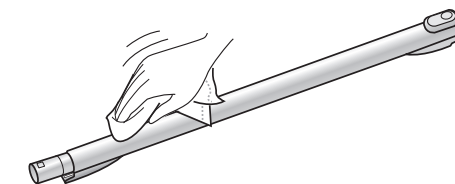

- 3 Round brush, flat nozzle  
Wash and dry.





# Troubleshooting and Specifications

## Troubleshooting

It is strictly forbidden to modify the cleaner or accessories without permission, and it is strictly forbidden to change the power cord or battery without permission.



Except for specialized service technicians, please do not disassemble or repair this product.

When an exception occurs during the charging process, please unplug the power plug and plug it in again after 15 seconds.

If the exception can't be eliminated or the operation process is abnormal, please press [OFF] to stop the operation, and then check the following items.

Problem	Possible causes	Solution
Do not run or stop running suddenly	<ul style="list-style-type: none"> <li>- Insufficient battery power</li> <li>- The power plug has just been unplugged and is now in a protected state</li> <li>- Dust cup filter is blocked</li> <li>- Ambient temperature is too high or too low</li> </ul>	<ul style="list-style-type: none"> <li>- Use after charging</li> <li>- Wait about 3s before running</li> <li>- Refer to P.12 for operation</li> <li>- Please use in a suitable environment</li> </ul>
Electric floor brush does not rotate	<ul style="list-style-type: none"> <li>- Depending on the type of carpet (electric blanket, long pile or carpet with high pile density), the roller brush may stop running</li> <li>- The brushing area is entangled with a lot of thread or hair</li> </ul>	<ul style="list-style-type: none"> <li>- Press "Off" to stop the operation and start the vacuum cleaner again</li> <li>- Clear the hair before using</li> </ul>
The indicator light does not light up/flash when charging	<ul style="list-style-type: none"> <li>- The charging cable is not firmly connected</li> <li>- Charge immediately after stopping operation</li> </ul>	<ul style="list-style-type: none"> <li>- Reconnect the charging cable</li> <li>- To protect the circuit, please wait patiently</li> </ul>
Charging time becomes longer	<ul style="list-style-type: none"> <li>- Ambient temperature is too high or too low</li> <li>- Charge immediately after use</li> </ul>	<ul style="list-style-type: none"> <li>- Please charge in a suitable environment</li> <li>- To protect the circuit, please wait patiently</li> </ul>
The suction power becomes weak during operation	<ul style="list-style-type: none"> <li>- The environment temperature is too high and continuous operation</li> <li>- Continuous operation when the filter/suction port is blocked</li> </ul>	<ul style="list-style-type: none"> <li>- Please charge in a suitable environment</li> <li>- Please use after cleaning</li> </ul>

# Troubleshooting and Specifications

## Specifications

Battery	Li-ion 10.8 V <sup>===</sup> 2.0 Ah
Dust collection capacity	0.15 L
Charging time	About 4.5 hours *Vary depending on room temperature and usage time.
Discharging time	Strong: about 8 min Standard: about 20 min ECO: about 32 min (including electric floor brush) About 35 min (without electric floor brush) (Initial battery use, room temperature 20°C) * Vary depending on the ground material, the amount of garbage in the cleaning place, and the environment of use.
Charging input	100-240 V ~ 50 / 60 Hz 0.8A Max
Charging output	12.3 V <sup>===</sup> 0.5 A
Power cord length	2 m

## Name and Content of Hazardous Substances in the Product

Part name	China RoHS controlled substances or elements (Hazardous substances)					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyl (PBBs)	polybrominated diphenyl ethers (PBDEs)
Battery	○	○	○	○	○	○
Adapter	○	○	○	○	○	○
Lower cover assembly	○	○	○	○	○	○
Upper cover assembly	○	○	○	○	○	○
Motor assembly	○	○	○	○	○	○
Hose assembly	○	○	○	○	○	○
Dust cup assembly	○	○	○	○	○	○
Extension tube	○	○	○	○	○	○
Electric floor brush	○	○	○	○	○	○
Electronic circuit	○	○	○	○	○	○

### Remarks:

1. This table is compiled in accordance with the regulations of SJ/T11364.
2. O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T26572.
3. X: Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement of GB/T 26572.
4. All parts with X in this table are in compliance with the EU RoHS Directive, that is, "Directive 2011/65/EU of the European Parliament and of the Council on Restricting the Use of Certain Hazardous Substances in Electrical and Electronic Equipment" and its amendments.

# Troubleshooting and Specifications

## Product Disposal

Except for discarded products, it is strictly prohibited to disassemble the battery without authorization in order to avoid danger.

It is strictly prohibited to use discarded batteries.



This appliance contains batteries that are only replaceable by skilled persons.

When you are going to discard the product, please strictly follow the steps below.

Please run out the battery power before disassembling.



- 1 Discharge until there is no operation, use a screwdriver to remove 4 screws and take out the battery;
- 2 Remove the connectors (2) connecting the battery and the cleaner, and use tape to insulate the connectors.

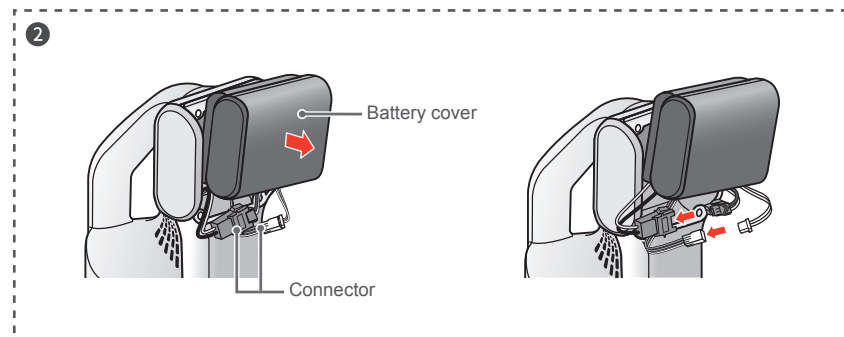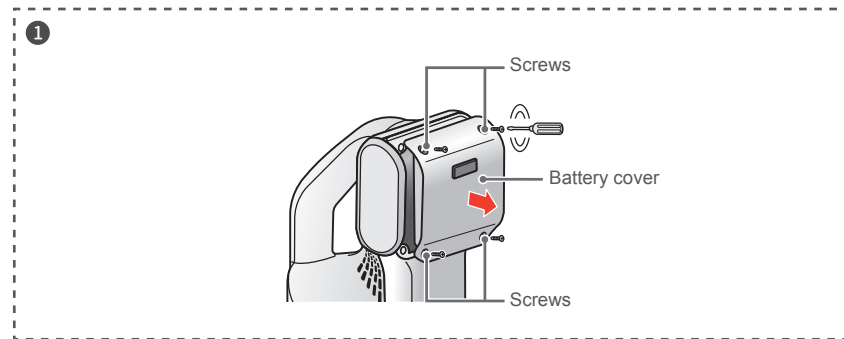

## • Battery Recycling

Waste batteries are an important resource. When disposing of the product, do not throw away the battery at will.

Please handle the battery properly in accordance with government regulations.

To prevent short circuits, be sure to put tape on the metal terminals for insulation.

## Caution

Do not connect the removed battery to the main unit again. There is a risk of battery leakage, heat generation, rupture, or fire.