 


INSTRUCTION MANUAL

TOASTER OVEN

TM-MM10DZF(WH)

Please review this instruction manual before operating.

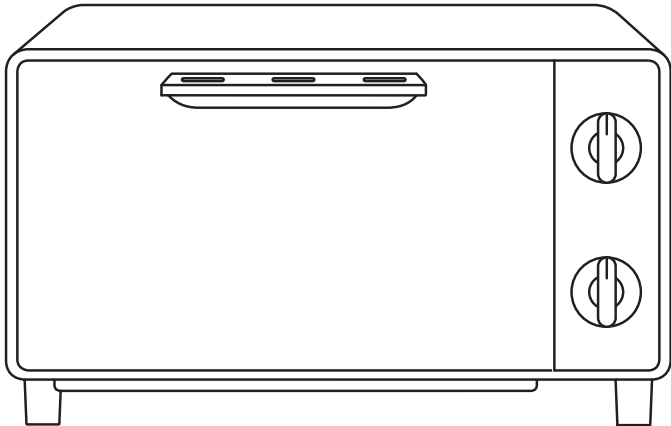

TOSHIBA

CONTENTS

PRODUCT SAFETY

IMPORTANT SAFEGUARDS	EN-3-4
----------------------------	--------

INSTRUCTION FOR USE

BEFORE FIRST USE	EN-5
NAME OF PARTS	EN-6
CONTROL PANEL	EN-7
HOW TO USE	EN-8
CARE AND CLEANING	EN-9
SPECIFICATION	EN-10



BEFORE OPERATING THIS PRODUCT,
READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE



SAFETY WARNING

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
5. The temperature of accessible surfaces may be high when the appliance is operating.
6. Accessible parts may become hot during use.
Young children should be kept away.
7. The appliance is intended to be used freestanding.



SAFETY WARNING

IMPORTANT SAFEGUARDS

8. Remove plug from outlet when the appliance is not in use, before putting on or taking off parts, and before cleaning. Allow to cool before handling.
9. Extreme caution should be exercised when using containers constructed of other metal or glass.
10. Do not store any materials, other than manufacturers recommended accessories in this oven when not in use.
11. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
12. Avoid contacting moving parts of the machine.
13. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.



The surfaces are liable to get hot during use.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

BEFORE FIRST USE

 
1. Remove all accessories and wrapping materials packed inside the oven.
2. Wash the grill tray in warm soapy water. Wipe the oven cavity with a cloth or sponge. Then wipe off the water with a dry cloth/ towel before using.
3. Place oven on a flat counter or other stable surface. DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCES.
4. Make sure the crumb tray is properly installed before using.
5. Before operating the machine, place the crumb tray under the bottom heating pipes. For the first time only, set the temperature knob to MAX, the function setting on toast and the timer to 15 minutes. This will burn off any oils still on the oven.

NOTE


The oven may smoke during this process. This is normal for a new oven and will not last more than 10-15 minutes.

NAME OF PARTS

Before use the oven,
please remove the
fixed belt of the grill
tray.

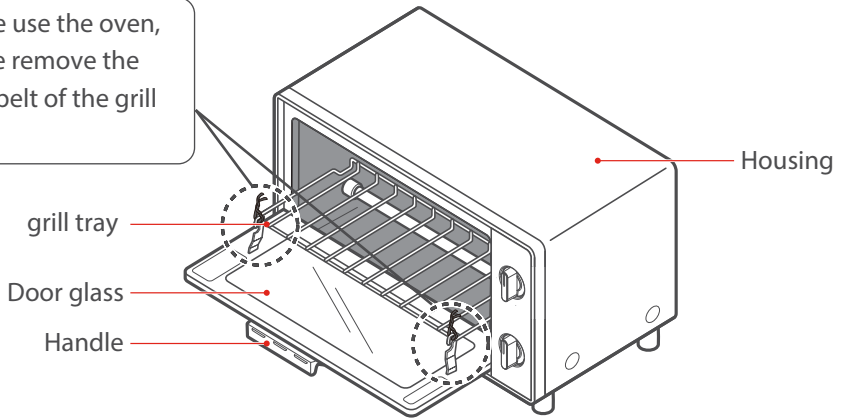

Crumb Tray

 

Grill Tray

CONTROL PANEL

TIME SETTING

0-30 MINUTES: The timer can be set up to 30 minutes. The oven will not turn on without the timer being set. When the time knob is in the "OFF" position, the oven will not operate.

To set the time, turn the knob clockwise to the desired time. Indicator light is lit only when time has been set.

When the timer has reached the OFF position, a bell sound will be heard. Power supply will be cut off automatically.

ADJUSTING TIME

Timer can be change during cooking cycle. Just turn the timer knob to the desired time and continue cooking.

NOTE: To select the cooking time, first rotate the timer knob more than 90 degrees, and then turn the switch back to the time you require.

 
TEMPERATURE SETTING

Turn the temperature knob clockwise to the desired temperature setting. The temperature can be set from 70 ° C to 230 ° C.

STAY ON

For use the toaster without time control, turn the timer knob to position "Stay on" In this case, the toaster will work until the timer knob is set to " OFF" position.

Note: the food may catch fire if the cooking time is setting too long. Close supervision is necessary during cooking and the timer do not cook being set too long.

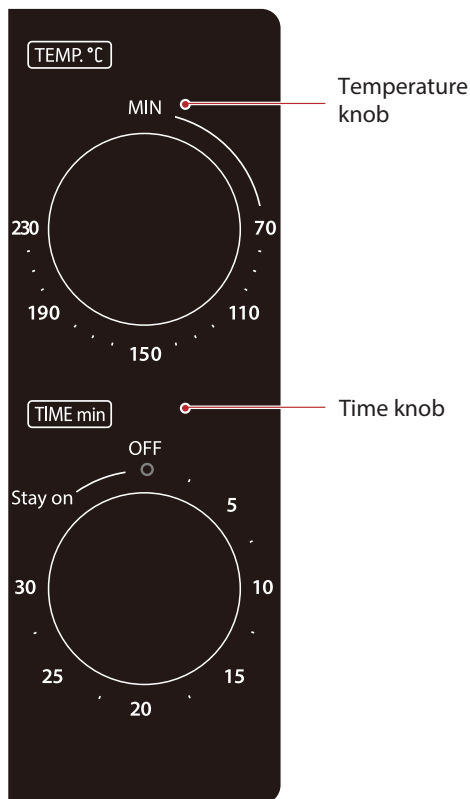

HOW TO USE

CAUTION: THE OVEN SURFACES ARE HOT DURING AND AFTER USE GENERAL INSTRUCTIONS

1. Place the grill tray in position that will accommodate the height of the food to be cooked.
2. The food must be put on the grill tray to avoid the fire danger that caused by the accumulation of food chipping on the heating pipes.
3. Make sure that you always use an ovenproof container, never use plastic or cardboard containers in the oven.
4. Clean the heating pipe periodically.
5. Never use glass or ceramic pans or lids.
6. DO NOT let liquid flow to the bottom of the oven. Use the crumb tray when cooking.
7. Set the temperature as suggested by the recipe or as desired.
8. Securely shut the door and set the cooking time to begin operating the oven.
9. After baking is completed, allow the crumb tray to cool to room temperature before removing it.

CARE AND CLEANING

1. Before cleaning unplug the oven and allow it to cool completely.
2. Wash all the attachments with mild soapy water including the grill tray.
3. Do not use abrasive cleansers, scrubbing brushes and chemical cleaner as this will cause damage to the non-stick coating of grill tray.
4. Using a wet cloth to wipe the inner of the oven.
5. To clean the door by using a wet cloth saturated with detergent or soap.
6. Never immerse the unit in water or other liquid.
7. Any other servicing should be performed by an authorized service representative.

**CAUTION : HOT
SURFACE**

Warning: Hot Surface!

SPECIFICATION

MODEL	TM-MM10DZF(WH)
VOLTAGE	230-240V~
AC FREQUENCY	50/60Hz
POWER	735-800W
CAPACITY	10L
DIMENSION (L X W X H)	364 x 198 x 207mm



NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

#DetailsMatter