

TOSHIBA

TUMBLE DRYER

OWNER'S MANUAL

MODEL

TD-T33B120HWM(WS)

Read This Manual



Read and follow the instructions carefully.
Keep the operation instructions handy for
future use .

Please contact the customer service if
you are in need of a new user manual.

CONTENTS

SAFETY INSTRUCTIONS

■ Safety Instructions	2
-----------------------------	---

INSTALLATION

■ Product Description	10
■ Installation	10

OPERATION

■ Quick Start	13
■ Before Each Drying	14
■ Control Panel	15
■ Option.....	17
■ Display.....	20
■ Programmes.....	21
■ Instructions to Connection with the TSmartLife App.....	22
■ Drying Programmes Table	25

MAINTENANCE

■ Cleaning and Care	27
■ Trouble Shooting	29
■ Technical Specifications	31

SAFETY INSTRUCTIONS

■ Safety Instructions

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury or loss of life.

Explanation of the symbols:



Warning!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.



Caution!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.



Note!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.

Intended use

- This dryer is intended for household use only. It is not for commercial use or shared use (i.e. by use in an apartment.)
- This dryer is for indoor use only.

SAFETY INSTRUCTIONS

Safety Instructions

- This appliance must be grounded. In the event of malfunction or breakdown , grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- Improper connection for the appliance when using not grounded outlet or when GND terminal of outlet is not suitable with GND terminal of power plug, can result in risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the appliance is properly grounded.

Warning!

Risk of Electric Shock

- Do not use any outlet with rated current less than that of appliance.
- Do not pull the power cord forcefully. Hold power plug instead.
- Do not touch the plug with wet hands.
- Do not bend, clamp or damage the power cord and the power plug.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAFETY INSTRUCTIONS

- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Do not use multiple outlet sockets, an extension power cable or double adapter with this appliance.
- Plug must be accessible after installation.

Risk of Injury

- Do not attempt to repair, disassemble, or modify the appliance yourself.
- Do not lean on the opened door of the dryer.
- Do not drink condensed water.

Risk of Product Damage

- Do not put more load than rated in this user manual. See the related chapter in the user manual.
- Do not operate the dryer without Doorfilter and Base filter.
- Do not dry the clothes without spin-dry.
- Do not expose the dryer directly under the sun.
- Do not install the dryer in humid and wet environment.
- Before maintenance, unplug the appliance.
- Do not spray water on the appliance.
- Do not overturn the appliance.

SAFETY INSTRUCTIONS

Warning!

Risk of Explosion & Fire

- Please do not dry the clothes with any flammable substances such as kerosene or alcohol.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- Remove all objects from pockets such as lighters and matches.

SAFETY INSTRUCTIONS

- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products are placed in a tumble dryer they should first be washed in hot water with extra detergent. This will reduce, but not eliminate, the hazard.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Openings must not be obstructed.
- Door filter and Base filter should be cleaned frequently.
- Lint must not be allowed to accumulate around the tumble dryer (heat exchanger, inside drum, around door etc.)
- **WARNING:** In the appliance enclosure or in the built-in structure, keep ventilation openings clear of obstruction.
- **WARNING:** Do not damage the refrigerant circuit.

Safety with children

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Animals and children may climb into the machine. Check the machine before every operation.
- Glass door may be very hot during the operation. Keep children and pets far away from the machine during the operation.

SAFETY INSTRUCTIONS

For use in EU countries :

- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children of less than 3 years should be kept away unless continuously supervised.

UV Radiation Safety

- This warning only covers products which contain a UV-C lamp and which have a disinfection function with UV-C lamp.
- The device contains a lamp that emits UV-C rays. Do not look at the source of light while the lamp is operating!
- UV-C Lamp is used to provide disinfection in textile products.
- Do not take the UV-C Lamp out of the device and do not operate it outside!
- Do not touch the lamp!
- Use of the product except for its purpose or damage to the UV-C lamp protection glass or surrounding may cause dangerous UV-C radiation to occur. UV-C radiation can damage the eyes and skin even in low doses. Do not operate any product which is damaged!
- Do not remove the UV-C lamp protection glass. Do not operate the product without the UV-C lamp protection glass!

SAFETY INSTRUCTIONS

- In cases where UV-C lamp and related parts need to be replaced (expiration of lamp life, break of lamp glass, etc.), call the technical service. Do not try to replace the parts by yourself. When waiting for technical service, make sure the machine cover is closed and the plug is disconnected!
- Keep children away while using any programmes with activated UV-C Lamp!
- It can cause allergies, don't breathe directly!
- Always read the product guide before using the device and use the product according to the instructions!
- Hygiene programme incorporating UV is effective for removing *Escherichia coli*, *Staphylococcus aureus* bacteria.

SAFETY INSTRUCTIONS

ENVIRONMENT

Disposal of old appliances

For use in EU contries

This appliance is labelled in accordance with the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). The directive provides the framework for the EU-wide take-back and recycling of waste equipment.



The devices marked with this symbol must not be disposed of in household waste!


For use in other contries

This appliance doesn't have symbol above. If you want to dispose your appliance, please contact your local authority or retailer for futher information on collection and disposal.

Model	Rated capacity
TD-T33B120HWM(WS)	11.0kg

INSTALLATION

■ Product Description

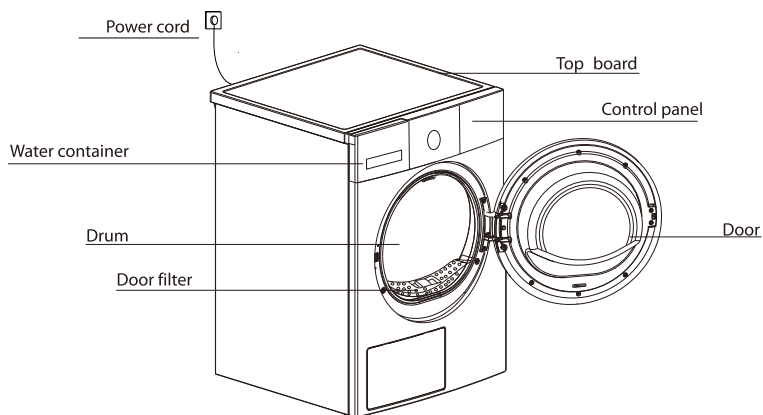


Note!

The product picture is for illustration only, please refer to real product as reference.


Accessories

The following parts are optional for specific models.

If your dryer has following parts, please wear gloves to install them as per the instruction below .

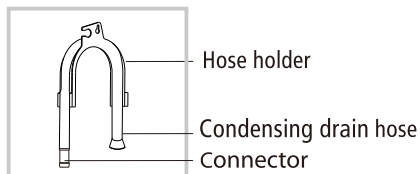

■ Installation

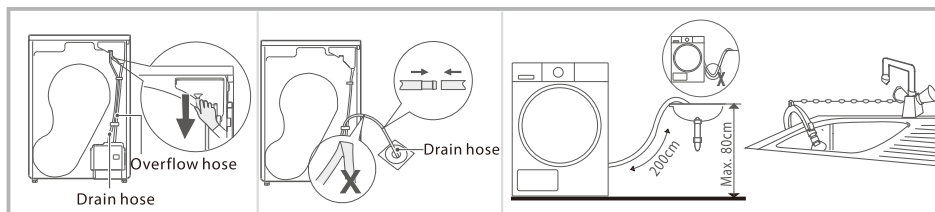

1. Pull out the upper drain hose

2. Put the external drain hose into the floor drain

3. Put the hose holder in the washing basin or any other sink.

INSTALLATION

Transport

Move cautiously. Do not grasp any salient parts of machine. The machine door cannot be used as the handle for transport. If the dryer can't be transported erectly, the dryer can be tilted to right less than 30°.


Risk of injury and damage!

Improper handling of the appliance may result in injury.

- This appliance should only be transported by two or more people holding the appliance securely.
- Remove all obstacles on the transport route and from the installation location, e.g. open doors and clear away objects lying on the floor.
- Do not use the open door as a handhold.
- Remove all package material before using the appliance.
- Before setting up the tumble dryer, check it for any externally visible damage. Do not install or use a damaged tumble dryer.
- Do not install the tumble dryer in a room where there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly. There is a risk of damage if the condensed water is allowed to freeze in the pump and hoses.

Installation Place

- Do not allow children to play with packaging materials.
 - The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
 - Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.
1. It is recommended that, for your convenience, the machine is positioned close to your washing machine.
 2. The tumble dryer must be installed in a clean place, where dirt does not accumulate. Air must be able to circulate freely around the appliance. Do not obstruct the front air inlet or the air intake grilles at the back of the machine.
 3. To keep vibration and noise within minimum level when the dryer is in use, it must be placed on a firm and level surface.
 4. The feet must never be removed.
 5. Place the product with its back surface to the wall (for heater models).

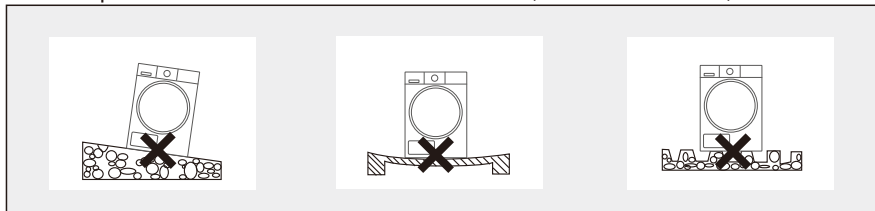


INSTALLATION

Level Adjusting

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level.

If it is not, adjust the feet by hand or using a tool.

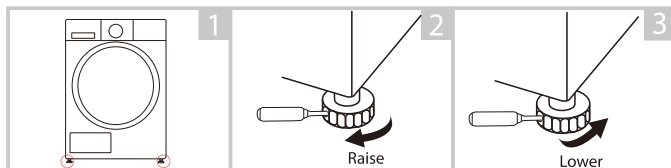

Power Supply Connection

1. Make sure that the voltage of the power supply is same as the electric specification.
2. Do not connect the dryer with the power connection board, a universal plug or socket, do not use multi-plug adapters and extension cables.

OPERATION


■ Quick Start



Note!

Before using, make sure the tumble dryer is installed correctly.

Before Drying

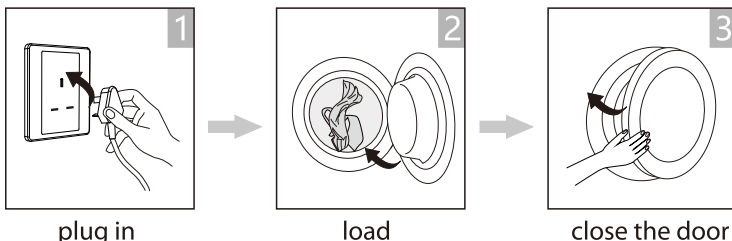


Drying



After Drying

Buzzer beep and "End" on display.

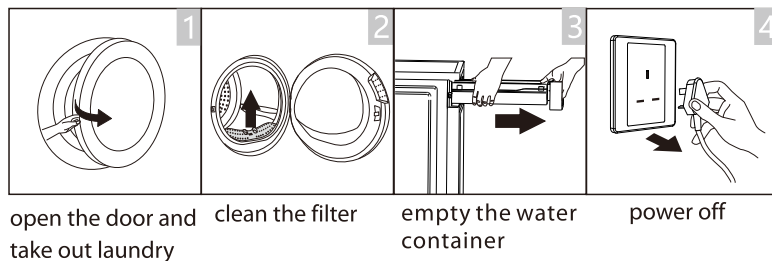

Note!

- If the socket with a switch is used, please press the switch to turn off the power directly.

OPERATION

■ Before Each Drying


Note!

- Leave it to stand for 2 hours after transporting. Before first use, please use the soft fabric to clean the inside drum.
 1. Put some clean rags into the drum.
 2. Plug the power, press **【 ⏻ 】**.
 3. Select the **【 TIME DRY 】** Programme, press **【 ▶00 】** button.
 4. After finishing this programme, please follow the “cleaning and care ” to clean the filter door.
- During drying, the compressor and the water will generate some noise which is entirely normal.

1. Before drying, thoroughly spin the laundry in washing machine. High spin speed shortens the drying time and saves energy.
2. For even drying result, sort the laundry according to fabric type and select the appropriate drying programme.
3. Before drying, please close zips, hooks, and eyelets, buttons, tie fabric belts, etc. and turn inside out.
4. Remove all objects from pockets such as lighters and matches.
5. Remove underwiring from bras.
6. Close duvet covers and pillow cases to prevent small items from being rolled up inside them.
7. Leave jackets open and undo any long zips so that textiles dry evenly.
8. Do not over dry the clothes, because over dried clothes can easily get creases.
9. Do not dry the articles containing rubber or similar elastic materials.
10. Keep the area around the tumble dryer clean. Coal dust or flour may cause an explosion.
11. The door can be opened only after the programme of the tumble dryer is finished to avoid being scalded by hot steam or hot drum.
12. Clean the door filter after each use to avoid extension of drying time and increase of energy consumption.
13. Do not dry clothes after dry-clean process.

OPERATION

■ Control Panel

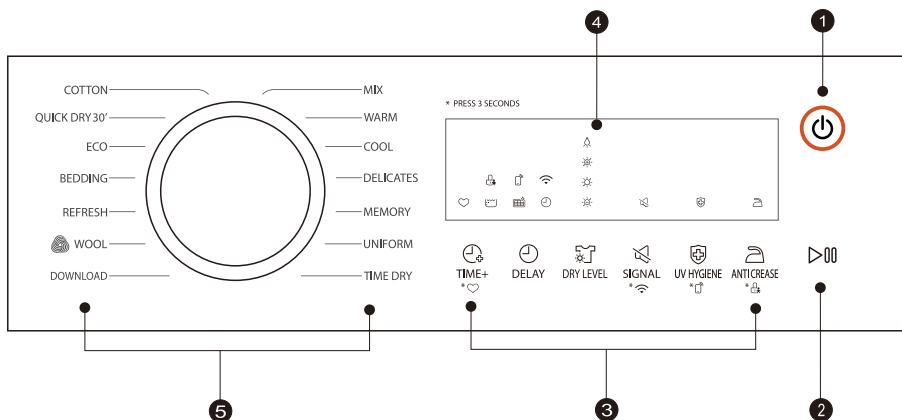

1 On/Off

Product is switched on or off.

2 Start/Pause

Press the button to start or pause the drying cycle.

3 Option

These buttons are used for setting additional functions.

4 Display

The display shows the setting, estimated program time remaining and status messages of your dryer.

5 Programmes

Different drying cycles can be selected according to the users need and the type of laundry to be dried.

OPERATION

The reference weight of dry clothes (weight per item)

 Sweater (mixed 800g)	 Jacket (cotton 800g)	 Jeans (800g)	 Bath Towel (cotton 900g)
 Single bedsheet (cotton 600g)	 Work clothes (1120g)	 Pyjamas (200g)	 Shirt (cotton 300g)
 T-Shirt (cotton 180g)	 Underwear (cotton 70g)	 Socks (mixed-weave 50g)	

 Note!

- Do not put more load than rated.
- Do not dry dripping wet laundry. The dryer might get damaged.

Only dry laundry suitable for tumble drying. Regard the laundry care labels:

-  Suitable for tumble drying.
-  Normal drying process : Dry under medium temperature.
-  Mild drying process: Dry under lower temparture.
-  Do not tumble dry: Articles unsuitable for drying in the tumbler.

OPERATION

■ Option



TIME+

The duration of time controlled program can be adjusted individually by the option [TIME +]. The drying time can be set in 10 minute steps. Once the preset time has elapsed, the program ends automatically.



MEMORY

Used to define and save your favourite program, which is used frequently.

1. Select the desired program and other drying functions.
 2. Press and hold the [TIME +] for 3 seconds until the beep sounds and the desired program has been saved.
 3. Turn the program selector to the [MEMORY] position, then you can start your favourite program. If you want to change the [MEMORY] settings, repeat the steps (1) and (2)
-



DELAY

This function can be used to delay the end of the drying program by up to 24 hours. When the delayed program starts, the time on the display starts to count down and the "⌚" symbol lights up.

1. Place the laundry in the drum and make sure that the appliance door is closed.
 2. Turn the program selector to choose the desired program.
 3. Press the [DELAY] button to set the desired time. Press it repeatedly to change the delay time.
 4. After the [▷00] button has been pressed, the tumble dryer is in operating mode. The drying process is starting automatically when the delay time has elapsed.
 5. If you press the [▷00] button, the program pauses.
 6. If you want to cancel the delay function, you can adjust the appointment time to 0 or press the [⏻] button .
-

OPERATION



DRY LEVEL

You can set the degree of dryness of the laundry using the [DRY LEVEL] button. There are three different drying level: Iron dry, Cupboard dry and Extra dry.

1. The drying level function can only be selected before the program starts.
2. Press the [DRY LEVEL] button repeatedly to adjust the dryness level.

Note:

This option is available for various programs.



SIGNAL

Press the [SIGNAL] button to activate the signal. Switch the signal tone on or off. The signal tone is switched on by default.

When the signal tone is switched on:

1. The tumble dryer confirms the pressing of the option button with a signal tone.
 2. If the program knob is turned while the tumble dryer is running, the acoustic signal reminds you that this is an invalid operation.
 3. When the drying program is finished, you will hear a signal tone.
-



UV HYGIENE

The UV function helps to reduce germs that may still be present in the laundry after washing. Particularly suitable for increased hygiene requirements.

1. Select special program.
2. Press the [UV HYGIENE] button and the [] symbol appears on the display.
3. To deactivate the UV function, press the [UV HYGIENE] button again.

Note:

This option is only available for special programs.

Some programs have this function activated automatically. To deactivate, press the [UV HYGIENE] button and the symbol disappears from the display.



ANTI CREASE

At the end of the drying program, a 30-minute anti-crease function is activated as standard. The duration of this function can be set to OFF or 30-60-90-120 minutes.

This function prevents the laundry from wrinkling.

The laundry can be removed during the anti-crease function.

OPERATION



WIRELESS NETWORK

For connecting your appliance to the Internet, press the [SIGNAL] button for 3 seconds. This activates the wireless network function. To cancel the Wireless Network function and reset the network settings on the appliance, press again for 3 seconds.

Note:

Information on the initial installation of the wireless network connection see "Instructions to Connection with the TSmartLife App".



Remote Control

After you have connected your appliance to your wireless network, you can operate it via the TSmartLife App. Press the [Remote control] button to activate the remote control status to control your appliance via the TSmartLife App. To deactivate the function, press the button again. For information how to connect your appliance to TSmartLife App see "Instructions to Connection with the TSmartLife App".

Considering the safe operation of appliance, the smartphone remote control should meet the following conditions:

1. The appliance should connect to the Wireless Network
2. The door of drum should be closed

Note:

If the door is open at any time, the remote control function will be deactivated.

The remote control function is turned off at the end of each program automatically, if you want to use remote control function again, you need to turn it on again.



 
CHILD LOCK

This tumble dryer is equipped with a special child lock function that prevents children from pressing buttons carelessly or operating the appliance incorrectly.

1. To activate the child lock, press the [ANTI CREASE] button for 3 seconds while the tumble dryer is running, paused or in standby mode.
 2. When the child lock is activated, the display shows the child lock symbol.
 3. To deactivate the child lock, press the [ANTI CREASE] button again for 3 seconds.
-

OPERATION

■ Display

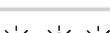	Child lock
	Remote Control
	Wireless Network
	Memory
	Empty water container warning
	Clean lint filter warning
	Delay
	Dry Level (Iron dry, cupboard dry, extra dry)
	Lamp
	Signal
	UV Hygiene
	Anti Crease
	Remaining Time indicator/Error message



The wool drying cycle of this machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled “hand wash” provided that the garments are washed in a Woolmark endorsed hand washing cycle and dried according to the instructions issued by the manufacturer of this machine.
M2206: TD-T33B120HWM(WS)

OPERATION

■ Programmes

Programme selector

1. When the LED display screen brightens up, press the display panel to select the desired program.
2. Select the [TIME+], [DELAY], [DRY LEVEL], [UV HYGIENE], [ANTI CREASE], [SIGNAL] functions for additional options.
3. Press the 【▷00】 button.
4. Press the 【🔌】 button after the program has completed.

Programme start

The drum will rotate after the program starts. and the remaining program time will be displayed.

Programme end

1. The drum will stop rotating after the programme ends. The display will show "End", Please press 【🔌】 button after unloading the tumble dryer to cut off power and pull out the plug.

OPERATION

■ Instructions to Connection with the TSmartLife App

Before you start, make sure that:

1. Your smartphone is connected to home wireless network , and you know the network password.
2. Make sure you are near the home appliance.
3. The 2.4GHz band wireless signal is enabled on your wireless router.

Follow the below steps to enter the remote control state


Download the TSmartLife App

On an app market (Google Play Store, Apple App Store), search for "TSmartLife" and find the TSmartLife app. Download and install it on your phone. You can also download the app by scanning the QR code below.



Register and log in

Open the TSmartLife app, and create a new account to start (you can also register through a third-party account). If you already had an existing account, use the account to log in.

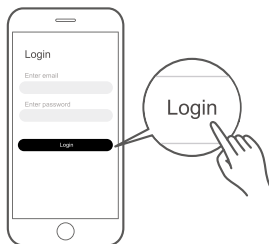

Connect your devices to TSmartLife


- 1: Please make sure your mobile phone is connected to wireless network. If not, go to Settings and turn on the wireless connection, select and connect to a wireless network. Also please turn on the Bluetooth on your phone. If not, go to Settings and turn it on.
- 2: Please power on your devices.
- 3: Open TSmartLife app on your phone.

OPERATION

4: If a message of "Smart devices discovered nearby" appears, click to add.



5: If no message appears, select "+" on the page and select your device in the list of nearby devices available. If your device is not listed, please add your device manually by the device category and device model.

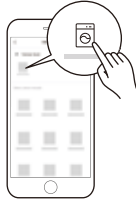

6: Connect your device to wireless network according to the instructions on app. If the connection fails, please follow the instructions provided by the app to continue with the operation.



OPERATION

Wireless Network Status Light

	Slowly flashing	Waiting for connection
	Quickly flashing	Connecting
	Quickly flashing solid	Connected to your wireless router

Notes

- Make sure your devices are powered on.
- Keep your mobile phone close enough to your device when you are connecting network to your device.
- Connect your mobile phone to the wireless network at home, and make sure you know the password of the wireless network.
- Check if your router supports 2.4 GHz wireless network band and turn it on. If you are not sure whether the router supports 2.4 GHz band, please contact the router manufacturer.
- The device cannot connect to the wireless network that requires authentication, and it usually appears in public area such as hotels, restaurants, etc. Please connect to a wireless network that does not require authentication.
- It is recommended to use a wireless network name that only contains letters and numbers. If your wireless network name contains special characters, please modify it in the router.
- Turn off the WLAN+ (Android) or WLAN Assistant (iOS) function of your mobile phone when connecting network to your devices.
- In the case that your device connected to wireless network before but it needs to reconnect, please click "+" on app Home page, and add your device again by the device category and model according to the instructions on app.

WIRELESS NETWORK INFORMATION

Working Frequency	2.4G
Extreme Temperature Range	-20°C~85°C
Max RF Power Output	Wireless Network: E.I.R.P 18dBm BT: 8dBm

OPERATION

■ Drying Programmes Table(* Programmes can be set in App)

Programme	Max Load	Application/Properties
COTTON	11.0kg	This program is suitable for drying heavy-duty cotton items. Note: Use Bed Linen program to dry large, bulky items made from cotton like bed sheets. Use Mix program to dry small size mixed loads type made of cotton and synthetics.
QUICK DRY 30'	0.6kg	For quick drying of individual items or small quantities of laundry. Suitable for textiles made of cotton, synthetics and mixed fabrics. Do not exceed the maximum load quantity for this program. Note: For textiles like towels, bathrobes or bathroom rugs please use the program BEDDING .
ECO	11.0kg	The eco program is suitable to dry wet cotton laundry. It's the most efficient program in terms of energy consumption.
BEDDING	5.0kg	Suitable for a typical bed linen load (bed sheets, pillowcases, duvet covers). Do not exceed the maximum load quantity for this program.
REFRESH	2.0kg	To refresh clothes kept at closet for a long time or to remove odors. Min. 20 min to max. 180 min (in 10 min. steps)
WOOL	1.0kg	Suitable for woollen textiles and textiles made from wool blends that are labelled as suitable for tumble drying.
TIME DRY	—	The Time Dry program is suitable for pre-dried or slightly damp laundry. Also recommended for individual items or for drying thin fabrics. The program can be set between 10 and 150 minutes.
MIX	6.0kg	For drying mixed loads made of cotton, synthetics including mixed fabrics.
WARM	—	Blow warm air into the dryer bucket to warm clothes, and the timing can be adjusted between 10 to 150 minutes.
COOL	—	Blow cold air into the dryer bucket, and the timing can be adjusted between 10 and 30 minutes.
DELICATES	1.0kg	Suitable for drying delicate fabrics. Note: Do not exceed the maximum loading quantity.
MEMORY	—	Define and save your favourite program.
UNIFORM	2.0kg	To dry 2-3 sets of cotton school uniforms.
DOWNLOAD	—	By using APP, you can download additional programs to your tumble dryer and select them under the Download program position. Choose the program that meets your needs in the APP.
OUTDOOR*	2.0kg	To dry sportswear and thin fabrics from polyester, which are not ironed.
JEANS*	4.0kg	Special program for jeans trousers and jeans jackets as well as casual clothing made from denim. Note: Dry inside out.

OPERATION

Programme	Max Load	Application/Properties
YOGA CLOTHING*	1.0kg	To dry yoga clothing made of synthetic fibers or cotton-linen materials.
UNDERWEAR*	0.5kg	To dry underwear fabrics.
CHIFFON*	1.0kg	To dry lightweight chiffon clothing.

Programme	TIME+	DELAY	DRY LEVEL	UV HYGIENE	ANTICREASE
COTTON	N	Y	Y	Y	Y
MIX	N	Y	Y	Y	Y
WARM	Y	Y	N	N	Y
COOL	Y	Y	N	N	N
DELICATES	N	Y	Y	N	Y
MEMORY (ECO)	N	Y	N	N	Y
UNIFORM	N	Y	Y	Y	Y
TIME DRY	Y	Y	N	N	Y
DOWNLOAD (OUTDOOR)	N	Y	Y	Y	Y
WOOL	Y	Y	N	N	N
REFRESH	Y	Y	N	N	Y
BEDDING	N	Y	Y	Y	Y
ECO	N	Y	N	N	Y
QUICK DRY 30'	N	Y	N	N	Y
OUTDOOR*	N	Y	Y	Y	Y
JEANS*	N	Y	Y	Y	Y
YOGA CLOTHING*	N	Y	Y	Y	Y
UNDERWEAR*	N	Y	Y	Y	Y
CHIFFON*	N	Y	Y	N	Y



Note!

Y: Means available, N: Means not available.

MAINTENANCE


■ Cleaning and Care

📌 Note!

- The first notification that appears on the display after the dryer is powered on to clean the door filter or empty the water container is only a general reminder.

Empty the water container

1. Pull out and hold the water container with two hands.
2. Tilt the water container, pour out the condensation water into the basin.
3. Install the water container.

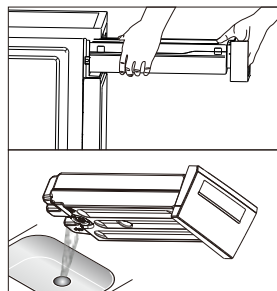

📌 Note!


- Empty the water container after each use. Once the water container is filled completely, the program will be paused and the "🗑️" will light on the display, especially when the machine is running at full load. After the container is emptied, the dryer can be restarted by pressing [▶||] button.

Clean the lint filters

This dryer has a primary door lint filter for additional protection. Make sure you clean the lint filter after each program to avoid increased energy consumption and program time.


Clean the door filter

1. Open the door.
2. Take out the door lint filter.
3. Open the lint filter and remove the fluff on the filter screen. You can use a vacuum cleaner to remove the lint or clean it by hand.
4. Throw lint in the garbage bin and do not wash it down the drain to avoid micro plastics in the used water system.

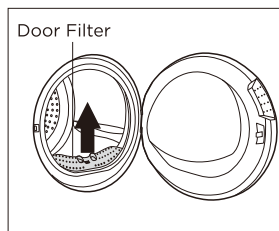

📌 Note!

- To ensure the double-layer filter can be closed smoothly, the middle slot need to be aligned.
- Take notice of the correct orientation before to insert the door filter.

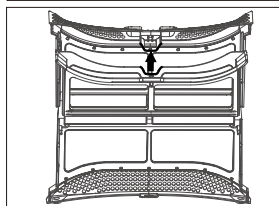


MAINTENANCE

Clean Tumble dryer



Warning!

- Disconnect the power cord before cleaning!
- Clean the dryer with a wet cloth which is only damped by clean water.
- Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts.

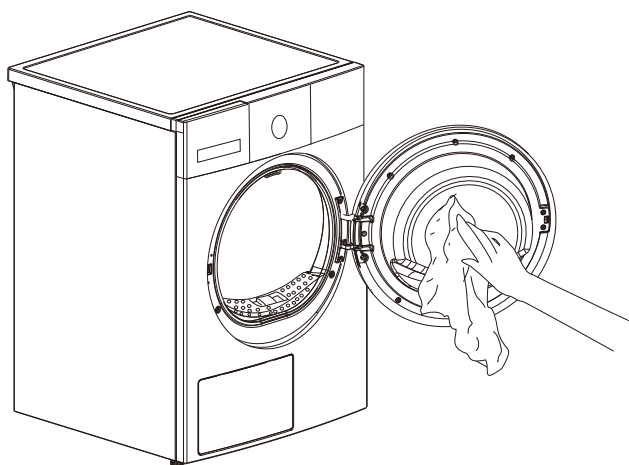

- Prepare a wet cloth damped by clean water.
- Clean the door, especially the inside window.
- Clean the sealing around the door opening.
- Clean the humidity sensor inside the drum.
- Take out all the filters, clean the sealing and air flow openings.
- Before starting the dryer, dry all parts with a soft cloth.

MAINTENANCE

■ Trouble Shooting

If you encounter an issue with the dryer, first check the table below and try to solve the issue before calling the service.

Problem	Solution
•Display is not on	•Check if the power supply works. •Check if power plug is inserted in wall socket correctly. •Check if dryer is turned on.
•Dryer does not start	•Check if the power supply works. •Check if power plug is inserted in wall socket correctly. •Check if dryer is turned on. •Check if door is closed correctly. •Check if 【▷00】 is pressed.
"  "is lighting or blinking	Check the water container. If it's full, please pour out the condensation water and restart the dryer. If the container is not full, please restart the dryer directly. If the " "icon is still lighting or blinking after you have finished the first two steps, please call the customer service. When the dryer is powered on standby, the " "icon will always on only as a reminder. After startup, the " "icon will disappear. Please perform maintenance after each cycle
"  "is lighting or blinking	Clean the lint filter. When the dryer is powered on standby, the " "icon will flash to remind the user to clean the filter . After startup, the " "icon will disappear.Please perform maintenance after each cycle
•Cloths are not dried or drying time is too long	•Clean Door filter. •Clean air inlet. •Check if installation place is proper.
•There are humming noises	• The compressor is operating. These noises are quite normal and do not indicate a fault.
• The dryer switches off at the end of the programme	• The dryer switches off automatically after the end of operation. This is not an error but a normal function.
• The dryer does not shut off instantly when remote control is paused/aborted.	• Cooling in progress — the dryer will shut off automatically when cooled. This is a normal operation, not a fault.

MAINTENANCE

Error Codes

Display	Reason	Solutions
"E32"	Humidity sensor error	Please contact your local service center if the problem occurs.
"E33"	Temperature sensor error	
"E64"	BLDC motor communication error	
"E82"	PCB communication error	




Warning!

- If the issue continues after trying the solutions, turn off dryer and diconnect power plug, then call the service.
- Self-repair or non-professional repair may create safety risk and cease the guarantee.

MAINTENANCE

■ Technical Specifications

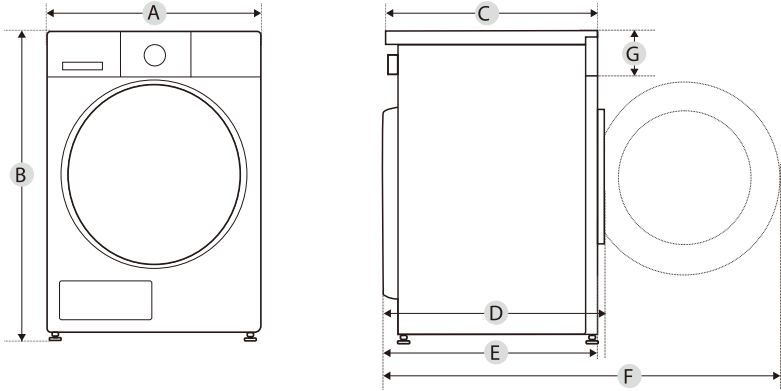

Model	TD-T33B120HWM(WS)
Power Supply	220-240V~,50Hz
Rated input power	750W
Rated capacity	11.0kg
Refrigerant	R134a
Weight	50kg
GWP	1430
CO ₂ e	0.39t
Quantity of refrigerant	270g
Ambient temperature	+2°C ~ +35°C
Dimension	
A	595mm
B	850mm
C	600mm
D	670mm
E	650mm
F	1110mm
G	120mm

Contains fluorinated greenhouse gases covered by the Kyoto Protocol.
Hermetically sealed.

📌 Note!

- The rated capacity is the maximum load quantity in kg dry weight that can be dried at one time. Make sure that the laundry loaded into the appliance does not exceed the rated capacity.
- Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
- There is a risk of damage if the condensed water is allowed to freeze in the pump and hoses.