

TOSHIBA



Toshiba Electric Hot Pot (For household use)

Instruction Manual






Model





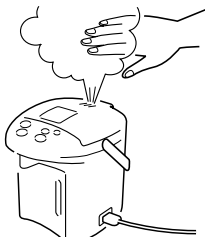






PLK-45SD	PLK-45SDI
PLK-45SDR	PLK-45SDRI
PLK-45SE	PLK-45SEI
PLK-45SF	PLK-45SFI

- Thank you for buying Toshiba electric hot pot today.
- The electric hot pot is used for boiling water only.
To apply this product safely and properly, please read the manual thoroughly and well understand before use.
- After reading, please keep the manual handy.

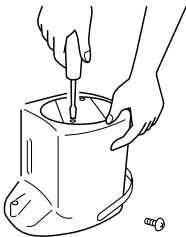








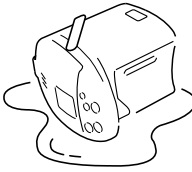



SAFETY PRECAUTION Follow the instruction strictly.

● This page is mainly referred to the safety precaution to prevent the property damage and the danger to the users and others. After understanding these details clearly (the indication and the symbols), please read and follow the specified items.

SIGNAL EXPLANATION		SYMBOL EXPLANATION	
	WARNING Indicating "when the product is used wrongly, it may cause severe injuries* ¹ and death."		⊘ indicates prohibition (must not do). The details of the prohibition will be instructed by sentences or illustration nearby or in the symbol.
	CAUTION Indicating "when the product is used wrongly, the user may get injured* ² or the product may cause the property damage* ³ ."		● indicates mandatory (must do). The details of the mandatory will be instructed by sentences and illustration near or in the symbol.
<p>*1 : Severe injuries mean to get blind, wound, burnt (high and low temperature), an electric shock, broken bones, and poison, etc. Consequently, there may be some symptoms and you may go to the hospital and it takes a long time to cure.</p> <p>*2 : Getting injured means you get wound, burnt, an electric shock. However, you do not have to go to the hospital for long cure.</p> <p>*3 : Property damages mean the damage to the accommodations, properties, farmland, and pets, etc.</p>			△ indicates caution. The details of the caution will be instructed by sentences or illustration nearby or in the symbol.

 WARNING	
 Do not disassemble. Do not disassemble or repair. It may cause fire, an electric shock, and injury. For repair, please contact the shop you purchased or Toshiba repair information center. 	 Do not touch. Do not directly touch the steam vent with your hand. It may cause burn. Please be more carefully not to allow small children to touch the vent. 
 Wet hand is prohibited. Do not connect or disconnect the power cord when your hand is wet. It may cause an electric shock or injury.	 Close it firmly. Close the lid firmly. If the pot falls down, the water will flow out and you may get burnt.
 PROHIBITED Do not boil anything except water. When tea, milk, or alcohol, etc. gets hot, it may splash over and you may get burnt.	 PROHIBITED Do not put any ice in the pot to keep the water cool. There will be some moisture on the outside of the pot. This can cause an electric shock and some accidents.
 PROHIBITED Do not cover the steam vent with clothes or anything. The hot water may splash over and you may get burnt.	 PROHIBITED Close the lid loosely. The hot water may splash over and you may get burnt.

(WARNING continued)

 <p>Do not fill the water more than the maximum of the water level gauge.</p> <p>PROHIBITED The hot water may splash over and you may get burnt.</p>	 <p>Do not allow the children to apply this appliance and keep it out of reach from the children.</p> <p>PROHIBITED It may cause burns, an electric shock, and injury.</p>
 <p>Do not do anything improperly with the pot.</p> <p>Do not scratch, bend, pull, twist, or connect the power cord when you put the object on it. Do not place it near the heating source. Do not put the heavy objects, pinch, or modify the cord.</p> <p>The cord may be damaged, and then cause the fire and an electric shock.</p>	 <p>Do not soak the pot.</p> <p>Do not wet or immerse the pot into the water. Do not wash the pot thoroughly. Do not immerse the bottom of the pot into the water and do not turn over the pot while its bottom is wet.</p> <p>Do not wet the power cord. It may cause a short circuit, an electric shock, and injury.</p>
 <p>PROHIBITED</p> <p>Do not tilt the pot.</p> <p>Although the button is locked, the water can flow out from the water dispenser or the steam vent when the pot is tipped, and it will cause burns.</p>	 <p>PROHIBITED</p> <p>Do not move the lid.</p> <p>The water will flow out from the dispenser or the steam vent. Then the pot may slip and fall down, and cause some burns and injury.</p>
 <p>PROHIBITED</p> <p>Do not terribly shake (especially vertically shake) or strike the pot.</p> <p>With the dispensing lock, if the pot is terribly shook or stroked, the water can flow out from the dispenser or the steam vent, and may cause burns.</p>	 <p>PROHIBITED</p> <p>Do not throw away the water with the lid closed.</p> <p>If the lid is accidentally detached, the water will spill over, then cause some burns.</p>
 <p>PROHIBITED</p> <p>Do not let the pot fall down.</p> <p>With the dispensing lock, if the pot falls down, the water can flow out from the dispenser or the steam vent, and may cause burns.</p> 	 <p>Remove the dust.</p> <p>If the power plug or its polar is dusty, wipe it away with the dry cloth.</p> <p>It may cause fire.</p>
 <p>PROHIBITED</p> <p>Do not use if the cord or the power plug is broken, or if the power plug is loose.</p> <p>It may cause an electric shock, a short circuit, and ignition.</p>	 <p>Fit the plug into the socket fully.</p> <p>Fully fit the plug into the socket.</p> <p>It may cause an electric shock, a short circuit, and fire.</p>

⚠ CAUTION



Unplug.

Pull the plug from the AC outlet when not in use.

It may cause injury, burns, an electric shock or electric leakage due to the deterioration of the insulation.



Hold the plug and pull.

When disconnecting, hold the plug and pull it out without touching the cord.

It may cause an electric shock or a short circuit, and then lead to fire.



PROHIBITED

Do not place the unit on the hot, delicate, or unstable surface.

It may cause fire.



PROHIBITED

Do not pour the water or open the lid while boiling.

The steam or the hot water may splash over and cause some burns.



Do not touch.

Do not directly touch the steam when opening the lid.

It may cause burn.



Do it after cool down the pot.

Maintain after leaving it cool.

In case of touching the hottest part, it may cause some burns.



PROHIBITED

Do not use the pot near the wall or the furniture.

The steam or the heat will deteriorate, decolor, or distort the wall and the furniture.



PROHIBITED

When moving the pot, do not hold the lid release lever.

The lid will automatically open and cause injury or burns.



Do not touch.

While using or right after using the pot, do not touch its hot part.

It may cause burn.



PROHIBITED

Do not use any other power cord except the attached cord, nor use the power cord with other appliances.

It may cause an accident and fire.



PROHIBITED

While pouring, do not rotate the pot.

The water may splash over and cause some burns.



PROHIBITED

This appliances is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.

children should be supervised to ensure that they do not play with the appliance.




PROHIBITED

This appliance is intended to be used in household and similar application such as

- Staff kitchen areas in shope, offices and other working environments.
- Farm houses.
- By clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.

PART NAMES AND FUNCTIONS

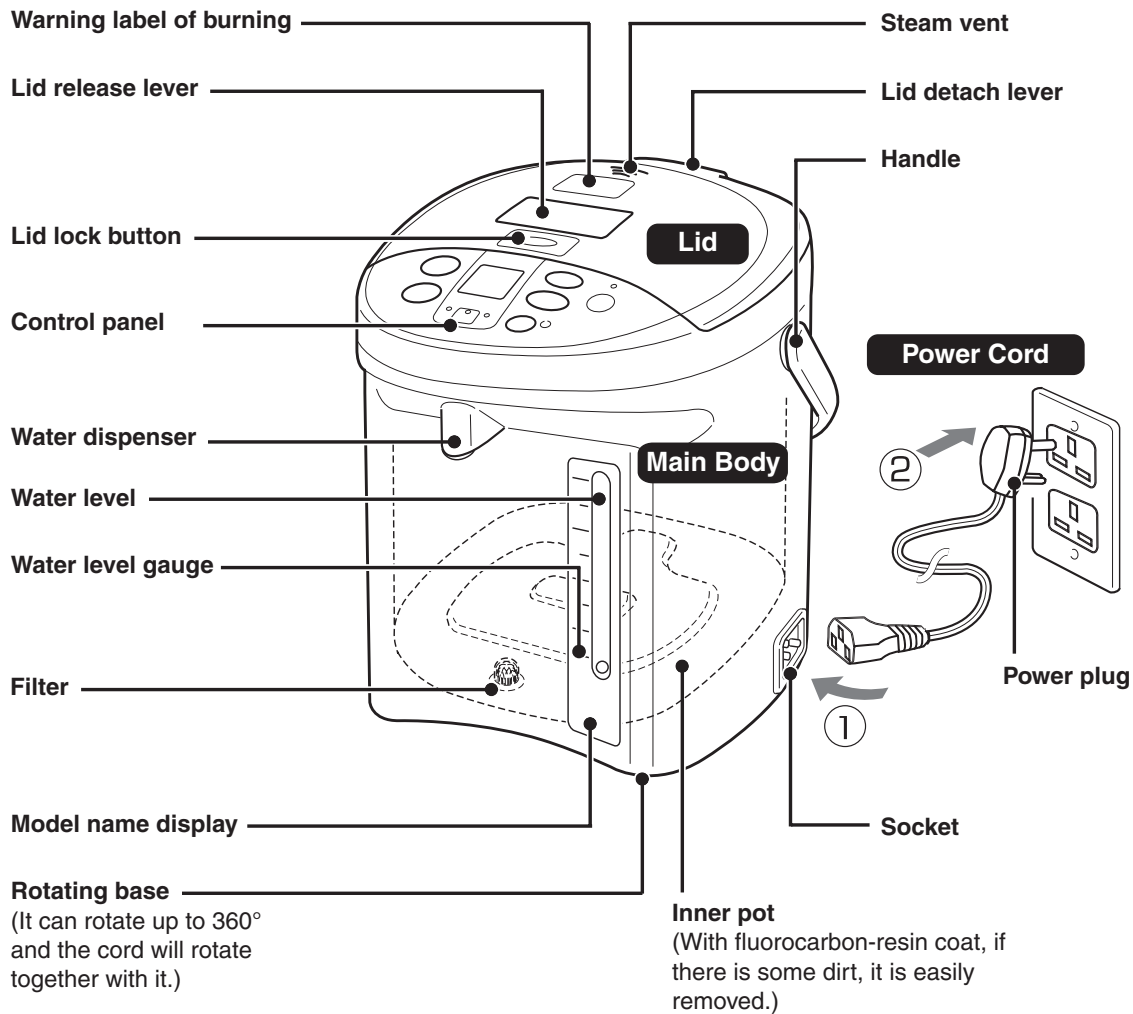


NOTE


- Do not use the appliance near the radio, etc. Please keep it away from the place affected by a radio, television, etc. It may cause a loud noise.
- Do not use it near the fire. The pot may be damaged and deformed.
- Do not directly supply the water from the tap into the pot.
- Do not pour out all the hot water remaining using the button on the control panel.
- Please pour out the hot water remaining after usage every time. If the water is left inside the pot, it may discolor the water or the water may be smelly.
- When pouring out the hot water, do not touch the dispenser.

How to open and detach the lid

- 1** Press the lid lock button, then lift the lid release lever and lift it up.

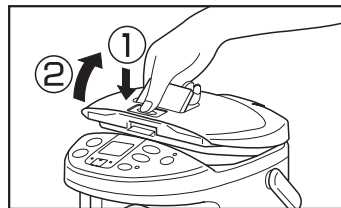



- 2** Hold the lid release lever up. While pressing the lid detach lever, lift the lid slantwise upwards.

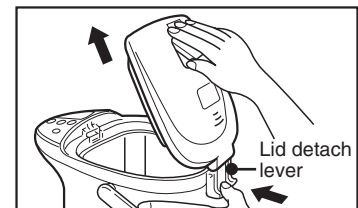

- Install the lid in the reverse order of removal. When closing the lid, please press it until the clicking sound is heard.

Control Panel

 Functions of the indicators on the instruction manual

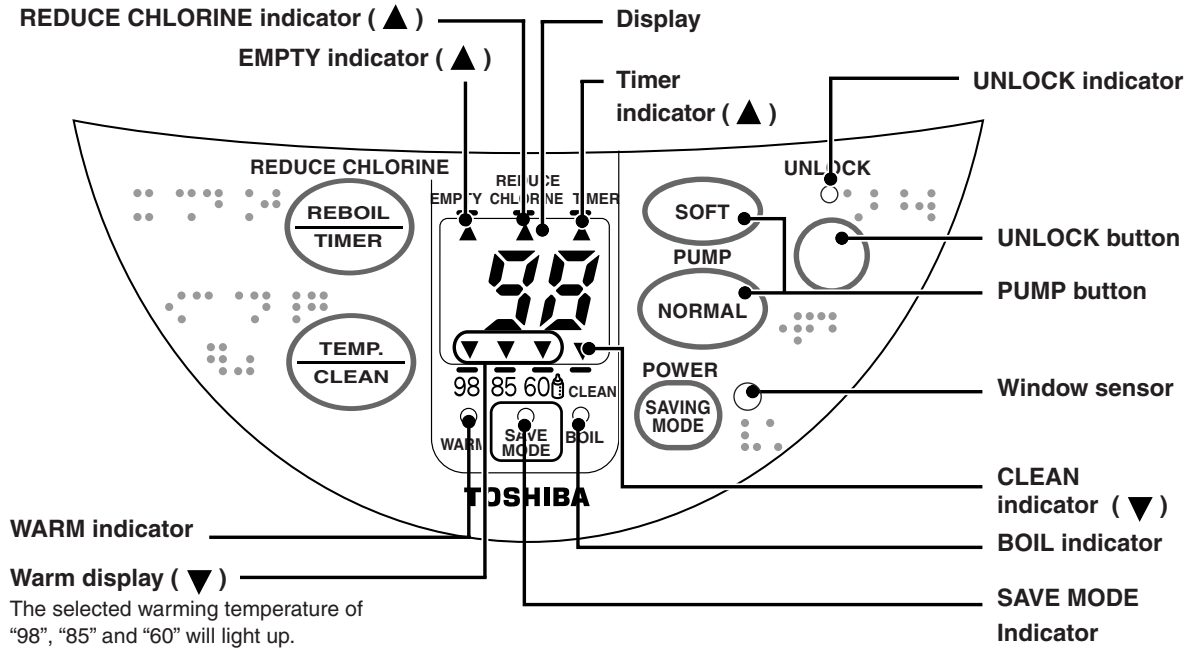

About buzzer

When pressing the buttons, "beep beep" or "beep" will be heard. These sounds signal the correct operation.


	Buzzer sound	beep beep	→ beep	→ beep	
	Operation	Reboil	Reduce chlorine	Timer	
	Buzzer sound	beep beep	→ beep	→ beep	→ beep
	Operation	"98" warm temp.	"85" warm temp.	"60" warm temp.	Clean
	Buzzer sound	bee	→ beep		
	Operation	Unlock	Lock		
	Buzzer sound	bee	→ beep		
	Operation	Saving mode	Cancel		

FOR THE FIRST TIME USE (In case of not using the pot for a long time)


Once boil the water at the temperature of “98”. After that, press the PUMP button to pour some water. Then, pour out all the water remaining from the pot. And the pot can be used generally.

1 Put the water into the inner pot and close the lid.


- For example, pour the water from the kettle.

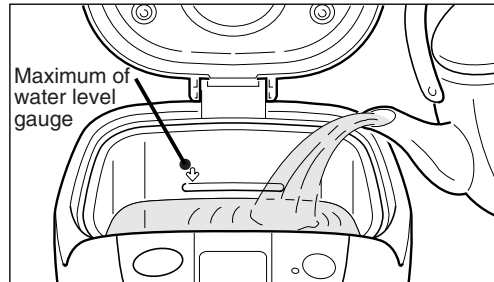

2 Connect the power plug. Then boil the water at the temperature of “98”.

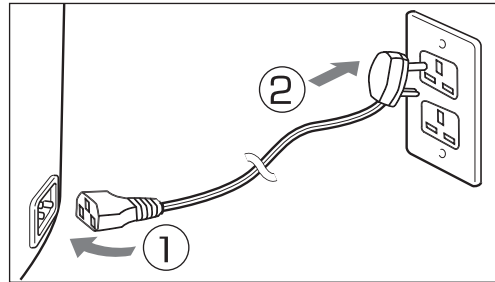


3 Press the PUMP button and pour out about half of the water.

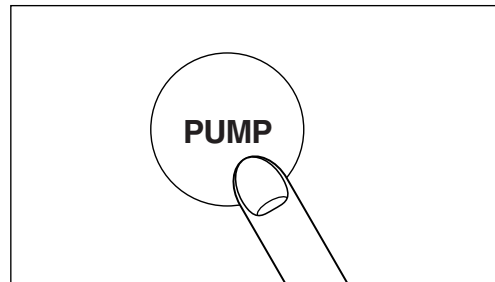

4 Pour out all the water remaining.

- After unplugging, detach the lid and pour out the water as shown in the picture. Please do not pour out the water using the button on the control panel.

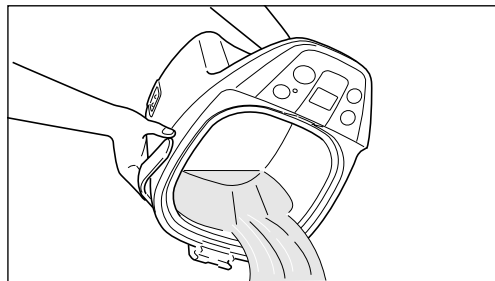


BOILING/POURING

BOILING

Put the water in the pot and close the lid. Connect the plug. Then press the **TEMP. CLEAN** button to select the temperature.



- ▶ The BOIL indicator will light up. And after the selected TEMP. indicator (▼) flashes about 2 seconds, the display will light up instead.

- The display will show the raising water temperature by 5°C at a time. If the temperature is lower than 15°C, "Lo" will appear. The displayed temperature is as a measure. It may change depending on the amount of water or the room temperature.

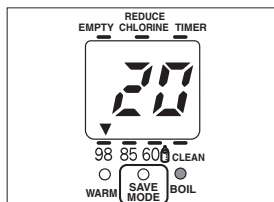


■ When selecting the temperature of "98"

- ▶ When the water boils, the BOIL indicator will light off, the WARM indicator will light up and "bee bee bee" will be heard noticeably.

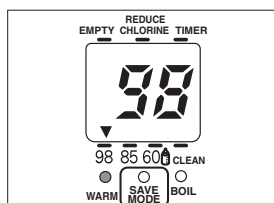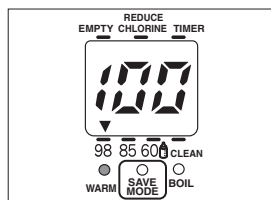


■ When selecting the temperature of "85" and "60"

- ▶ When the water boils, the BOIL indicator will light off and the selected TEMP. indicator will flash

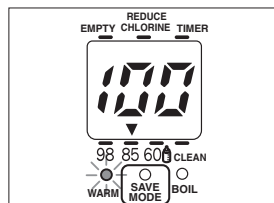

- ▶ When reaching the selected temperature, the WARM indicator will light up and "bee bee bee" will be heard noticeably.

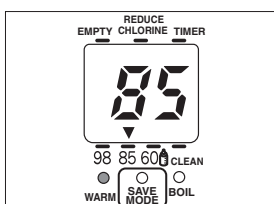

Indication	For
	At the temperature of "98" Coffee, Chinese tea, instant cup noodle, etc.
	At the temperature of "85" Japanese tea, etc.
	At the temperature of "60" Mixing milk, etc. (After melting the milk powder, let it cool down to the proper temperature.)
	Cleaning

● The time range of water boiling

- 3.5L: About 26 minutes
- 4.5L: About 32 minutes

(The amount of water: maximum water/the room and water temperature: 20°C)

● The range of time after boiling to the temperature of "85"

- 3.5L: About 1 hours and 10 minutes
- 4.5L: About 1 hours and 30 minutes

● The range of time after boiling to the temperature of "60"

- 3.5L: About 4 hours
- 4.5L: About 4 hours and 30 minutes

(The amount of water: maximum water/the room and water temperature: 20°C)

NOTICE

- Although the power cord is unplugged, the previous set temperature will not change until the temperature is adjusted next time.
- The boiling point will change upon the land level and the pressure. Then the selected warm temperature will also change. (In case the selected temperature is "98".)
- If the room temperature is higher after the water boils, it will take more time to reach the selected temperature.
- The warming temperature can be altered although the water is being warmed. The boiling point will depend on the water temperature at that time.

NOTE

- Do not fill the water while the water temperature is decreasing. The water may not boil when reaching the selected warm temperature.

POURING


WARNING

**Do not turn over or tilt the pot.
Do not terribly shake (especially shake up and down) or strike the pot.
Do not hold the lid while moving the pot.**

The water will flow out from the water dispenser or the steam vent. Then the pot may slip and fall down, and cause some burns and injury.




- 1 Press the UNLOCK button, then the button will be unlocked.

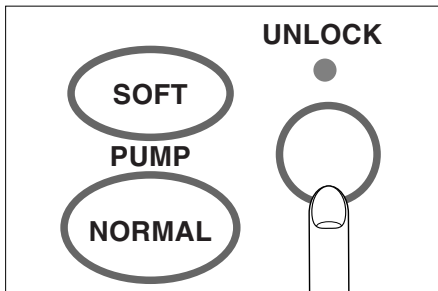

- ▶ The UNLOCK indicator will light up.
- About 2 seconds after the pot is unlocked, the water can be poured out. And 2 minutes later, the pot will be automatically locked.

- 2 Place the cup under the water dispenser and press the PUMP button. Then, the water will pour out.

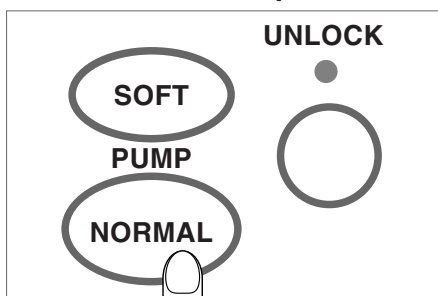


There is 2 selectable levels of water pouring. Please select with the proper use.

SOFT : For slowly pouring into the small container such as a cup, etc.
NORMAL: For pouring a great amount of water such as for cooking, etc.


- **The UNLOCK indicator will light up.**
When wanting to lock right after pouring water Press the UNLOCK button and the UNLOCK indicator will light off

Reducing Chlorine

Press the  button once while boiling and press it twice while warming. Then, the **REDUCE CHLORINE** indicator (▲) will light up.

- ▶ The BOIL indicator will flash and the REDUCE CHLORINE indicator (▲) will light up.
- While the water has been boiling for 3 minutes, the amount of chlorine will be reduced.

Example: In case of warming at the temperature of “98”

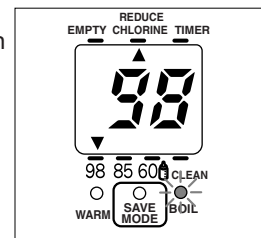

- **When the water is reboiled**
- Please press the button twice.

When the pot is nearly empty


Fill the water before the water reaches the water level gauge


When not in use

Unplug the power cord and detach the lid. After that, pour out all the water.

Regarding the prevention to warm the empty pot

To prevent the accident from overheating, if it is found that the empty pot is warmed (for example, there is the distribution of power supply when the pot is empty.), the electric current distributed to the heater will be cut off and it is noticeable from the “bee bee bee, bee bee bee, bee bee bee” signal sound and the indicator flashing.

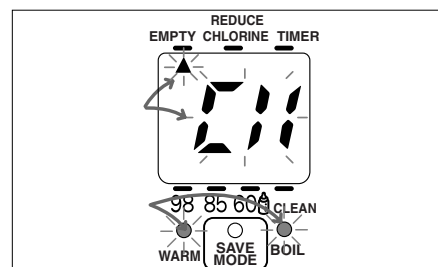


- Please fill the water and press the  button.
- If the empty pot is warmed many times, the coated fluorocarbon-resin may discolor or peel away.

REBOILING/WARMING (TIMER AND SAVING MODE)

Reboiling water while warming

Press the  button once.

- ▶ The BOIL indicator will light up.

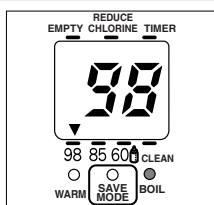


● The time range of water reboiling

- At the temperature of “98”: About 3 - 6 min
- At the temperature of “85”: About 9 - 10 min
- At the temperature of “60”: About 15 - 18 min
- In the saving mode: Within about 18 min
(The amount of water : maximum water/the room temperature : 20°C)

TIMER MODE

This mode cannot be used at the warming temperature of “60”.


When keeping the temperature of “98” or “85”, press the

 button and the **TIMER** indicator (▲) will light up.

- ▶ “6” will be displayed as the hour timer and the WARM indicator will flash. The hours remaining until setting timer is ended will be displayed by 1 hour. (In case setting timer while the water is being boiled, the WARM indicator will flash after the water boils.)

- ▶ The **TIMER** indicator (▲) will light off and the temperature indicator will display. After that, the water will be reboiled. When at the selected warm temperature, the WARM indicator will light up noticeably.

■ To cancel the timer

Press the  button once. It will switch to BOIL.


NOTE

- While in setting timer, selecting the temperature of “60” will cancel the operation.

10


SAVING MODE

This mode cannot be used at the warming temperature of “60”.


Press the  button while in the warming temperature of “98” or “85”.

- ▶ The **SAVE MODE** indicator will light up


When getting dark...

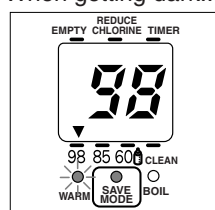

- ▶ The mode switches automatically to the saving mode by 5 seconds and the WARM indicator will flash slowly. (The control panel shows the warming status.)

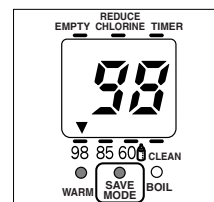

When getting light... (The light stays for 4 minutes.)

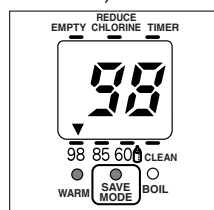

- ▶ The **WARM** indicator flashes rapidly. And at the selected warming temperature, the WARM indicator will light the signal will sound.


■ To cancel the saving mode

Please press the  button again.

The **SAVE MODE** indicator will light off.

- * In spite of unplugging, the saving mode still operates until it is cancelled.

■ To reboil the water in saving mode

Press the  button once to light up the **BOIL** indicator.

NOTE

- In saving mode, selecting the warm temperature at “60” or setting the timer will cancel the operation.
- The save mode cannot be used during timer setting mode.

To return to the saving mode operation

When the pot is moved to another location and the saving mode does not operate, please follow the setting procedure below:

1. Cancel the saving mode.
2. Adjust the lightness where the save mode operates.
3. Keep pressing the **SAVING MODE** button for 5 seconds. When the “bee bee bee” is heard, release the button. (The setting is complete.)

MAINTENANCE

⚠ WARNING

Do not wet the lid or the pot.

Do not wash the pot thoroughly. Do not immerse the bottom of the pot into the water and do not turn over the pot while its bottom is wet.

Do not wet the cord.

It may cause a short circuit, an electric shock, and an accident.




Do not soak.

Daily Maintenance


Filter

It is at the bottom of the pot.
Pull it out and clean it with the brush.
Remove the water slime from the inserted part.
When re-installing, push it down firmly.

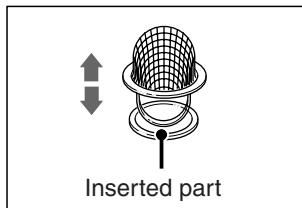

Inner Pot

Wipe it softly with sponge and wash it with water.
Clean it with citric acid once a month or three months.

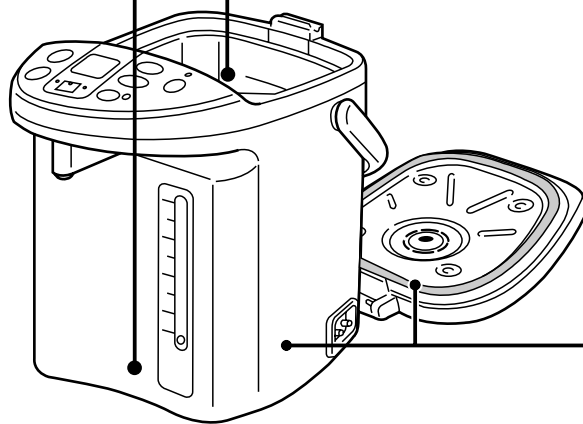

Main Body and Lid

Wipe it with damp cloth.

Regarding the water slime (which is colored) or white stains

- White particles (crystallized mineral)
- The changes of water color to milky, black or red, etc.
- Rust-like spots (slightly rusty)
- Roughness

According to the example on the left, these are caused by the minerals in the water. So these are not the changes of color or the bad smell caused by the pot, and the peeling of fluorocarbon.

* Though here does not concern the health problem, please be aware of the maintenance with the citric acid according to the specified period.


CAUTION

- Do not use benzene, cleanser, or the scrubbing brush.
These will erode the surface or the coated fluorocarbon.
- Do not clean the pot with the dish washer or the dish dryer.
Such appliances may distort the pot.
- Do not wash it with the detergent.
The pot may be smelly.

- Be aware of the pot cleaning.
If the dirt is left in the pot, there will be some noise when boiling or it will cause the problem of pouring water.
- In case of not in use for a long time, please leave it naturally dry after the maintenance.

How to clean the pot with the citric acid


1 Put the water into the pot at the level of maximum water. Then fill about 50 grams of citric acid into the water and close the lid.

2 Connect the power cord and press the  button to select “CLEAN”.

► The CLEAN indicator (▼) flashes and then lights up to start cleaning.


● It takes about 90 minutes for cleaning.

During the clean

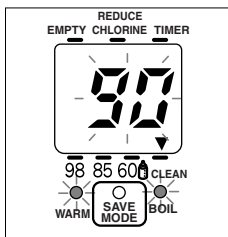

► The WARM and BOIL indicators will flash. The remained time of the cleaning will flash in the display of minutes.

This means the pot cleaning is finished.

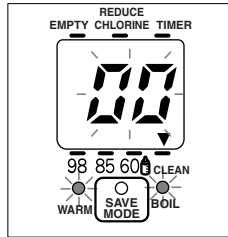

► The “bee bee bee bee” will be heard and WARM indicator, BOIL indicator, and display will flash quickly.

3 Unplug and pour out all the water. Wipe away the dirt from the pot and wash it with water.

4 To remove the smell of the citric acid, fill the water at the level of maximum water and select the temperature of “98”. After that, boil the water and then pour out all the boiled water.

SPECIFICATIONS

Model	PLK-45SD, 45SDR, 45SE and 45SF	PLK-45SDI, 45SDRI, 45SEI and 45SFI
Power supply	220 - 240 V a.c. 50 - 60Hz	
Power consumption	Boiling 700 W	
Capacity	4.5 L	
Type of water pouring	Pouring water with electric power	
Outer volume (Width x Depth x Height)	22.4 cm x 30.6 cm x 28.3 cm	
Weight (Including the power cord)	About 2.7 kg	
Fuse temperature	152°C and 157°C	