

TOSHIBA

WASHING AND DRYING CARE SET

OWNER'S MANUAL

MODEL: TWD-T40BZU110MWS(WT)
DRYER MODEL: TD-T40BS90HWS(WT)
WASHER MODEL: TW-T40BZP110MWS(WT)

Read This Manual



Read and follow the instructions carefully.
Keep the operation instructions handy for
future use.

Please contact the customer service if
you are in need of a new user manual.

CONTENTS

SAFETY INSTRUCTIONS

■ Safety Instructions	2
-----------------------------	---

INSTALLATION

■ Product Description	15
■ Installation	16
■ Stacking Installation.....	19
■ Drain Hose.....	20
■ Drying Support Installation.....	22

OPERATION

■ Quick Start	23
■ Before Each Washing	25
■ Detergent Dispenser.....	26
■ Before Each Drying	28
■ Control Panel	30
■ Options.....	31
■ Display.....	35
■ Instructions to Connection with the TSmartLife App.....	37
■ Programs Table	40

MAINTENANCE

■ Cleaning and Care	46
■ Trouble Shooting	51
■ Technical Specifications	54

SAFETY INSTRUCTIONS

■ Safety Instructions

The product is intended only for home use and for textiles in household amounts suitable for washing or drying. This appliance is for indoor use only and not intended for built in use. Only use according to these instructions. The appliance is not intended for commercial use.

Any other use is considered as improper use. The producer is not responsible for any damage or injury that may result from it.

This appliance is intended to be used in household only and it is not intended to be used such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Areas for communal use in blocks of flats or in launderettes.

Explanation of the Symbols:

Warning!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.

Caution!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.

SAFETY INSTRUCTIONS

Note!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Warning!

Electric Shock Hazard

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons.
- Do not climb or sit on the appliance.
- Before plugging in this product, ensure that the connection parameter on the rating plate (fuse rating, voltage and frequency) match the mains electricity supply. If in any doubt, consult a qualified electrician.
- Do not pull the power cord forcefully. Please grasp the mains plug instead.

SAFETY INSTRUCTIONS

- Do not plug/unplug the mains plug with wet hands.
- The accessibility of the plug must always be ensured, in order to disconnect the tumble dryer from the mains.
- If the appliance appear high temperature abnormally, please unplug immediately.

Warning!

Danger of Injury

- Do not disassemble or install the dryer without any instruction or supervision.
- Do not lean on the opened door of this product.
- Condensed water is not drinking water. It can cause health problems in both people and animals if consumed.

Warning!

Danger of Damage

- Do not put more load than rated in this user manual. See the related chapter in the user manual.
- Do not operate the dryer without the door filter.
- Do not dry the clothes before being spin.
- Do not expose the dryer directly under the sun.
- While cleaning and maintenance, please do remember to unpulg and do not directly spray the dryer with water.
- The appliance should not be overturned during normal use or maintenance.
- While cleaning and maintenance, please do remember to unpulg and do not directly spray the dryer with water.
- The appliance should not be overturned during normal use or maintenance.

SAFETY INSTRUCTIONS



CAUTION: RISK OF FIRE !



Warning!

Explosion & Fire Danger

- Please do not dry the clothes with any flammable substances such as kerosene or alcohol. Otherwise, there may be explosion.
- Keep away from open flame and other sources of ignition.
- This product is not to be used if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

SAFETY INSTRUCTIONS

- Remove all objects from pockets such as lighters and matches.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent. This will reduce, but not eliminate, the hazard.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Openings must not be obstructed.
- The lint trap has to be cleaned frequently.
- Lint must not be allowed to accumulate around the tumble dryer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: In the appliance enclosure or in the built-in structure, keep ventilation openings clear of obstruction.

Safety with Children

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be done by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Always close the door after use. In this way you will avoid the danger of:
 1. Children climbing onto or into the dryer or hiding thing in it.

SAFETY INSTRUCTIONS

- 2. Pets or other small animals climbing into it.
- Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating.

Installation Location and Surrounding

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- Do not install the machine on a carpet floor.
- The obstruction of the openings by a carpet can damage the machine.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes, let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the machine.
- Do not operate the machine in rooms with a temperature of below 2°C. This can cause damages to parts of it. For example, in the dryer unit, there is a risk of damage if condensed water is allowed to freeze in the pump and hoses. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see "MAINTENANCE -Cleaning the Drain Pump Filter") to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.

Installation

- Remove all packaging material and transport bolts before using the appliance. Otherwise, serious damage may result.

SAFETY INSTRUCTIONS

- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- Mains plug must be accessible after installation.
- Before washing the clothes at first time, the product shall be operated in one round of the whole procedures without the clothes inside. The suggested program is "DRUM CLEAN".
- Before using the machine, the product shall be calibrated.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Max. Inlet water pressure 1 MPa. Min. inlet water pressure 0.05 Mpa.
- Ensure the appliance is placed completely level and securely positioned on a solid, flat surface.
- The appliance must remain stable under load and should not seesaw — that is, rock back and forth — at its corners.

Warning!

- Children can become entangled in the packaging film or swallow small parts and suffocate. Do not allow children to play with the packaging.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.

Electrical Connection

- Make sure the supply cable is not trapped by the machine, or it can get damaged.

SAFETY INSTRUCTIONS

- Connect the product to a grounded outlet protected by a fuse complying with the values in the "Technical specifications" table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.
- Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.

Warning!

- Do not connect the appliance to the mains electricity supply by an extension lead multi-socket adapter or similar.
- The appliance must not have an external switching device such as a timer or connected to a circuit that is regularly switched on and off.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out power plug with wet hands.
- Always pull at the plug, not at the cable.
- Always unplug the appliance if it is not being used.
- Do not bend, clamp or damage the power cord and the power plug.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Do not connect the appliance to the mains electricity supply by an extension lead, multi-socket adapter or similar.

SAFETY INSTRUCTIONS

Water Connections

- Check the connections of the water inlet tubes, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak, close the water tap and get it repaired.
- Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- The water inlet and outlet hoses have to be safely installed and remain undamaged.
- Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

Operation and Maintenance

- Never use any flammable, explosive or toxic solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to this machine.
- Thoroughly rinse items that have been washed by hand.
- Fabric softeners or similar products should be used as recommended in their instructions.
- Never try to open the door forcefully.
- The door of the washing machine will unlock shortly after the end of a cycle.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.
- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.

SAFETY INSTRUCTIONS

- Never pour water over the appliance for cleaning purpose.
- Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The producer will not be responsible for damages caused by the intervention of not authorized persons.

Transport

- Before Transport:
 - Never transport the upper and lower dryer units and the washing unit jointed; always transport each unit separately.
 - Bolts shall be reinstalled to the machine by a specialized person;
 - Accumulated water shall be drained out of the machine.
- This appliance is heavy, so transport with care. Never hold any protruding part of the machine when lifting. The machine door can not be used as a handle.
- Move cautiously. Do not grasp any salient parts of machine. The machine door cannot be used as the handle for transport. If the dryer can't be transported erectly, the dryer can be tilted to right less than 30°.
- When transporting the product, do not transport it in a horizontal position. If long-distance transportation or machine disassembly is required, please contact the local service provider.

Warning!

Risk of injury and damage!

Improper handling of the appliance may result in injury.

- The appliance is very heavy. Never transport or carry the appliance alone; always with the assistance of another person.

SAFETY INSTRUCTIONS

- Remove all obstacles on the transport route and from the installation location, e.g. open doors and clear away objects lying on the floor.
- Remove all package material before using the appliance.
- Before setting up this product, check it for any externally visible damage. Do not install or use a damaged product.

UV Radiation Safety

- This warning only covers products which contain a UV-C lamp and which have a disinfection function with UV-C lamp.
- The device contains a lamp that emits UV-C rays. Do not look at the source of light while the lamp is operating!
- UV-C lamp is used to provide disinfection in textile products.
- Do not take the UV-C lamp out of the device and do not operate it outside!
- Do not touch the lamp!
- Use of the product except for its purpose or damage to the UV-C lamp protection glass or surrounding may cause dangerous UV-C radiation to occur. UV-C radiation can damage the eyes and skin even in low doses. Do not operate any product which is damaged!

SAFETY INSTRUCTIONS

- Do not remove the UV-C lamp protection glass. Do not operate the product without the UV-C lamp protection glass!
- Hygiene program incorporating UV is effective for removing *Escherichia coli*, *Staphylococcus aureus* bacteria.
- In cases where UV-C lamp and related parts need to be replaced (expiration of lamp life, break of lamp glass, etc.), call the technical service. Do not try to replace the parts by yourself. When waiting for technical service, make sure the machine cover is closed and the plug is disconnected!
- Keep children away while using any programs with activated UV-C lamp!
- It can cause allergies, don't breathe directly!
- Always read the product guide before using the device and use the product according to the instructions!
- The placement of the UV lamp and lamp protector glass in your product is visually indicated.

SAFETY INSTRUCTIONS

ENVIRONMENT

Disposal of Old Appliances

For use in EU countries

This appliance is labelled in accordance with the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). The directive provides the framework for the EU-wide take-back and recycling of waste equipment.



The devices marked with this symbol must not be disposed of in household waste!



For use in other countries

This appliance does not have symbol above. If you want to dispose your appliance, please contact your local authority or retailer for further information on collection and disposal.

Model		Rated capacity
TWD-T40BZU110MWS(WT)	TD-T40BS90HWS(WT)	8.0kg
	TW-T40BZP110MWS(WT)	10.0kg

INSTALLATION

■ Product Description

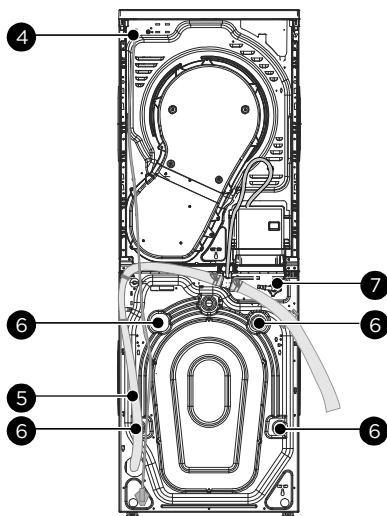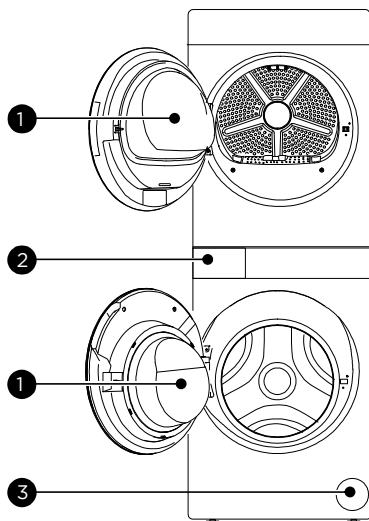

1	Door	5	Drain hose
2	Detergent dispenser	6	Transport bolts
3	Drain Pump Filter	7	Water inlet valve
4	Power supply cord		




Note!


The product picture is for illustration only, please refer to real product as reference.

Accessories

1 x Owner's manual 1 x Clip Spring 2 x Fixed Plate 1 x Drain Hose Catch 1 x Water Drain Hose Assembly 1 x Label 12 x Screw (ST4*14)

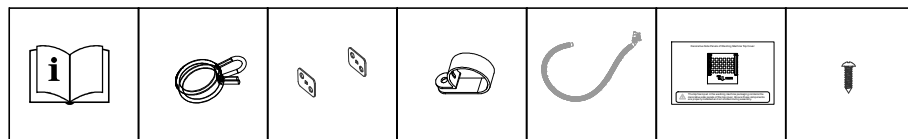

1 x Water Inlet Hose Assembly 4x Shipping Screw Cover 2 x Decorative strip (Placed on top of the packaging foam) 1 x Rat resistance panel

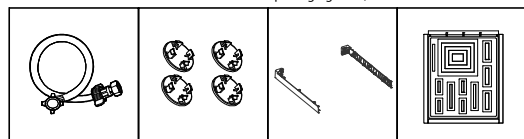


INSTALLATION

■ Installation

Installation Area

Warning!

- Stability is important to prevent the product from wandering!
- Make sure the machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances as shown in the picture.

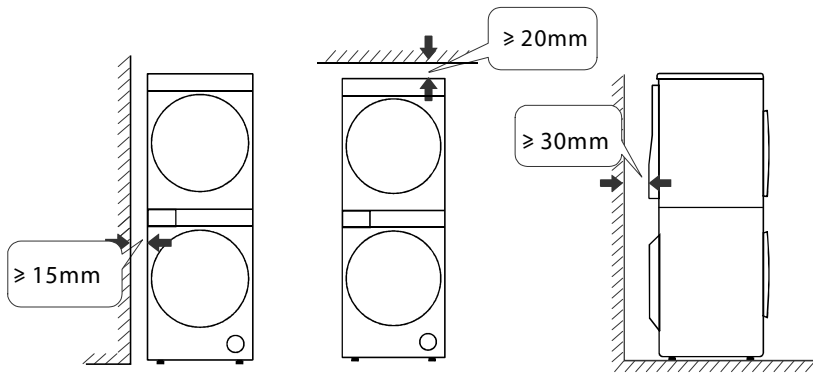


Before installing the machine, the location characterized as follows shall be selected:

1. Rigid, dry, and level surface.
2. Avoid direct sunlight.
3. Sufficient ventilation.
4. Room temperature is above $2\text{ }^{\circ}\text{C}$.
5. Keep far away from the heat sources such as coal or gas burning appliances.

INSTALLATION

Unpacking the Machine

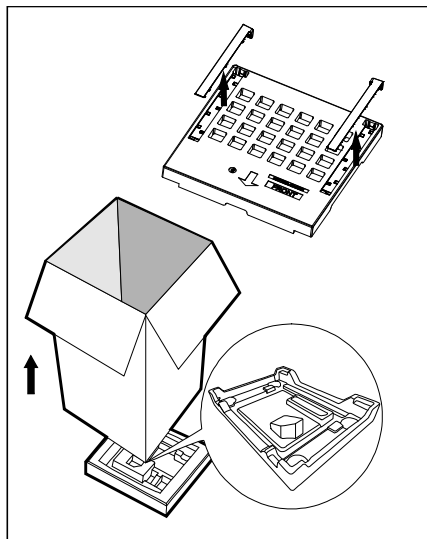

Warning!

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.


1. Remove the cardboard box and styrofoam packing.
2. Lift the machine and remove the base packaging.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.
5. Remove the decorative strips from the top of the packing foam.

Remove Transport Bolts


Warning!

You must remove the transport bolts from the backside before using the product.


1. Loosen the 4 transport bolts with a spanner.

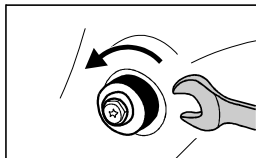

2. Remove the bolts including the rubber parts and keep them for future use.

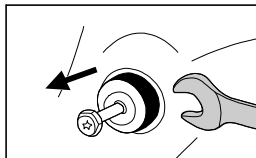

3. Close the holes using the cover caps.

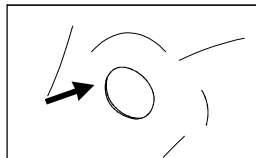


INSTALLATION

Levelling the Machine

Warning!

The lock nuts on all four feet must be screwed tightly against the housing.

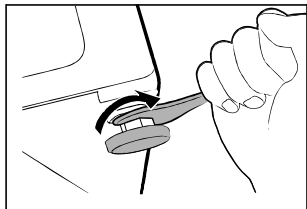


1. Loosen the lock nut.
 2. Turn the foot until it reaches the floor.
 3. Adjust the legs and lock the nuts with a spanner.
- Make sure the machine is level using a spirit level.

Connect the Water Supply Hose


Warning!

To prevent leakage or water damage, follow the instructions in this chapter.

- Do not kink, crush or modify water inlet hose.

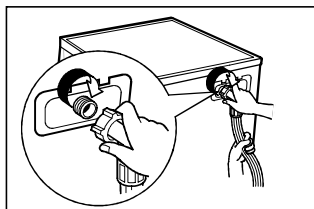

Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.

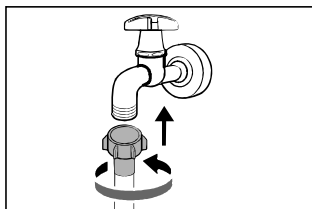

Note!

- Connect manually, do not use tools. Check if the connections are tight.

INSTALLATION


■ Stacking Installation

Accessories

2 x Fixed Plate

2 x Decorative strip
(Placed on top of the
packaging foam)


12 x Screw(ST4*14)

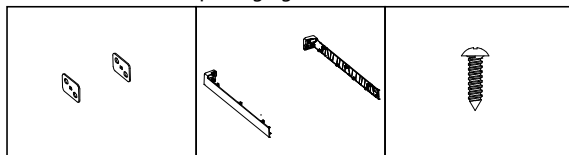


Installation steps:

⚠ Note!

The whole machine requires two professionals for installation.

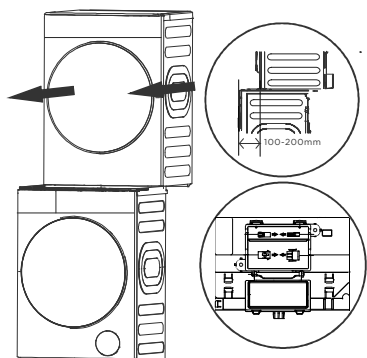


1. Lift the dryer onto the drum washing machine, leaving a distance of 10-20cm at the front to facilitate the insertion of the terminal through the small hole at the top. Place the power cord and signal cord of the dryer into the waterproof box (as shown in the figure), complete the connection of the drum terminals, and fasten the waterproof box. Next, drive one screw (ST4*14) on the left side of the decorative component of the drum control panel to fix and complete the installation.

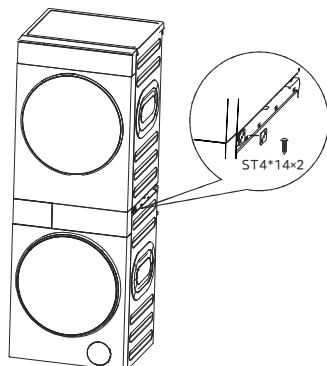


2. After stacking the machines neatly and ensuring that the holes of the dryer and the drum are aligned, attach the two fixing plates (sheet metal parts) from the accessory bag to the left and right sides of the bottom of the dryer as shown in the diagram. Secure them by driving two screws (ST4*14) into each fixing plate to secure the machine.

INSTALLATION

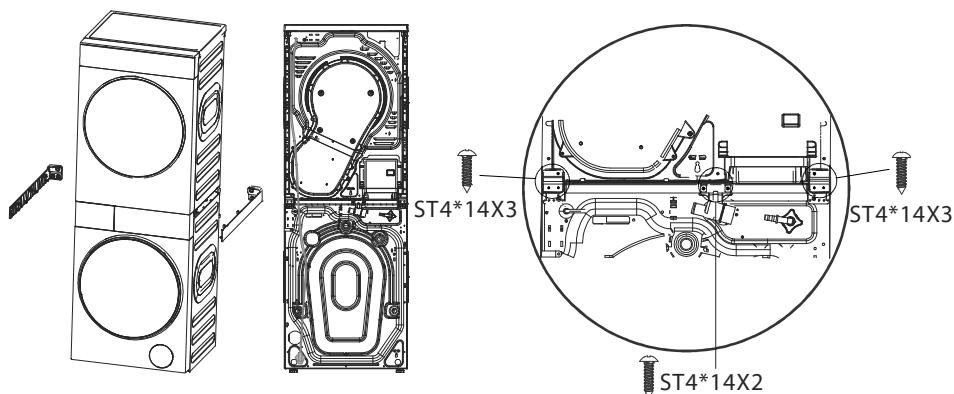

3. Install the left and right decorative strips, securing each side with three screws (ST4*14) to fix the machine (the left and right decorative strips are on the foam top cover of the washing machine packaging box). On one side, use the drain pipe clamp from the accessory assembly to clip onto the drum drain pipe and secure it with a screw on the decorative strip. Finally, use two screws (ST4*14) to secure the tee on the top cover of the drum. After completion, install the dryer drain pipe connector to complete the installation.

■ Drain Hose

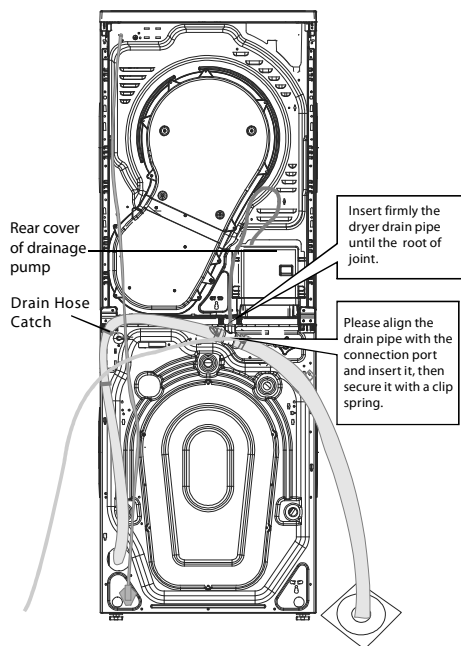

1 x Water Inlet
Hose Assembly



1 x Drain Hose
Catch



1 x Clip Spring

1. After stacking the dryer, take out the drain pipe assembly and clamp from the accessory assembly, and according to the installation guide, connect and secure the dryer drain pipe and drum drain pipe using a tee pipe, and lock the drum drain pipe with a clamp.

2. The user can place the inlet pipe on the left or right according to the position of the drum inlet pipe, ensuring the inlet pipe is above the drain pipe to ensure smooth and safe water flow.



INSTALLATION

⚠ Warning!

- Do not kink or protract the drain hose.
- Position drain hose properly, otherwise damage might result of water leakage.


There are two ways to place the end of drain hose:

1. Put it into the drain port. If the drain hose is put into the drain hole on the floor, fix the drain hose on the back of the appliance to prevent water overflow from the drum.
2. Connect it to the branch drain hose of the trough.

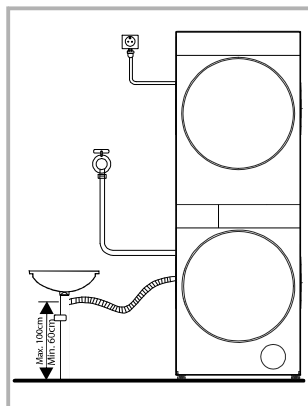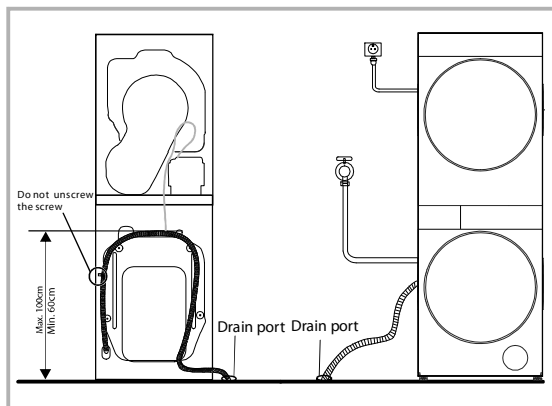


⚠ Warning!

- Do not let the drain pipe be compressed by heavy objects or deformed under force, as this may affect drainage.
- After professional installation and drainage completion, users should not adjust the height of the drain pipe on their own.
- Do not remove the drain pipe fixing clamp, as unauthorized removal may cause machine malfunction.
- Do not excessively bend the drain pipe or hang it in a U-shape over the sink.

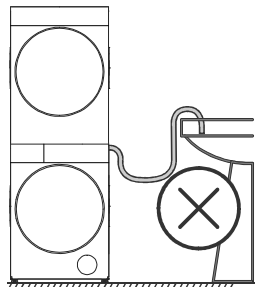

⚠ Caution!

- If the drain pipe is too long, do not force it into the sewer, you can cut off the excess length.
- Please be cautious when excising the drainage pipe to avoid injuries.

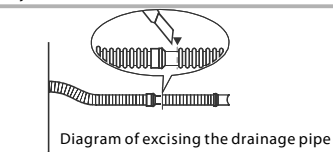

If the drain pipe is not long enough, please contact your local service center.


INSTALLATION

■ Drying Support Installation

The following drying support is optional for specific models.

If your dryer has following parts, please wear gloves to install them as per the instruction below.

If you want to install the drying support, first clamp the support on the door filter, then hook it in the front support slot(as shown below).

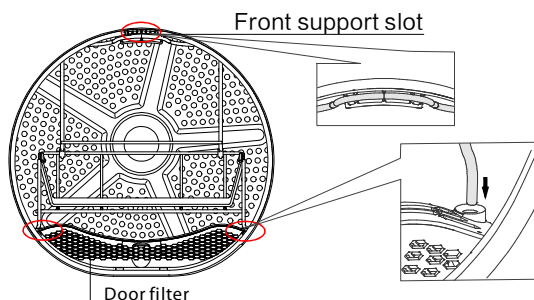

Note!

Drying support is mainly used for items that are not suitable for tumble dry, like hats, shoes, plush toys etc. Warm program is recommended for this function and if items are not completely dried once, you can restart the program to complete drying. All items dried with support must meet the warning requirements of page 6. Leather products also cannot be dried.

OPERATION


■ Quick Start

⚠ Caution!


- Before washing, please make sure the machine is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, recommended to clean the inner drum by running the "DRUM CLEAN" or other program with the optional temperature of 90°C. Be careful not to put laundry and detergent in the machine.

1. Before Washing


1. Plug in

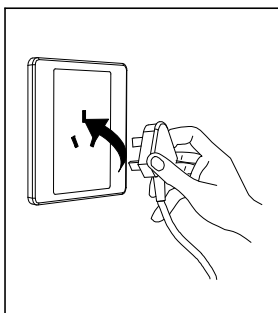


2. Open tap

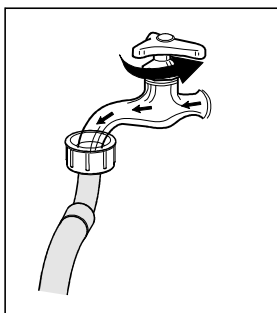


3. Load

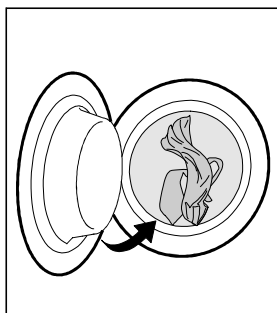

4. Close door

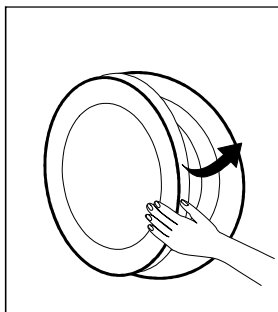


5. Add detergent

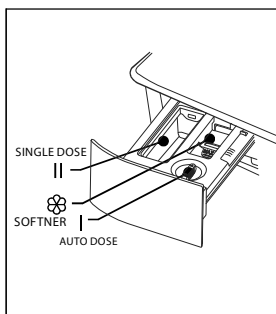

OPERATION

2. Washing or Drying


1.Power on

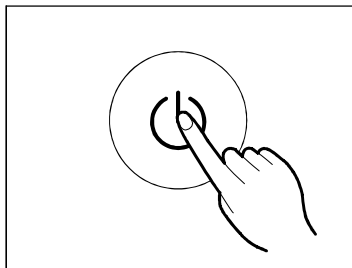


2.Select purpose (DRY CARE or WASH)




3.Select program

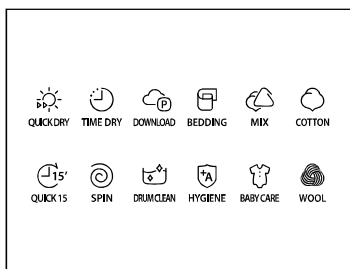

4.Select function or remain default settings

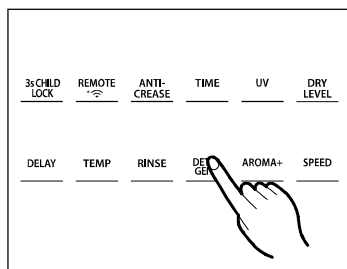

5.Press Start/Pause to start the program

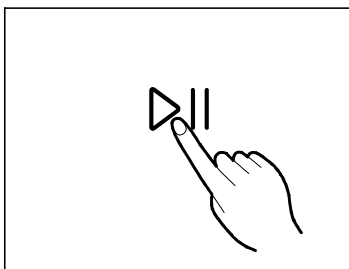

Note!

- 1 . If default is selected, step 4 can be skipped.
- 2 . The function button line chart is for reference only, please refer to real product as standard.

3. After Washing or Drying

Buzzer beeps and “End” on display


Open the door and take out laundry, then clean the filter (dryer) and power off.

OPERATION


■ Before Each Washing

- The ambient temperature of the machine should be 5°C-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine properly.


1. Take all items out of the pockets

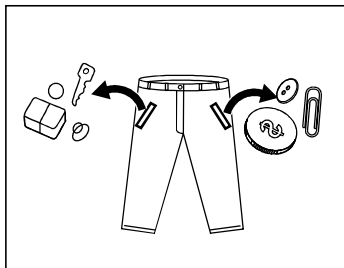


2. Sort laundry according to color and textile type

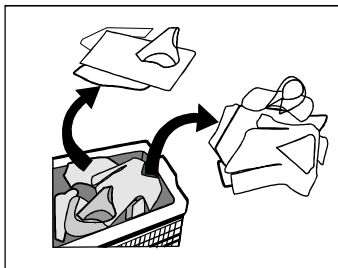

3. Tie together long textile strips and belts, close zips and button

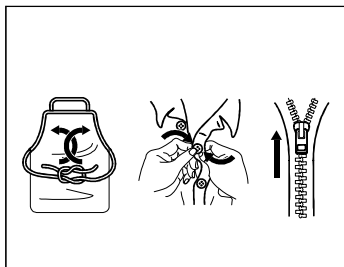

4. Put small items into a laundry bag

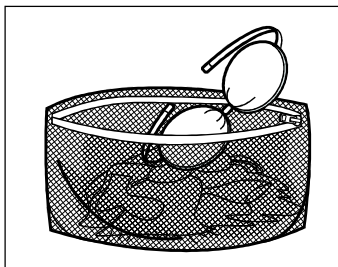

⚠ Warning!


- Do not wash articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances like wax, oil, paint, gasoline, alcohol, kerosene, and other flammable materials.
- Washing single clothes items may easily create big eccentricity. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.
- Do not wash, spin water-proof seats, mats, or clothing.

OPERATION

■ Detergent Dispenser

Note!

- The detergent box of this model is automatically dispensed with laundry detergent, which can store a certain amount of laundry detergent without having to add it every time;
- Please put the detergent directly into the washing cylinder with the clothes, do not put it in the detergent box, so as not to block the inlet, when using the laundry pods, please turn off the automatic delivery;
- For clumpy and viscous detergents or additives, it is recommended to dilute them with a small amount of water before pouring them into the detergent cartridge;
- Please choose the correct inlet for delivery, incorrect delivery may lead to foam residue and unclean laundry;
- Please turn on the detergent box after it is installed, and do not open the detergent box when the machine is running to prevent water or foam from overflowing.

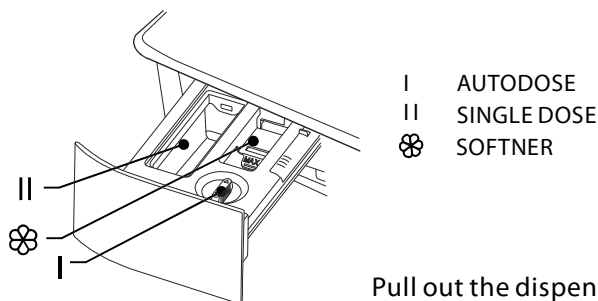

Pull out the dispenser


I AUTODOSE

1. Please choose a low-foaming laundry detergent, as high foaming can easily cause rinsing and unclean, or foam overflow and leakage;
2. Particularly viscous laundry detergent, it is recommended to dilute it according to the actual situation;
3. When the power is on, when the washing machine is turned on, it will automatically detect the residual amount of laundry detergent, if the laundry detergent indicator flashes, it means that the residual amount of laundry detergent in the automatic box is insufficient, please unscrew the lid and add laundry detergent;
4. After adding the laundry detergent, be sure to tighten the lid well.

II SINGAL DOSE

1. This inlet is a manual inlet, please put the amount of laundry detergent required for this washing;
2. When putting laundry detergent or other detergent into this inlet, please turn off the automatic dispensing, and add the appropriate amount of laundry detergent or detergent, and confirm whether it is high foaming or concentrated type, adding too much will cause foam overflow and leakage, trigger the defoaming program to increase the running time;
3. When using the high-temperature cylinder for self-cleaning, the machine will be turned off by default and automatically put in, please do not manually add detergent or laundry detergent, such as when using special cleaning agent, pay attention to the manufacturer's instructions and dosage;
4. If you need to use a clothing disinfectant, you can put it in this inlet, please refer to the instructions and dosage of the disinfectant manufacturer when using.

OPERATION

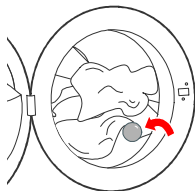

Note!

- Do not put in the detergent cartridge to avoid clogging the inlet and causing water leakage.

Laundry pods or tablets should be placed directly into the washing drum with the laundry.

SOFTNER

1. The washing machine will put the fabric softener in the last rinse stage, so be sure not to put laundry detergent in this tank;
2. The softener is put through the siphon principle, please do not put powdered fixing lotion in this tank to avoid blockage failure, if there is agglomeration, please remove it in time;
3. The fabric softener can neutralize the residue of laundry detergent and powder to a certain extent, but please do not exceed the MAX marking line to avoid being unable to put it.

OPERATION

■ Before Each Drying












Note!

- Leave it to stand for 2 hours after transporting. Before first use, please use the soft fabric to clean the inside drum.
 1. Put some clean rags into the drum.
 2. Plug the power, select the [TIME DRY] program, press [▶∞] button.
 3. After finishing this program, please follow the "Cleaning and Care" to clean the door filter.
- During drying, the compressor and the water will generate some noise which is entirely normal.

1. Before drying, thoroughly spin the laundry in washing machine. High spin speed shortens the drying time and saves energy.
2. For uniform drying result, sort the laundry according to fabric type and select the appropriate drying program.
3. Before drying, please close zips, hooks and eyelets, button, tie fabric belts, etc.
4. Remove all objects from pockets such as lighters and matches.
5. Remove underwiring from bras.
6. Close duvet covers and pillow cases to prevent small items from being rolled up inside them.
7. Leave jackets open and undo any long zips so that textiles dry evenly.
8. Do not over dry the clothes, because over dried clothes can easily get creases.
9. Do not dry the articles containing rubber or similar elastic materials.
10. Keep the area around the tumble dryer clean. Coal dust or flour may cause an explosion.
11. The door shall be opened only after the program of the tumble dryer is finished to avoid being scalded by hot steam or over heated drying machine.
12. Clean the lint filter and empty water container after each use to avoid extension of drying time and increase of energy consumption.
13. Do not dry clothes after dry-clean process.

OPERATION





The reference weight of dry clothes (weight per item)

 Sweater (mixed 800g)	 Jacket (cotton 800g)	 Jeans (800g)	 Bath Towel (cotton 900g)	 Single bedsheet (cotton 600g)
 Work clothes (1120g)	 Pyjamas (200g)	 Shirt (cotton 300g)	 T-Shirt (cotton 180g)	 Underwear (cotton 70g)
				 Socks (mixed-weave 50g)

Note!


- Do not put more load than rated.
- Do not dry dripping wet laundry. The dryer might get damaged.

Only dry laundry suitable for tumble drying. Regard the laundry care labels:

-  Suitable for tumble drying
-  Normal drying process: Drying in the tumble dryer is possible under normal load and temperature 80°C.
-  Mild drying process: Caution is appropriate when tumble drying. Select mild process with reduced thermal action.
-  Do not tumble dry: Articles unsuitable for drying in the tumbler dryer.

OPERATION

■ Control Panel

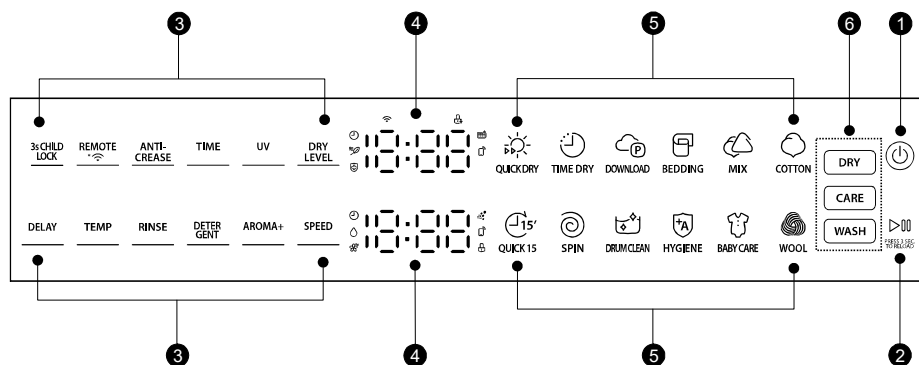

1 On/Off

Product is switched on or off.

2 Start/Pause

Press the button to start or pause the cycle.

3 Options

These buttons are used for setting additional functions.

4 Display

The display shows the setting, estimated program time remaining and status messages of your machine.

5 Programs

Different cycles can be selected according to the user's need.

6 Purposes

Different purposes can be selected according to the user's need.




OPERATION

■ Options (*Options can be set in App)

General options



3s CHILD LOCK

1. This machine incorporates a special child safety lock, which can prevent children from pressing buttons or operating unintentionally.
 2. When the program is running, press the [] button at the same time for 3 seconds to start child lock function.
 3. When child lock function is set, the display will show child lock icon and the blinking "CL", and all buttons are deactivated, except [] button.
 4. To deactivate the child lock function, the [] button shall be pressed at the same time for 3 seconds.
-



REMOTE

This is the switch of remote control, if you want to use your smartphone to control the machine remotely, you need to press the [REMOTE] button. Considering the safe operation of the machine, the smartphone remote control should meet the following conditions:

1. The appliance should connect to the internet;
2. The door of drum should be closed.

Remark:


 
 

- If the door is opened at anytime, the remote control function will be disabled.
 - The remote control function is turned off at the end of each cycle automatically, if you want to use remote control function again, you need turn on it again.
-



DELAY

This function is used for delaying the end of the program up to 24hours.

When the delayed program starts, the time starts to countdown on the display and the delay icon blinks.

1. Load your laundry and make sure the machine door is closed.
 2. Press the [] button, and select the desired program.
 3. Press the [DELAY] button.
 4. Repeatedly to press the [DELAY] button to select the desired delay time.
 5. After the [] button is pressed, the machine is at the running condition. The procedure will be automatically completed when the delay time is over.
 6. If you press the [] button again, the delay function will be paused.
 7. If you want to cancel the "DELAY" function, please press the [] button.
-

OPERATION

WASH Option

TEMP

TEMP

Press the button to regulate the temperature.
The display show "---" means the temperature is cold.
Temp.:Cold, 20°C, 30°C, 40°C, 60°C, 90°C.

RINSE

RINSE

The number of rinses can be adjusted by using the [RINSE] function

DETERGENT

DETERGENT

The [DETERGENT] is the function of dispensing liquid detergent automatically. The default setting is Auto. You can press the [DETERGENT] button to turn off the detergent automatic dispense function. Then press the [DETERGENT] button, you can adjust the level of liquid detergent, total 5 levels :Auto, Off, Less, Normal, Extra. The display corresponding show :AU, OFF, L-1, L-2, L-3.
The "△" icon light up in display panel, means liquid detergent automatic dispense is turned on. None icons light up means the liquid detergent automatic dispense is turned off.
When the "△" icon is flashing means lack of detergent, you need to add it.

AROMA+

AROMA+

The function helps to modify the water flow mode and time. Then help the fibers to absorb softener more efficiently. As a result, with dosing the same amount of softener, we can achieve better fragrance left on the clothes.

SPEED

SPEED

Press the [SPEED] button to change the spin speed.

Program	Default Spin Speed(rpm)	Program	Default Spin Speed(rpm)
COTTON	800	QUICK 15	800
MIX	800	SOAK*	800
BEDDING	800	JEANS*	800
DOWNLOAD	800	OUTDOOR*	800
WOOL	800	TOWEL*	800
BABY CARE	1000	DOWN*	800
HYGIENE	800	SHIRTS*	800
DRUMCLEAN	-	YOGA CLOTHING*	600
SPIN	1000	UNDERWEAR*	800

*DOWNLOAD default program is SOAK .

The programs (SOAK/JEANS/OUTDOOR/TOWEL/DOWN/SHIRTS/YOGA CLOTHING/UNDERWEAR) can only be selected by TSmartLife App on mobile phones.

OPERATION

TIME

TIME

The washing time can be adjusted through [TIME].

SPIN
TIME

SPINTIME*

This function can adjust the spin time.

WATER
LEVEL

WATER LEVEL*

This function can adjust the washing water levels.

OPERATION

DRY Option



ANTI-CREASE

You can use the [ANTI-RCREASE] to select the anti-crease time from 0-30-60-90-120minutes. This function prevents the laundry from creases at the end of the drying cycle.

The laundry can be removed during the anti-crease phase.



TIME

When the [WARM] , [COOL] or [TIME DRY] program is selected, the [TIME] button can be used to adjust the drying time in 10 min. steps.



UV

After selecting the program, you can choose the "UV" function according to your needs. Press [UV] to select this function. Press it again to cancel. After selecting the "UV" function, the clothes are sterilized during the drying process, making the clothes cleaner and safer.

Use this function with caution for light, thin or delicate laundry.

The UV is default when selecting [BABY CARE] program.



DRY LEVEL

You can adjust the dryness level of the laundry by pressing the [DRY LEVEL] button.

1. The intensity function can be activated only before the program starts.
 2. Press the [DRY LEVEL] button repeatedly to adjust the drying grade.
-



SIGNAL*

Set the buzzer on or off. In default condition, the buzzer is on.


When the buzzer is on:

- 1.The dryer will affirm pressed function button by a sound.
 - 2.When the drying program is done, the buzzer will beep.
-

OPERATION

■ Display

WASH Display

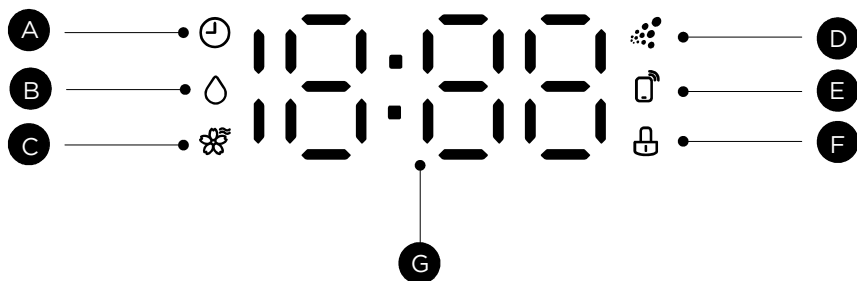

A Delay	B Detergent
C Aroma+	D UFB
E Remote Control	F Door Lock

G Display


1:18	Wash Time
2H	Delay Time
800	Speed
End	End
E30	Error
40	Temp



The wool wash cycle of this machine has been tested and approved by The Woolmark Company for the washing of wool garments labelled as "hand wash" provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M2119

OPERATION

DRY Display

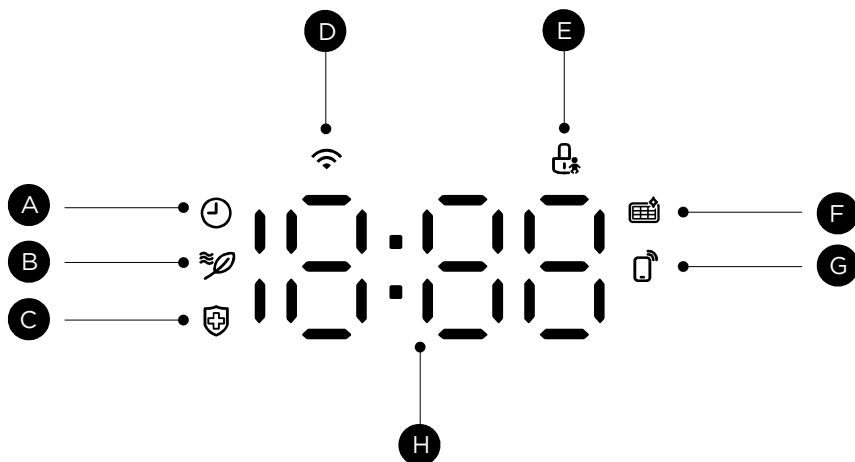

A Delay	B Anti-Crease
C Hygiene	D Wireless Network
E Child Lock	F Clean filters warning
G Remote Control	
H Display	

2:40	Dry Time
3H	Delay Time
End	End
E21	Error



The wool drying cycle of this machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled "hand wash" provided that the garments are washed in a Woolmark endorsed hand washing cycle and dried according to the instructions issued by the manufacturer of this machine. M2132.

OPERATION

■ Instructions to Connection with the TSmartLife App

Before you start, make sure that:

1. Your smartphone is connected to home wireless network, and you know the network password.
2. Make sure you are near the home appliance.
3. The 2.4GHz band wireless signal is enabled on your wireless router.

Follow the below steps to enter the remote control state

Download the TSmartLife App

On an app market (Google Play Store, Apple App Store), search for "TSmartLife" and find the TSmartLife app. Download and install it on your phone. You can also download the app by scanning the QR code below.



Register and log in

Open the TSmartLife app, and create a new account to start (you can also register through a third-party account). If you already had an existing account, use the account to log in.




Connect your devices to TSmartLife

- 1: Please make sure your mobile phone is connected to wireless network. If not, go to Settings and turn on the wireless connection, select and connect to a wireless network. Also please turn on the Bluetooth on your phone. If not, go to Settings and turn it on.
- 2: Please power on your devices.
- 3: Open TSmartLife app on your phone.

OPERATION

4: If a message of "Smart devices discovered nearby" appears, click to add.

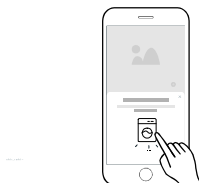

5: If no message appears, select "+" on the page and select your device in the list of nearby devices available. If your device is not listed, please add your device manually by the device category and device model.




6: Connect your device to wireless network according to the instructions on app. If the connection fails, please follow the instructions provided by the app to continue with the operation.



OPERATION

Wireless Network Status Light

	Slowly flashing	Waiting for connection
	Quickly flashing	Connecting
	Quickly flashing solid	Connected to your wireless router

Notes

- Make sure your devices are powered on.
- Keep your mobile phone close enough to your device when you are connecting network to your device.
- Connect your mobile phone to the wireless network at home, and make sure you know the password of the wireless network.
- Check if your router supports 2.4 Ghz wireless network band and turn it on. If you are not sure whether the router supports 2.4 GHz band, please contact the router manufacturer.
- The device cannot connect to the wireless network that requires authentication, and it usually appears in public area such as hotels, restaurants, etc. Please connect to a wireless network that does not require authentication.
- It is recommended to use a wireless network name that only contains letters and numbers. If your wireless network name contains special characters, please modify it in the router.
- Turn off the WLAN+ (Android) or WLAN Assistant (iOS) function of your mobile phone when connecting network to your devices.
- In the case that your device connected to wireless network before but it needs to reconnect, please click "+" on app Home page, and add your device again by the device category and model according to the instructions on app.

WIRELESS NETWORK INFORMATION

Working Frequency	2.4G
Extreme Temperature Range	-20°C~85°C
MAX RF Power Output	wireless network: E.I.R.P 18dBm BT: 8dBm

OPERATION

■ Programs Table (*programs can be set in App)

WASH Programs

Programs	MAX Load	Application/Properties
COTTON	10.0kg	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
MIX	10.0kg	Suitable for washing cotton fabrics, bed sheets and pillowcases, tablecloths, underwear, towels, shirts, and other clothing, but not including special garments (such as silk, delicate fabrics, sportswear, dark-colored clothes, wool, down quilts, curtains, etc.).
BEDDING	10.0kg	To wash bed linen, bed sheets or other large items.
DOWNLOAD	—	By using TSmartLife App, you can download additional cycles to your washing machine, we have limited cycle numbers on the panel, but we have more cycles in the app, and we can choose one via the app, and apply the app cycle to the machine.
WOOL	2.0kg	Hand or machine-washable wool or richwool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).
BABY CARE	10.0kg	Washing the baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.
HYGIENE	5.0kg	Washing machine can kill some bacterium, and achieve hygiene effect.
DRUMCLEAN	—	Specially set in this machine to clean the drum and tube. It applies 90 °C high temperature sterilization to make the clothes washing more green. When this program is performed, the clothes or other washing cannot be added. When proper amount of chlorine bleaching agent is put in, the barrel cleaning effect will be better. The customer can use this program regularly according to the need.
SPIN	10.0kg	Spins and drains the water.
QUICK 15	2.0kg	Extra short program approx, suitable for lightly soiled washing as a small amounts of laundry.
SOAK*		Soak the clothes for a while before washing.
JEANS*	10.0kg	Specially for jeans.
OUTDOOR*	5.0kg	For outdoor clothes, skiwear, and sportswear that are made of functional materials such as spandex, stretch, and micro-fibre.
TOWEL*	10.0kg	Suitable for washing towels, bath towels and other heavy loads
DOWN*	2.0kg	Suitable for down clothing, such as down jackets, down vests, down pants, thin down comforters, etc
SHIRTS*	5.0kg	Especially for washing the Shirts.
YOGA CLOTHING*	5.0kg	To wash yoga clothing made of synthetic fibers or cotton-linen materials.
UNDERWEAR*	5.0kg	To wash underwear fabrics.

Programs are available according to the laundry type.

OPERATION

WASH Option

Program	Default Time	Delay	Time	Rinse	SpinTime (APP)	WaterLevel (APP)	Temp	Speed	DeterGent	Aroma+
COTTON	1:18	Y	Y	Y	Y	Y	Y	Y	Y	Y
MIX	1:10	Y	Y	Y	Y	Y	Y	Y	Y	Y
BEDDING	1:48	Y	Y	Y	Y	Y	Y	Y	Y	Y
DOWNLOAD	2:04	Y	Y	Y	Y	Y	Y	Y	Y	N
WOOL	1:03	Y	Y	Y	Y	Y	Y	Y	Y	N
BABY CARE	2:05	Y	Y	Y	Y	Y	Y	Y	Y	N
HYGIENE	2:27	Y	Y	Y	Y	Y	●	Y	Y	Y
DRUMCLEAN	1:18	Y	N	N	N	N	Y	N	N	N
SPIN	0:12	Y	N	N	Y	N	N	Y	N	N
QUICK 15	0:15	Y	Y	Y	N	Y	Y	Y	Y	N
SOAK*	2:04	Y	Y	Y	Y	Y	Y	Y	Y	N
JEANS*	1:35	Y	Y	Y	Y	Y	Y	Y	Y	Y
OUTDOOR*	1:20	Y	Y	Y	Y	Y	Y	Y	Y	N
TOWEL*	1:12	Y	Y	Y	Y	Y	Y	Y	Y	N
DOWN*	1:27	Y	Y	Y	Y	Y	Y	Y	Y	N
SHIRTS*	1:00	Y	Y	Y	Y	Y	Y	Y	Y	N
YOGA CLOTHING*	0:41	Y	Y	Y	Y	Y	Y	Y	Y	N
UNDERWEAR*	1:30	Y	Y	Y	Y	Y	Y	Y	Y	N

● Means must; Y Means available; N Means not available

Note!

- Energy test program: Cotton 60° C ; Speed: 1400rpm; Turn off detergents.
- The table shows which cycle offers which options for adjustment.
- When using the washing machine and dryer simultaneously, the washing machine performs non-heated washing. If heated washing is necessary, the drum can be used separately for washing.

OPERATION

DRY Programs

Programs	MAX Load	Application/Properties
COTTON	8.0kg	For single or multi-layer cotton laundry.
MIX	3.5kg	For mixed fabrics from cotton and synthetics.
BEDDING	4.0kg	To dry bed linen, bed sheets or other large items.
DOWNLOAD	—	You can set it as another program in the TsmartLife App and set the parameters, and sync it to the panel cloud program.
TIME DRY	—	To dry individual items or complete the drying process of multi-layer fabrics with different drying behavior, such as jackets, pillows or voluminous items. Min 10 min. to max. 150min. (in 10 min. steps)
QUICK DRY	0.6kg	To dry 1-3 pieces of lightweight clothing with low moisture content.
WOOL	1.0kg	For machine washable wool items .
BABY CARE	1.0kg	To dry small amount of baby clothing.
HYGIENE	4.0kg	For sterilizing and mite removal of heat-resistant dry clothing.
JEANS*	4.0kg	To dry jeans or leisure clothes that are spun at high speed in the washing machine.
OUTDOOR*	3.0kg	To dry outdoor clothing. waterproof and breathable laundry items which are suitable for drying in tumble dryer.
TOWEL*	3.0kg	To dry towels.
DOWN*	1.5kg	To dry down jackets.
SHIRTS*	1.0kg	For easy care laundry, such as shirts and blouses.
YOGA CLOTHING*	1.0kg	To dry yoga clothing made of synthetic fibers or cotton-linen materials.
UNDERWEAR*	1.0kg	To dry underwear fabrics.

• Note for Test Institutes:

1. Cotton program is used to assess the compliance with IEC 61121:2002, IEC61121:2002/AMD1:2005.
2. Energy test program: COTTON default.

OPERATION

Dry Option

Program	Remain Time	Delay	Time	UV	Dry Level	Anticrease	Signal (APP)
COTTON	2:40	Y	N	Y	Y	Y	Y
MIX	1:50	Y	N	Y	Y	Y	Y
BEDDING	2:30	Y	N	Y	Y	Y	Y
DOWNLOAD	1:40	Y	N	Y	Y	Y	Y
TIME DRY	0:10	Y	Y	N	N	Y	Y
QUICK DRY	0:30	Y	N	N	N	Y	Y
WOOL	3:00	Y	N	N	N	N	Y
BABY CARE	1:25	Y	N	○	Y	Y	Y
HYGIENE	2:30	Y	N	●	N	Y	Y
JEANS*	3:10	Y	N	Y	Y	Y	Y
OUTDOOR*	1:40	Y	N	Y	Y	Y	Y
TOWEL*	1:35	Y	N	Y	Y	Y	Y
DOWN*	2:00	Y	N	Y	Y	Y	Y
SHIRTS*	1:20	Y	N	Y	Y	Y	Y
YOGA CLOTHING*	1:30	Y	N	Y	Y	Y	Y
UNDERWEAR*	1:25	Y	N	Y	Y	Y	Y

● Means must; ○ Means default and available; Y Means available; N Means not available

OPERATION

CARE Programs

Programs	Application/Properties
COTTON	Suitable for mite removal, deodorization and wrinkle removal care of cotton clothes.
MIX	Suitable for dust removal and deodorization of mixed fabrics from cotton and synthetics.
BEDDING	Suitable for fluffy care of large items such as four-piece bedding sets.
DOWNLOAD	You can set it as another program in the TsmartLife App and set the parameters, and sync it to the panel cloud program.
WOOL	Suitable for dust removal, deodorization and fluffing care of woolen clothes.
BABY CARE	Suitable for warming, daily fluffing, and mite removal care for baby cotton clothing.
OUTDOOR *	Suitable for dust removal and mite care for outdoor jackets.
DOWN*	Suitable for dust removal, deodorization and fluffing care of down jackets/quilts.
YOGA CLOTHING*	Suitable for dust removal, deodorization and fluffing care of yoga clothes.
SILK*	Suitable for dust removal and deodorization care of silk and satin garments.
WARM*	Timed freshness and heating.
COOL*	Timed freshness, no heating.

OPERATION

Care Option

Program	Remain Time	Delay	Time	UV	Dry Level	Anti-crease	Signal (APP)
COTTON	0:42	Y	N	N	N	Y	Y
MIX	0:21	Y	N	N	N	Y	Y
BEDDING	0:47	Y	N	N	N	Y	Y
DOWNLOAD	0:40	Y	N	N	N	Y	Y
WOOL	0:21	Y	N	N	N	Y	Y
BABY CARE	0:30	Y	N	N	N	Y	Y
OUTDOOR *	0:40	Y	N	N	N	Y	Y
DOWN*	0:30	Y	N	N	N	Y	Y
YOGA CLOTHING*	0:21	Y	N	N	N	Y	Y
SILK*	0:15	Y	N	N	N	Y	Y
WARM*	0:30	Y	Y	N	N	Y	Y
COOL *	0:10	Y	Y	N	N	Y	Y

Y Means available; N Means not available

MAINTENANCE


■ Cleaning and Care

Warning!

- Always unplug the appliance and close the water tap before cleaning and maintenance.

Cleaning the Cabinet

Proper maintenance on the machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a towel to wipe it off immediately. Never use sharp items to clean the appliance.

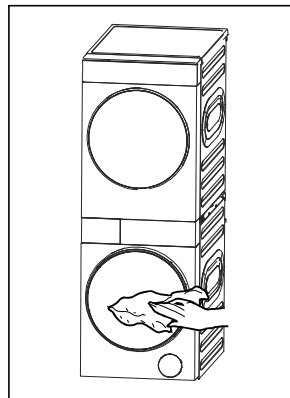

Caution!

- Never use abrasive or caustic agents. Such as formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

Cleaning the Drum

Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!

Note!


- Keep any laundry away from the machine while cleaning the drum.

Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages.

Remove any coins, buttons and other objects from the seal after each wash.

Clean the door seal and glass every month to ensure the normal operation of the appliance.

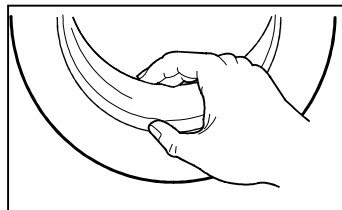


MAINTENANCE

Cleaning the Inlet Filter


Note!

- Diminishing water flow is a sign that the filter needs to be cleaned.


1. Close the tap and remove the water supply hose from it.

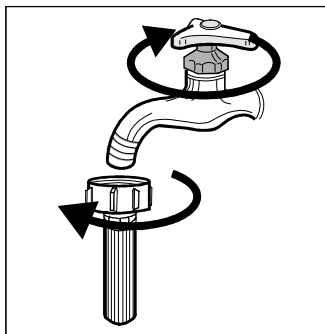


2. Clean the filter with a brush.

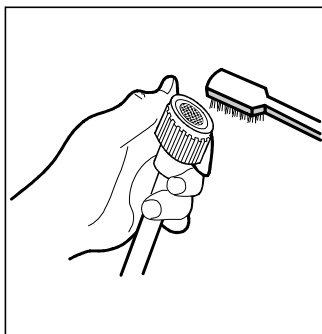

3. Unscrew the water supply hose from the backside of the machine.
Pull out the filter with long nose pliers.

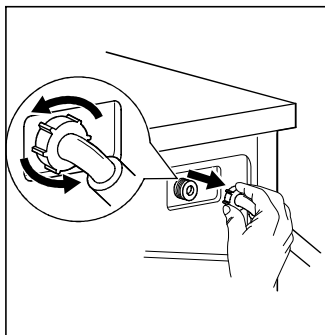

4. Use a brush to clean the filter.

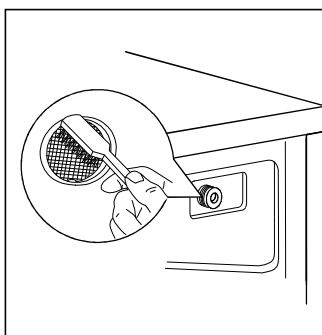


5. Reinstall the filter to the water inlet and reconnect the water supply hose.


6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.

MAINTENANCE


Cleaning the Detergent Dispenser

1. Press down the release [] and pull the dispenser drawer out of the recess. Clean the inside of the recess with a brush.
2. Lift the softener cover off the dispenser drawer and wash both items with water.
3. Restore the softener cover and push the drawer back into the recess.


1. Press the release and remove the dispenser drawer

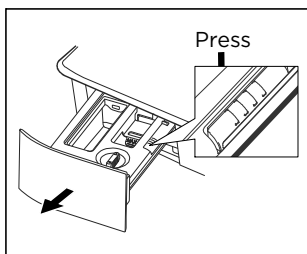


2. Twist open the detergent dispenser lid, rinse all grooves with water, including the siphon, to prevent blockage, causing the fabric softener from being unable to dispense.

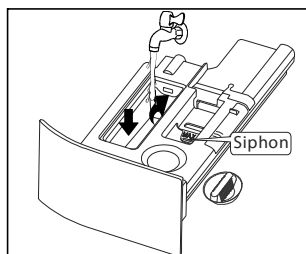


3. Clean the recess with a soft brush

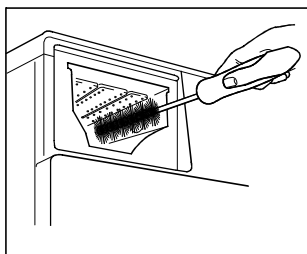

4. At the bottom front of the cleaning detergent compartment water stains or detergent residue accumulation can cause corrosion on the appearance.

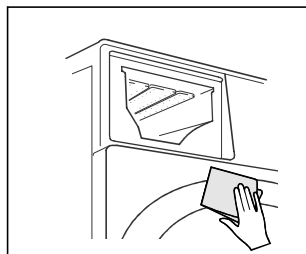

5. Insert the dispenser drawer

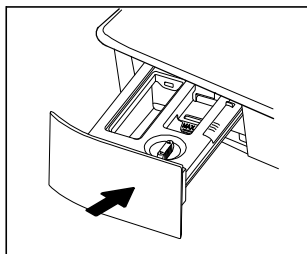

Note!


- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.

MAINTENANCE


Cleaning the Drain Pump Filter

⚠ Warning!


- Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Wait for water cooling down. Risk of scalding!
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.

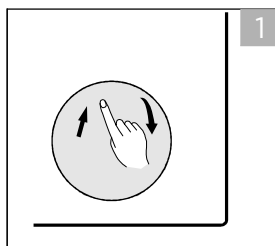


Open the lower cover cap

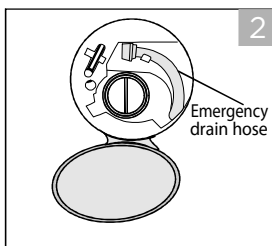


Pull out the emergency drain hose, and take off the hose cap

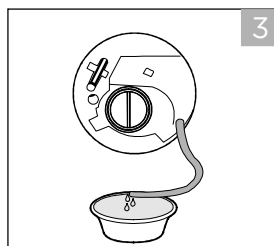


After water runs out, reset the drain hose

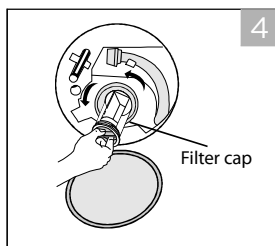

Open the filter by turning to the counter clockwise

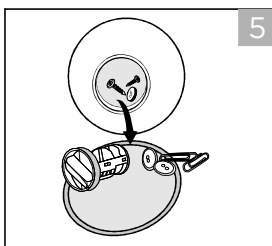

Remove extraneous matter

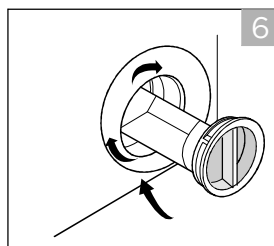

Carefully reinsert the filter and screw the lower cover cap in clockwise

⚠ Caution!

- Make sure that valve cap and emergency drain hose are reinstalled properly, cap plates should be inserted aligning to hole plates otherwise water may leak.
- Some machines don't have emergency drain hose, so step 2 and step 3 can be skipped. Rotate lower cover cap directly to make water run into basin.
- When the appliance is in use and depending on the program selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.


MAINTENANCE

Cleaning the Dryer Filter


This dryer has a primary door lint filter.

Make sure you clean the door filter after each cycle to avoid increased energy consumption and cycle time.


1. Open the door and take out the door filter

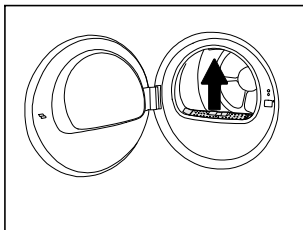


2. Open the filter

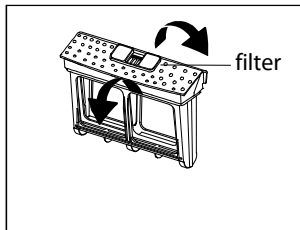


3. Open the filter and remove the fluff on the filter screen. You can use a vacuum cleaner to remove the lint or clean it by hand.

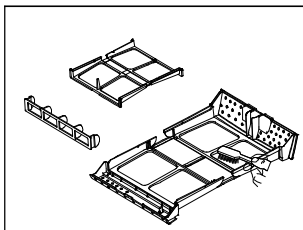

4. Dry the door filter thoroughly before installing it back

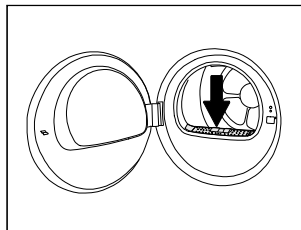

5. Take notice of the correct orientation before to insert the door filter.

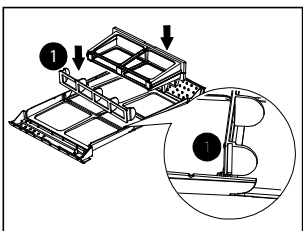

Note!

- Throw lint in the garbage bin and do not wash it down the drain to avoid micro plastics in the used water system.
- To ensure the double-layer filter can be closed smoothly, the arrows at both ends need to be aligned, and the middle slot and the rib need to be aligned.

MAINTENANCE

■ Trouble Shooting

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

WASH TROUBLE SHOOTING

Description	Possible Cause	Solution
Appliance does not start	Door is not closed properly. Clothes are stuck.	Close the door properly and restart. Check the laundry.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts are still in place. Floor is not solid or level.	Check if the fixing bolts have been removed. Make sure the appliance is installed on a solid and level floor.

Error Codes

Description	Possible Cause	Solution
E30	Door is not closed properly.	Close the door properly and restart.
E10	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
E21	Overtime water draining	Check the drain hose for blockage.
E12	Water overflow	Restart the appliance.
EXX	Others	Restart the appliance. If problem persists, please contact the customer service.

MAINTENANCE

DRY TROUBLE SHOOTING

Description	Possible Cause	Solution
The machine door automatically opens	Door is not closed properly or there are too many clothes placed inside	Press and hold the door handle to lock the door in the corresponding position. Remove too much clothing and close the door again
Indicator light or display screen does not light up	Power outage, computer board failure, wiring harness connection failure	Check if there is a power outage and correctly plug in the power plug
Poor drying effect	Unclean filter screen No suitable dryer program selected Putting too much clothing in Clothing containing composite fabrics, such as "assault jackets"	Clean the filter screen Choose the appropriate drying procedure When putting clothes in, do not exceed the maximum amount of clothes in the corresponding program, turn the inside out of the clothes and dry them
Excessive drying time	Clothing is too damp The automatic drying program automatically adjusts the drying time based on the humidity of the clothes"	After dehydration, shake off the clothes before putting them into the dryer

Error Codes

Description	Possible Cause	Solution
E33	Temperature sensor error	Pull out the plug from the socket. Please contact your local service center if the problem occurs.
EB2	PCB communication error	
E21	Water pump failure or water level sensor failure	
EXX	Others	


Note!

- The dryer does not shut off instantly when remote control is paused/ aborted . It is a normal operation, not a fault, because cooling in progress-the dryer will shut off automatically when cooled.

MAINTENANCE

Emergency door


In case of power outage or other situations where the door cannot be opened normally and needs to be opened, please pull down the emergency door opening rope. After opening the door, please restore the emergency door opening rope.

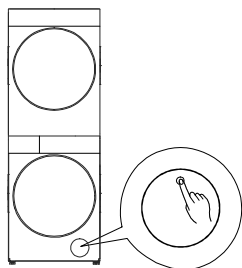

Unplug the power plug, lightly press the filter door to automatically pop out



Please drain the water before opening the emergency door. Only when the water level in the upper cylinder is lower than the clothing input port in the lower cylinder can the emergency door be opened

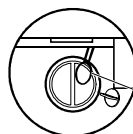

emergency door pull rope

Pull down on the emergency opening rope of the corresponding cylinder to emergency open the door of the washing machine

⚠ Caution!


- Before operation, please turn off the power and unplug the power plug.
- Do not use this drawstring during normal washing. In case of emergency use, it is recommended to drain the water level below the mouth of the washing machine barrel and wait for the water to cool before opening it to avoid the risk of burns caused by excessive residual water in the barrel and high temperature flowing out.

Freezing and anti freezing treatment

The optimal operating environment for this machine is (2-40) °C. If used in an environment below 2 °C, it may damage the waterway system; If the machine has just returned to an indoor environment of 2 °C or below, it should be left to stand for a day until the ice melts before use.

MAINTENANCE

■ Technical Specifications

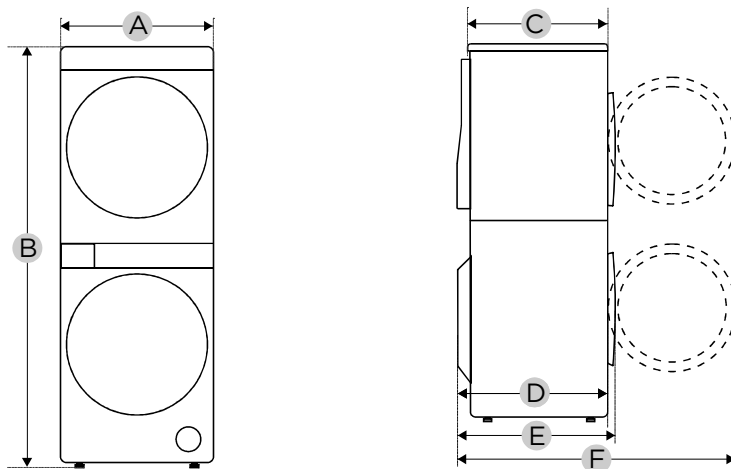

Model	TWD-T40BZU110MWS(WT)
Power Supply	220-240V~,50Hz
MAX. Current	10A
Standard Water Pressure	0.05MPa~1MPa
Washing Capacity	10.0kg
Drying Capacity	8.0kg
Weight	118kg
Rated Power	1950W
Refrigerant	R134a
Quantity Of Refrigerant	270g
GWP	1430
Tonne(s) of CO ₂ Equivalent	0.3861t
Dimension	
A	595mm
B	1682mm
C	535mm
Reference Dimension	
D	560mm
E	595mm
F	1105mm