

1	2	3	4	5	6
---	---	---	---	---	---

USER MANUAL

ELECTRIC KETTLE
KT-15DRTSG(H)

TOSHIBA



CONTENTS

CONTENTS	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	04
PRODUCT OVERVIEW	05
OPERATION INSTRUCTIONS	06
CLEANING AND MAINTENANCE	08
TROUBLESHOOTING	09

SAFETY INSTRUCTIONS

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance must not be immersed.
- The heating element surface is subject to residual heat after use.
- If the kettle is overfilled, boiling water may spill out.
- Do not use outdoors.
- The appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shop, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- **WARNING:** Misuse may cause potential injury.

- Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use.
- Warning: Avoid spillage on the connector.
- The appliance is only to be used with the stand provided.

 
SPECIFICATIONS

Model	KT-15DRTSG(H)
Capacity	1.5L
Rated voltage	220-240V~
Rated frequency	50/60Hz
Rated power	1260-1500W

PRODUCT OVERVIEW

Name of Each Part

Since the appearance of each product is different, the picture below is for reference only. Please refer to the actual product in the packaging box.

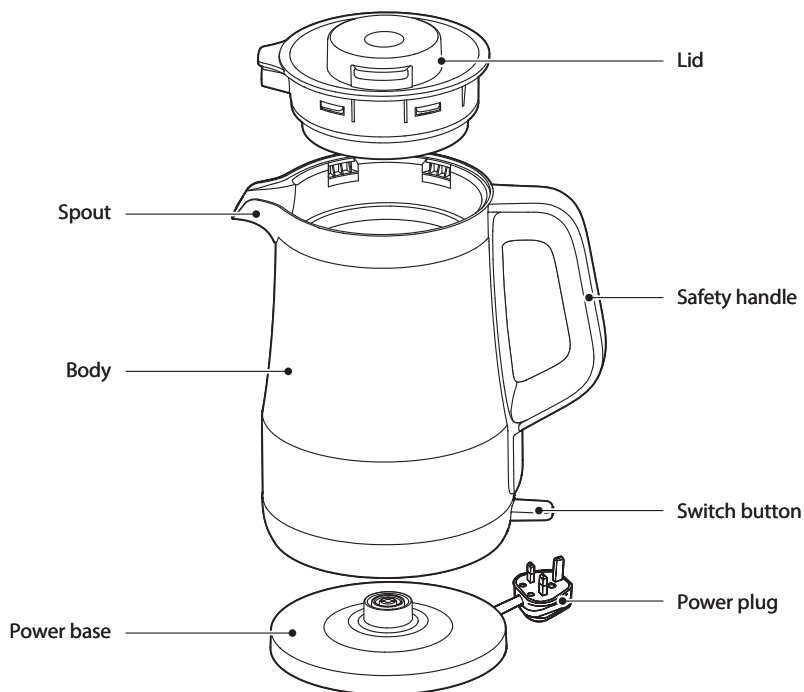

NOTE

The figure below is for reference only, and the details are subject to the actual objects in the packaging box.

 
OPERATION INSTRUCTIONS

Instructions for Use



1. Please reset the water outlet lock button after pouring water or before boiling water.
2. Do not add water beyond the maximum water level mark during use.
3. During the process of boiling water, please note that the spout is hot; especially when operating the lid opening button after the water is boiled, wait until steam stops coming out of the spout before operating.

Instructions for Use

1. Open the lid as shown in the picture below.
2. Add water to the kettle and close the lid. Be careful not to exceed the maximum water level.

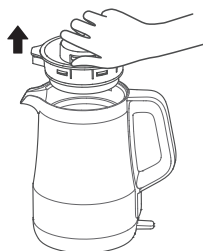

  3. Place the kettle on the power base and turn on the power.
4. Press the switch button, the heating indicator light will light up and the kettle will start heating.

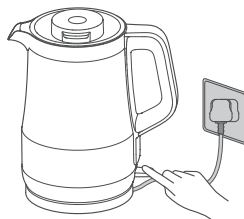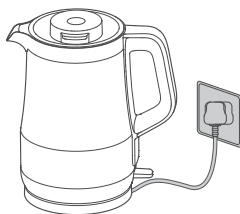

Pouring Operation

1. Press the water outlet lock button to unlock the water outlet.
2. Then, you can pour out water for drinking.

 
 


3. After pouring water, press the lock button again to lock the water outlet button.




CLEANING AND MAINTENANCE

1. Disconnect the power supply and add descaling agent and water to the kettle.
2. Turn on the power and boil the descaling solution.

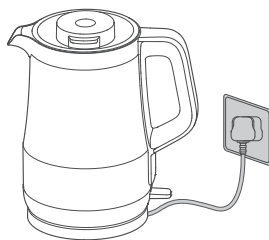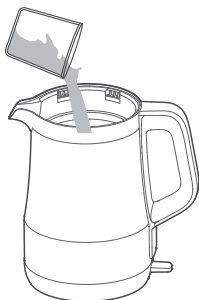

 3. Discard the descaling solution after letting it sit for a while.
4. Rinse the inner side with clean water and dry with a clean soft cloth.

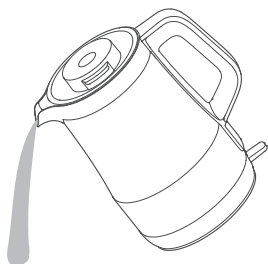

TROUBLESHOOTING

When you think the product is faulty, please check the following conditions for confirmation before sending it to a service center.

Fault	Possible reason	Solution
Light does not turn on	• The power plug is not plugged in properly	Plug in the power plug. If the indicator light still does not turn on, please send it to a local after-sales service center
	• Light cord is loose	
	• Light cord is broken	
No heating	• The switch button is not pressed in place	Press the switch button according to the operating instructions. If it still does not heat, please send it to a local after-sales service center
	• Heating tube is broken	
	• Thermostat is broken	
	• Fuse is broken	
No tripping when water is boiling	• The lid is not closed properly	Close the lid properly
	• Kettle malfunction	Send to local after-sales service center
Tripped before water is boiling (early tripping)	• Too much scale on the bottom of the kettle	Clear the scale
	• Kettle malfunction	Send to local after-sales service center

#DetailsMatter