 
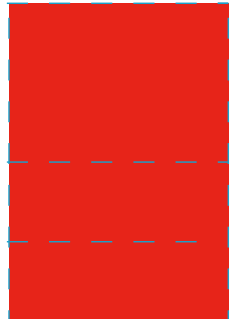 


# INSTRUCTION MANUAL

# MICROWAVE OVEN

ML2-EG30PE(BS)

Please review this instruction manual before operating.

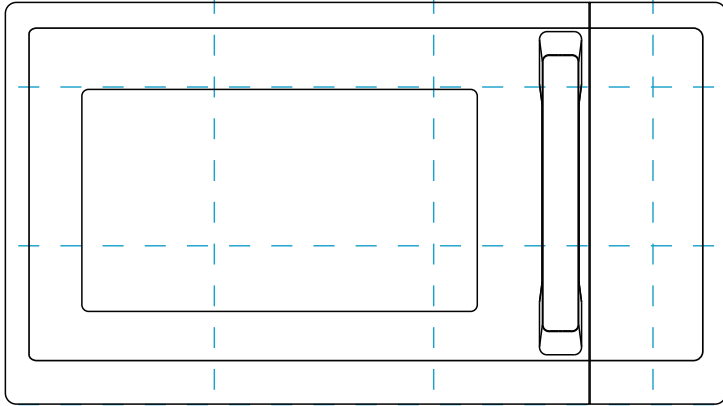



# CONTENTS

## PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy .....	EN-01
Specifications .....	EN-02
Important safety instructions .....	EN-03
To reduce the risk of injury to persons grounding installation.....	EN-08
Cleaning.....	EN-10
Utensils.....	EN-11
Materials you can use in microwave oven .....	EN-12
Materials can not be used in microwave oven .....	EN-14

## PRODUCT SETTING

Setting up your oven .....	EN-15
----------------------------	-------

## INSTRUCTION FOR USE

Before using for the first time .....	EN-18
Control panel and features .....	EN-19
1. Standby mode .....	EN-20
2. Setting the clock .....	EN-20
3. Setting the kitchen timer .....	EN-21
4. Microwave cooking .....	EN-21
5. Grill cooking .....	EN-22
6. Combination cooking .....	EN-22
7. Defrost by time .....	EN-23
8. Defrost by weight .....	EN-23
9. Multi-stage cooking .....	EN-24
10. Speedy cooking .....	EN-25
11. Inquiring function.....	EN-25

12. Lock function for children .....EN-26

13. Mute mode .....EN-26

14. Auto menu ..... EN-27

**CLEANING AND MAINTENANCE**

Cleaning..... EN-28

Trouble shooting ..... EN-30



 
**NOTE**

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

---

- (a). Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c). **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

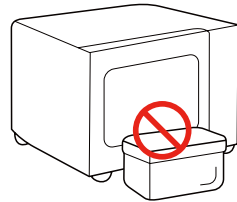

### ADDENDUM

---

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

## SPECIFICATIONS

---

MODEL	ML2-EG30PE(BS)
RATED VOLTAGE/FREQUENCY	230-240 V~ 50 Hz
RATED INPUT POWER(MICROWAVE)	1350 W
RATED OUTPUT POWER(MICROWAVE)	900 W
GRILL	1000 W

## ENERGY CONSUMPTION

---

Product information for power consumption and maximum time to reach applicable low power mode.

Standby mode	0.8 W
The maximum time needed for the microwave oven to automatically reach the applicable low power mode or condition.	20 minutes

---



### NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

# IMPORTANT SAFETY INSTRUCTIONS



## WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:



 
Read and follow the specific: "**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**".



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.




Keep the appliance and its cord out of reach of children less than 8 years.

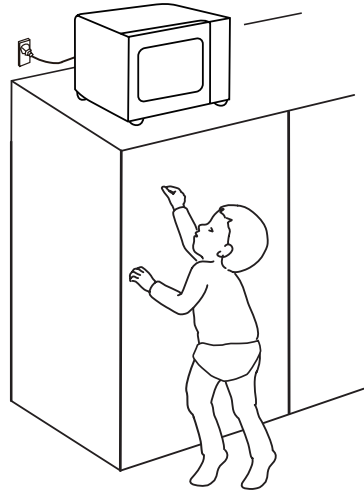


If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


# IMPORTANT SAFETY INSTRUCTIONS

 **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.


---

 **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.


---

 **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.


---

 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.




 Only use utensils that are suitable for use in microwave ovens.


---

 If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.


---

 
 Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.


---


 The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature

# IMPORTANT SAFETY INSTRUCTIONS


 The oven should be cleaned regularly and any food deposits removed. Please keep the waveguide area clean. Use soft damp cloth to clean it up when there is food splash residue on the waveguide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.

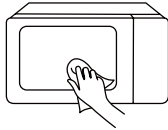

 Only use the temperature probe recommended for this oven. (For ovens provided with a facility to use a temperature-sensing probe.)


 The microwave oven must be operated with the decorative door open. (For ovens with a decorative door.)

---


 This appliance is intended to be used in household and similar applications such as:

1. staff kitchen areas in shops, offices and other working environments;
2. by clients in hotels, motels and other residential type environments;
3. farm houses;
4. bed and breakfast type environments.


---

 The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.


# IMPORTANT SAFETY INSTRUCTIONS

 The appliance is intended to be used freestanding.


---

 The rear surface of appliances shall be placed against a wall.


---

 The temperature of accessible surfaces may be high when the appliance is operating.

 
---


 **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

---


 Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating

has ended.

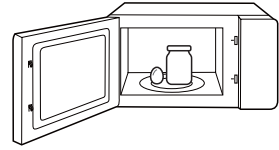


 The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)


---

 The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

---

 Metallic containers for food and beverages are not allowed during microwave cooking.

---

 The appliance shall not be cleaned with a steam cleaner.

# IMPORTANT SAFETY INSTRUCTIONS



The appliances are not intended to be operated by means of an external timer or separate remote-control system.

READ CAREFULLY AND KEEP FOR  
FUTURE REFERENCE  
HOUSEHOLD USE ONLY  
(NOT FOR COMMERCIAL USE)

# TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING** - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.



**DANGER**

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

# TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



**WARNING**

## Electric Shock Hazard:

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord or extension cord is used:
  - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - (2). The extension cord must be a grounding-type 3-wire cord.
  - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

# CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

# UTENSILS



## CAUTION

 
### Personal Injury Hazard:

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy. See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven**".

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

 
### Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

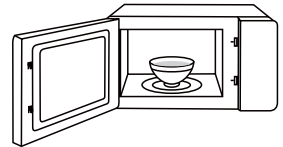





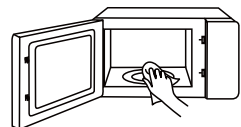





 

 



## NOTE





 



KEEP THE CAVITY AND  
WAVEGUIDE AREA CLEAN

















# MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. 
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. 
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. 
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. 
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. 
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking. 
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. 
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming. 

# MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 <p data-bbox="196 469 265 493">Plastic</p>	<p data-bbox="376 375 931 513">Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.</p> 
 <p data-bbox="169 652 290 677">Plastic wrap</p>	<p data-bbox="376 570 927 651">Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.</p> 
 <p data-bbox="156 815 304 839">Thermometers</p>	<p data-bbox="376 764 919 789">Microwave-safe only (meat and candy thermometers).</p> 
 <p data-bbox="175 974 284 998">Wax paper</p>	<p data-bbox="376 911 847 967">Use as a cover to prevent splattering and retain moisture.</p> 

# MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish. 
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish. 
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing. 
 Metal twist ties	May cause arcing and could cause a fire in the oven. 
 Paper bags	May cause a fire in the oven. 
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. 
 Wood	Wood will dry out when used in the microwave oven and may split or crack. 

 
# PRODUCT SETTING

## SETTING UP YOUR OVEN


(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)

### NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES


Remove the oven and all materials from the carton and oven cavity.




Turntable Ring Assembly

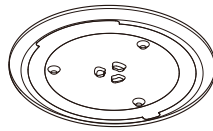 


Glass Tray

 

Instruction Manual

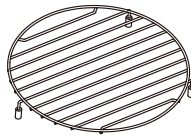 

 Grill Rack (Can not be used in microwave function and must be placed on the glass tray.)

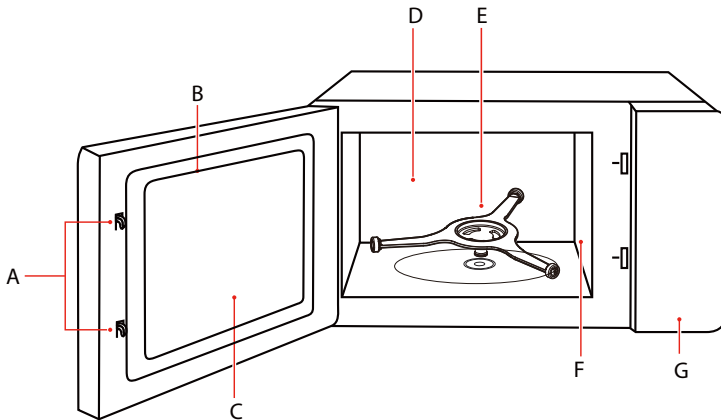

- A. Safety interlock system
- B. Door assembly
- C. Observation window
- D. Oven cavity

- E. Turntable ring assembly
- F. Waveguide cover
- G. Control panel

# SETTING UP YOUR OVEN

## TURNTABLE INSTALLATION

 
Clean the cooking compartment and place the turntable.

For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.


Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories. You can also refer them to the cleaning section.

How to put the turntable in place:

1. Place the turntable ring assembly ② into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ②.

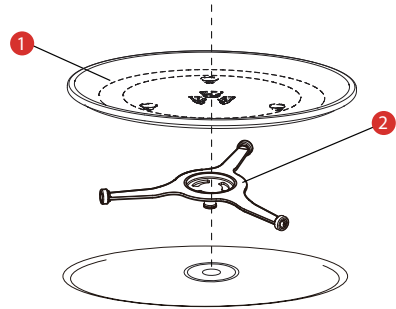

 1) Glass Tray  
2) Turntable Ring Assembly

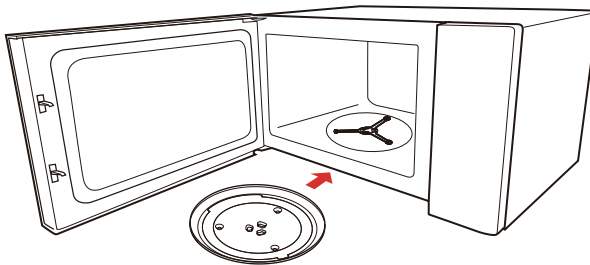

### NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

## COUNTERTOP INSTALLATION

 
Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

## INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
  - a. The minimum installation height is 85cm.
  - b. The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
  - c. Do not remove the legs from the bottom of the oven.
  - d. Blocking the intake and/or outlet openings can damage the oven.
  - e. Place the oven as far away from radios and TV as possible.

Operation of microwave oven may cause interference to your radio or TV reception.

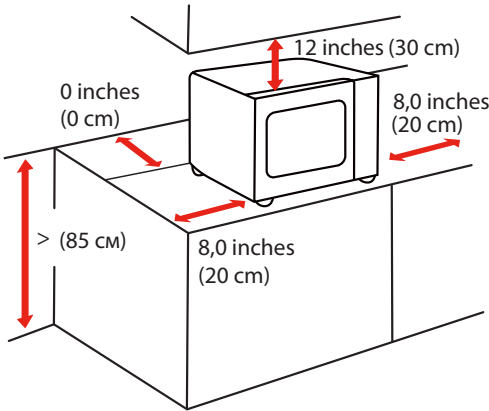


SIDE	DISTANCE (INCHES/CM)
Top	12 inches/30cm
Left	8.0 inches/20cm
Right	8.0 inches/20cm
Behind	0 inches/ 0cm
Front	Open

2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



 - Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

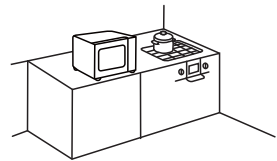

The accessible surface may be hot during operation

# INSTRUCTION FOR USE

## BEFORE USING FOR THE FIRST TIME

**It is normal that the oven may produce unpleasant odors when it is used for the first time.**

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**PRODUCT SAFETY**" beforehand.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.



 
### NOTE

- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

# OPERATION

## CONTROL PANEL AND FEATURES

---

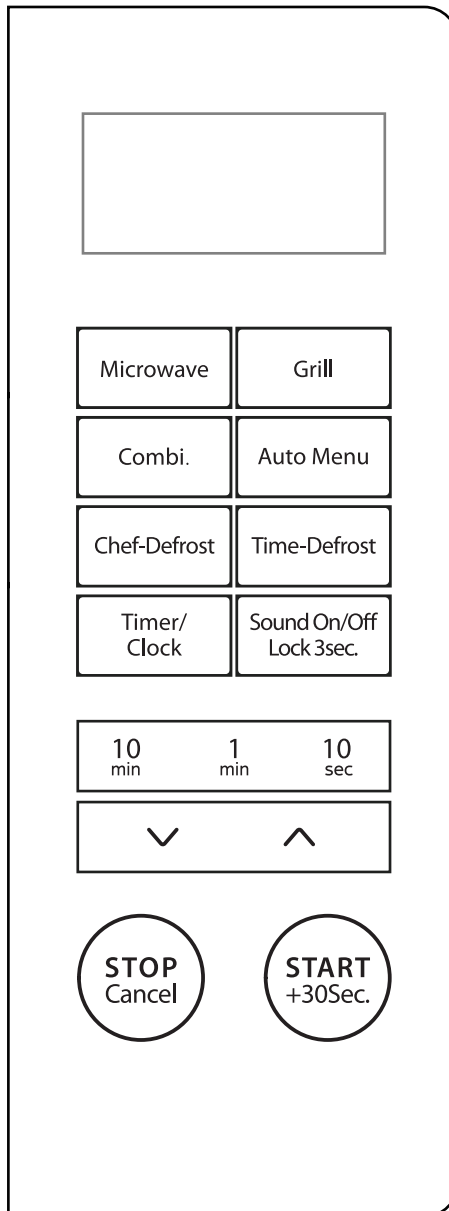

## 1. STANDBY MODE

---

- a When the microwave oven is plugged into an outlet, "00:00" will display, and the oven will enter the standby mode.
- b During the setting, if **STOP** Cancel is pressed or if there is no operation within 1 minute, the setting is invalid. And then the oven will enter the standby mode.

## 2. SETTING THE CLOCK

---

- a Press **Timer/ Clock** twice, "00:00" will display.

Timer/  
Clock

- b Press  or  to set the hour figures.



- c Press **START** +30Sec. to confirm.

**START**  
+30Sec.

- d Press  or  to set the minute figures.



- e Press **START** +30Sec. to confirm.

**START**  
+30Sec.



**NOTE**

- To reset the clock, please repeat step a to step e.
- The clock is a 24-hour display.

### 3. SETTING THE KITCHEN TIMER

a Press **Timer/ Clock** once, "00:00" will display.

Timer/  
Clock

b Press **10 min**, **1 min**, **10 sec**, **∨**, or **∧** to set the desired time.  
The maximum time value is "99:50".

10 min 1 min 10 sec

Or

∨ ∧

c Press **START +30Sec.** to start counting down.

START  
+30Sec.



**NOTE**

• The kitchen timer is a timer.

### 4. MICROWAVE COOKING

#### 11 power levels are available

POWER	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
DISPLAY	PL10	PL09	PL08	PL07	PL06	PL05	PL04	PL03	PL02	PL01	PL00

a Press **Microwave** once, "PL10" will display.

Microwave

b Press **Microwave** repeatedly, or press **∨** or **∧** to set the power level. The 11 power levels are available.

Microwave

Or

∨ ∧

c Press **START +30Sec.** confirm.

START  
+30Sec.

d Press **10 min**, **1 min**, **10 sec**, **∨**, or **∧** to set the cooking time.  
The maximum time value is "99:50".

10 min 1 min 10 sec

Or

∨ ∧

e Press **START +30Sec.** to start cooking.

START  
+30Sec.

## 5. GRILL COOKING

a Press **Grill** once, "G-1" will display.

Grill

b Press **START** +30Sec. confirm.

**START**  
+30Sec.

c Press **10 min**, **1 min**, **10 sec**, **∨**, or **∧** to set the cooking time.  
The maximum time value is "99:50".

**10 min** **1 min** **10 sec**

Or

**∨** **∧**

d Press **START** +30Sec. to start cooking.

**START**  
+30Sec.



**NOTE**

- The buzzer will sound to remind of turning over the food during grilling. If no operation, the oven will continue working.

## 6. COMBINATION COOKING

a Press **Combi** once or twice, "C-1" or "C-2" will display.

Combi

b Press **START** +30Sec. confirm.

**START**  
+30Sec.

c Press **10 min**, **1 min**, **10 sec**, **∨**, or **∧** to set the cooking time.  
The maximum time value is "99:50".

**10 min** **1 min** **10 sec**

Or

**∨** **∧**

d Press **START** +30Sec. to start cooking.

**START**  
+30Sec.

### Combination Cooking Chart

FUNCTION	DISPLAY	MICROWAVE	GRILL
Combi. 1	C-1	55%	45%
Combi. 2	C-2	34%	66%



## 7. DEFROST BY TIME

a Press Time-Defrost once, "dEF1" will display.

Time-Defrost

b Press **START**  
+30Sec. confirm.

**START**  
+30Sec.

c Press 10 min, 1 min, 10 sec, , or  to set the desired defrosting time.  
The maximum time value is "99:50".

10 min 1 min 10 sec

Or



d Press **START**  
+30Sec. to start defrosting.

**START**  
+30Sec.



**NOTE**

- The default power level is PL03 and it cannot be changed.
- The buzzer will sound to remind of turning over the food during defrosting. If no operation, the oven will continue working.



## 8. DEFROST BY WEIGHT

a Press Chef-Defrost once, "dEF2" will display

Chef-Defrost

b Press **START**  
+30Sec. confirm.

**START**  
+30Sec.

c Press  or  to set the weight of the food.  
The range of weight is 100-2000g.



d Press **START**  
+30Sec. to start defrosting.

**START**  
+30Sec.



**NOTE**

- The buzzer will sound to remind of turning over the food during defrosting. If no operation, the oven will continue working.

## 9. MULTI-STAGE COOKING



Example: Defrost food for 500g and then cook with 80% microwave power for 7 minutes.


a Press **Chef-Defrost** once, "dEF2" will display

Chef-Defrost

b Press **START**  
+30Sec. confirm.



START  
+30Sec.

c Press  or  to set the weight of the food to 500g.

d Press **Microwave** once, "PL10" will display.

Microwave

e Press **Microwave** repeatedly,  
or press  or  to set the power  
level to PL08.

Microwave

Or

f Press **START**  
+30Sec. confirm.

START  
+30Sec.

g Press **10** min, **1** min, **10** sec,  
to set the cooking time to 7 minutes.

10 min 1 min 10 sec

Or

h Press **START**  
+30Sec. to start cooking.

START  
+30Sec.



**NOTE**

- Two cooking stages can be set in multi-stage cooking.
- If you set the defrost function, it will work in the first stage.
- The auto menu can't be set as one of the multi-stage.

## 10. SPEEDY COOKING

- a In standby mode, press **START** +30Sec. to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "99:50".

**START**  
+30Sec.

- b In standby mode, press **10 min**, **1 min**, or **10 sec** to set a cooking time at 100% power. Then press **START** +30Sec. to start cooking.

**10 min**   **1 min**   **10 sec**

**START**  
+30Sec.



**NOTE**

- In the cooking state, each more press on **START** +30Sec., **10 min**, **1 min**, or **10 sec** can increase the corresponding cooking time. Or press **∨** or **∧** can change the cooking time (except for the defrosting by weight and the auto menu).

## 11. INQUIRING FUNCTION

- a If the clock has been set, the current time will display for three seconds by pressing **Timer/Clock** in the cooking state.

**Timer/  
Clock**

- b In the microwave cooking state, press **Microwave** to inquire about the power level. It will display for three seconds. In grilling and combination cooking state, the inquiring way can be done by pressing the corresponding key.

**Microwave**

## 12. LOCK FUNCTION FOR CHILDREN

---

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.

- a** To activate the lock:  
In standby mode, press and hold **Sound On/Off** **Lock 3sec.** for three seconds.  
A beep sounds and the locked icon will display.

**Sound On/Off**  
**Lock 3sec.**

- b** To deactivate the lock:  
In the locked state, press and hold **Sound On/Off** **Lock 3sec.** for three seconds.  
A beep sounds.

**Sound On/Off**  
**Lock 3sec.**

## 13. MUTE MODE

---

- a** To activate the mute mode:  
In standby mode, press **Sound On/Off** **Lock 3sec.** once. A beep will sound and "OFF" will display. When you press the key, it does not make a sound.

**Sound On/Off**  
**Lock 3sec.**



- b** To deactivate the mute mode:  
In mute mode, press **Sound On/Off** **Lock 3sec.** once. A beep will sound and "ON" will display.

**Sound On/Off**  
**Lock 3sec.**

## 14. AUTO MENU


a Press **Auto Menu** once, "01" will display.

Auto Menu

b Press **Auto Menu** repeatedly or press  
 or  to choose the menu.

Auto Menu

Or

The 6 auto menus are available.

c Press **START**  
**+30Sec.** to confirm.

**START**  
**+30Sec.**

d Press  or  to set the weight of the food.

e Press **START**  
**+30Sec.** to start cooking.

**START**  
**+30Sec.**

### AUTO MENU CHART

MENU	WEIGHT	DISPLAY	POWER
01 Popcorn	50g 100g	50g 100g	PL10
02 Potato	1 (230g) 2 (460g) 3 (690g)	1 2 3	PL10
03 Meat	250g 350g 450g	250g 350g 450g	PL10
04 Frozen Vegetable	150g 350g 500g	150g 350g 500g	PL10
05 Beverage	1cup (120ml) 2cups (240ml) 3cups (360ml)	1 2 3	PL10
06 Frozen Pizza	200g 400g	200g 400g	PL10

# CLEANING AND MAINTENANCE

## CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

### Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Wash new sponge cloths thoroughly before use.

 
#### Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

### APPLIANCE FRONT
 
#### Hot soapy water:

Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

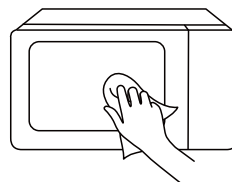


## APPLIANCE FRONT WITH STAINLESS STEEL

---

### Hot soapy water:

 Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

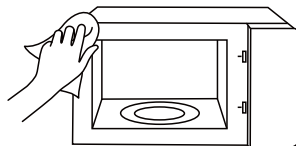


## COOKING COMPARTMENT MADE OF STAINLESS STEEL

---

### Hot soapy water or vinegar solution:

 Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

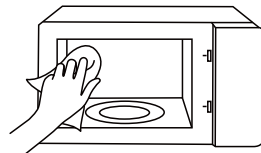


## RECESS IN THE COOKING COMPARTMENT

---

### Damp cloth:

 Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

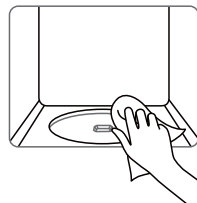


## TURNTABLE AND ROLLER RING

---

### Hot soapy water:

 When placing the turntable back into its recess, it must engage properly.

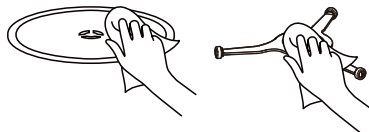

## DOOR PANELS

---

### Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

# TROUBLE SHOOTING

## Normal

Microwave oven interfering TV reception

Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.

Dim oven light

In low power microwave cooking, oven light may become dim. It is normal.

Steam accumulating on door, hot air out of vents

In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.

Oven started accidentally with no food in.

It is forbidden to run the unit without any food inside. It is very dangerous.

### Trouble

### Possible Cause

### Remedy

(1) Power cord is not plugged in tightly.

Unplug. Then plug again after 10 seconds.

Oven cannot be started.

(2) Fuse blowing or circuit breaker works.

Replace fuse or reset circuit breaker (repaired by professional personnel of our company)

(3) Trouble with outlet.

Test outlet with other electrical appliances.

Oven does not heat.

(4) Door is not closed well.

Close door well.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.



**#DetailsMatter**

Customercare@us.toshiba-lifestyle.com  
855-204-5313

## 说明书变更点记录

2024-10-18

EN-03关于小孩的2句警告语由CB的改GS的语句。