

TOSHIBA

IMPORTANT SAFETY INSTRUCTIONS

⚠ CAUTION

- Read Rules for Safe Operation and Instructions Carefully.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- Do not use fan in window, rain may create electrical hazard.

- This appliance is for household use only.
- The "T" mark is used for tropical regions.

⚠ WARNING

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- When the fan was assembled, the rotor blade guard shall not be taken off anymore.
 - Unplug fan before cleaning.
 - The rotor guard shall not be disassembled/ opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.

CLEANING AND MAINTENANCE

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.
Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

SPECIFICATIONS

Model	F-ALE60TH
Voltage	220-240V~ 50Hz
Power	45W
Effective power cord length	1.60m

TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may cost for calling to the service center.

Problem

The machine does not work properly after installed

Cause 1

The power cable is not plugged in or has poor contact.

Solution 1

Make sure the plug is properly inserted into the socket.


Cause 2

The switch on the body is not turned on.

Solution 2

Turn on the switch on the body.

 PRODUCT INSTALLATION

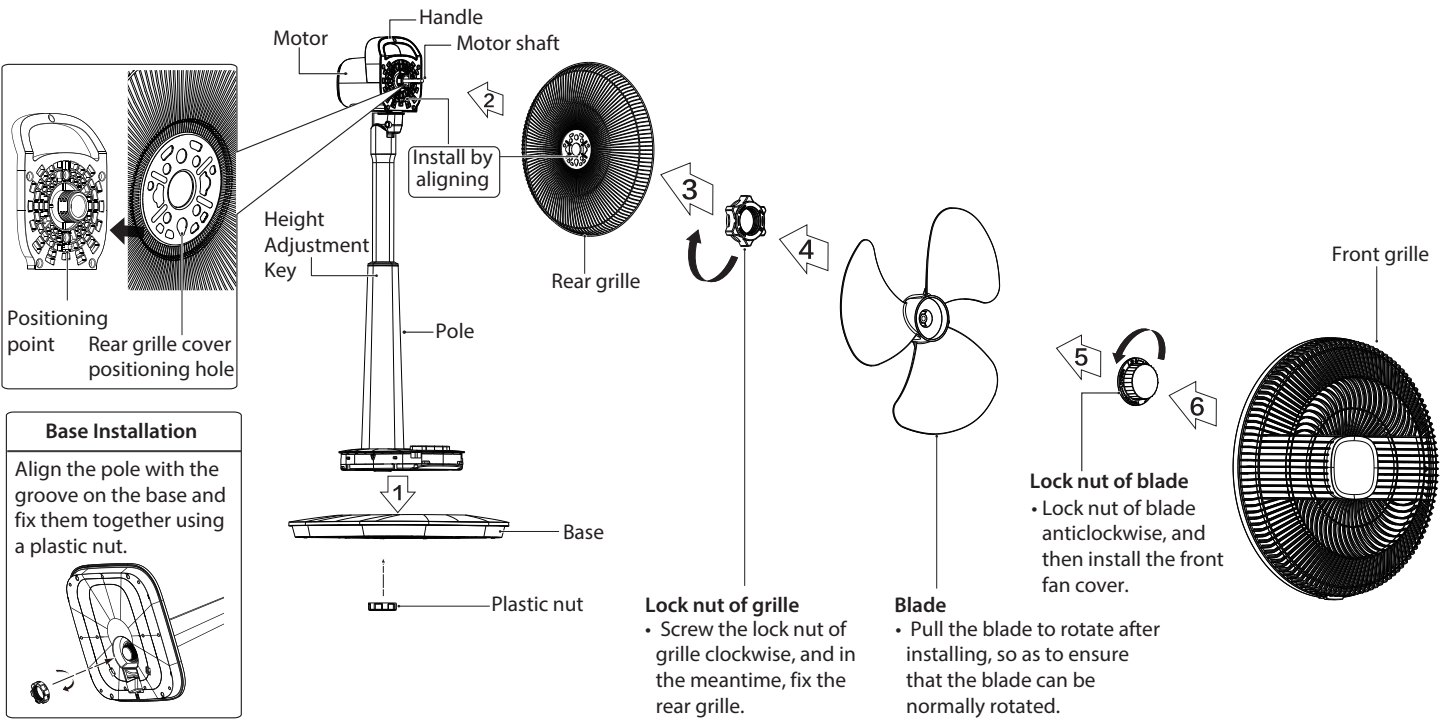

Considerate Hint:
Before installation, remove three parts:
1. Unscrew the fan blade lock nut clockwise.
2. Unscrew the rear grille and base lock nuts counterclockwise.

 
Note:

All the pictures in this manual are for explanation purposes only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real model.


PRODUCT INSTALLATION

FRONT AND REAR GRILLE INSTALLATION


1. Align the front grille buckle with the top line on the rear grille, then look at the schematic from the back.

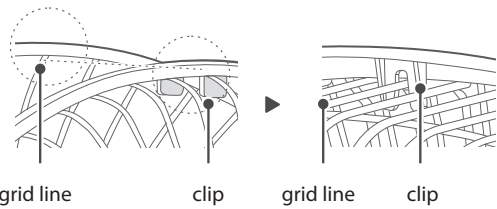

 2. Press grilles sequentially with both hands. With the "click", the installation is in place.

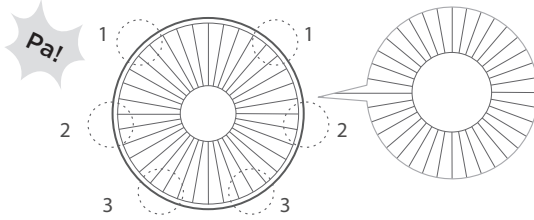

 3. Self-Catch Installation.

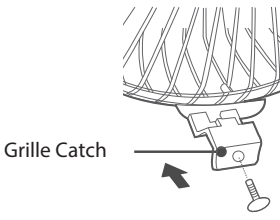

BODY OPERATING INSTRUCTIONS

INSTRUCTIONS FOR USE

Instructions for operation of body

