 


INSTRUCTION MANUAL

MICROWAVE OVEN

MW3-EM25PEI(BK)

Please review this instruction manual before operating.

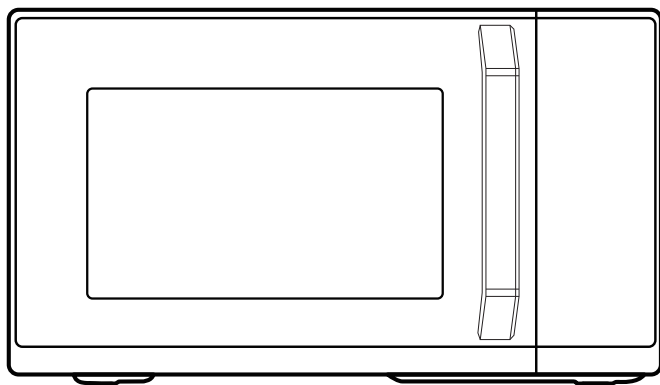

TOSHIBA

CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	EN-01
Specifications	EN-02
Important safety instructions	EN-03
To reduce the risk of injury to persons grounding installation	En-08
Cleaning	EN-10
Utensils.....	EN-11
Materials you can use in microwave oven	EN-12
Materials can not be used in microwave oven	EN-14

PRODUCT SETTING

Names of microwave oven parts and accessories	EN-15
Turntable installation	EN-16
Countertop installation	EN-17
Installation	EN-17

INSTRUCTION FOR USE

Before using for the first time	EN-18
Control panel and features	EN-19
1. Standby mode.....	En-20
2. Setting the clock.....	EN-20
3. Setting the Kitchen timer.....	EN-20
4. Microwave cooking	EN-21
5. Speedy cooking.....	EN-22

6. Defrost by weight	EN-23
7. Defrost by time	EN-23
8. Multi-stage cooking	EN-24
9. Auto menu	EN-25
10. Memory function	EN-26
11. Lock function for children	EN-27
12. ECO function	EN-27
13. Inquiring function	EN-27
14. Mute mode	EN-27

CLEANING AND MAINTENANCE

Cleaning	EN-28
Trouble shooting	EN-30

 


NOTE

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c). **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

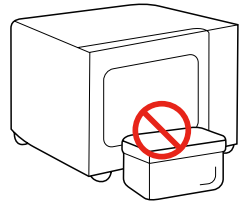

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

SPECIFICATIONS

Model	MW3-EM25PEI(BK)
Main function	Solo
Capacity	25L
Power supply voltage	230V
Frequency	50Hz
Protection Against Electric Shock Class	I
Rated power input (Microwave)	1330W
Rated power output (Microwave)	900W
Microwave frequency	2450MHz
Net Weight	8.4kg
Product Dimension	472x378x280 mm



All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:



 
Read and follow the specific: **"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"**.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.




Keep the appliance and its cord out of reach of children less than 8 years.

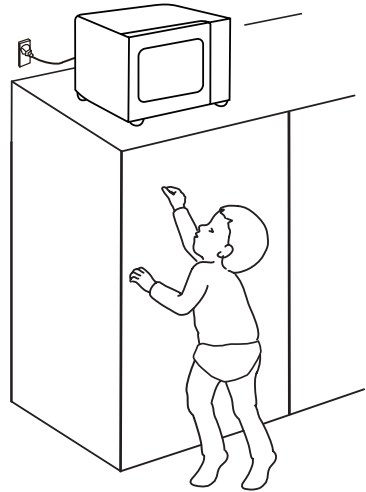



If the supply cord is damaged, it must be replaced by the


IMPORTANT SAFETY INSTRUCTIONS

manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


 **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.


 **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.


 **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.


 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.



 Only use utensils that are suitable for use in microwave ovens.

 If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

 Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

 
 The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature

IMPORTANT SAFETY INSTRUCTIONS

checked before consumption, in order to avoid burns.



The oven should be cleaned regularly and any food deposits removed. Please keep the waveguide area clean. Use soft damp cloth to clean it up when there is food splash residue on the waveguide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.

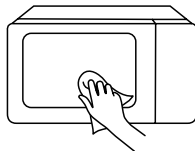

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly

result in a hazardous situation.



Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)




The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)





This appliance is intended to be used in household and similar applications such as:


1. staff kitchen areas in shops, offices and other working environments;
2. by clients in hotels, motels and other residential type environments;
3. farm houses;
4. bed and breakfast type environments.


IMPORTANT SAFETY INSTRUCTIONS

 
 The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.


 The rear surface of appliances shall be placed against a wall.


 The appliance is intended to be used freestanding.

 The appliance shall not be cleaned with a steam cleaner.

 Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

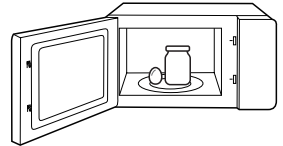

 The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

 Metallic containers for food and beverages are not allowed during microwave cooking.

IMPORTANT SAFETY INSTRUCTIONS



The appliance must not be installed behind a decorative door in order to avoid overheating.
(This is not applicable for appliances with decorative door.)

READ CAREFULLY AND KEEP FOR
FUTURE REFERENCE
HOUSEHOLD USE ONLY
(NOT FOR COMMERCIAL USE)

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.



DANGER

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



WARNING

Electric Shock Hazard:

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS



CAUTION

 
Personal Injury Hazard:

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy. See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven**".

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

 
Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

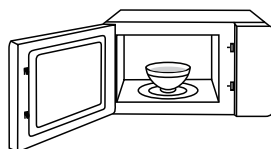





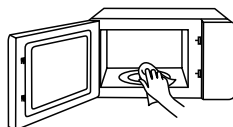





 

 



NOTE





 



KEEP THE CAVITY AND
WAVEGUIDE AREA CLEAN



 













MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS	
 <p>Browning dish</p>	<p>Follow manufacturer’s instructions.</p> <p>The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.</p>	
 <p>Dinnerware</p>	<p>Microwave-safe only. Follow manufacturer’s instructions. Do not use cracked or chipped dishes.</p>	
 <p>Glass jars</p>	<p>Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.</p>	
 <p>Glassware</p>	<p>Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.</p>	
 <p>Oven cooking bags</p>	<p>Follow manufacturer’s instructions. Do not close with metal tie.</p> <p>Make slits to allow steam to escape.</p>	
 <p>Paper plates and cups</p>	<p>Use for short-term cooking/warming only. Do not leave oven unattended while cooking.</p>	
 <p>Paper towels</p>	<p>Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.</p>	
 <p>Parchment paper</p>	<p>Use as a cover to prevent splattering or a wrap for steaming.</p>	

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. 
 Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. 
 Thermometers	Microwave-safe only (meat and candy thermometers). 
 Wax paper	Use as a cover to prevent splattering and retain moisture. 

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN


UTENSILS	REMARKS	
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.	
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.	
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.	
 Metal twist ties	May cause arcing and could cause a fire in the oven.	
 Paper bags	May cause a fire in the oven.	
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	
 Wood	Wood will dry out when used in the microwave oven and may split or crack.	

PRODUCT SETTING


SETTING UP YOUR OVEN

NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES

 
Remove the oven and all materials from the carton and oven cavity.

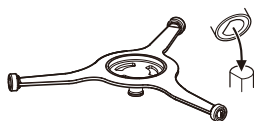


Turntable Ring Assembly

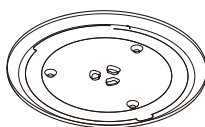 

Glass Tray

 

Instruction Manual

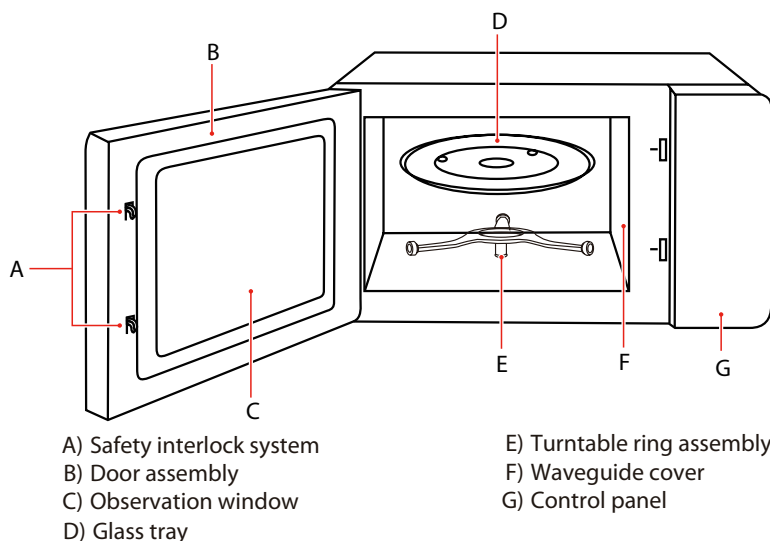 

- A) Safety interlock system
- B) Door assembly
- C) Observation window
- D) Glass tray

- E) Turntable ring assembly
- F) Waveguide cover
- G) Control panel



NOTE

In case of any differences between the appliance and the pictures in this manual, the product shall prevail.

SETTING UP YOUR OVEN

TURNTABLE INSTALLATION

 
Clean the cooking compartment and place the turntable.

For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.


Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories. You can also refer them to the cleaning section.

How to put the turntable in place:

1. Place the turntable ring assembly ② into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ②.

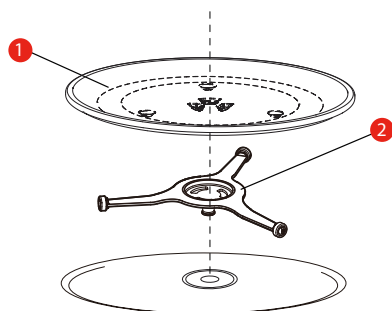

 1) Glass Tray
2) Turntable Ring Assembly

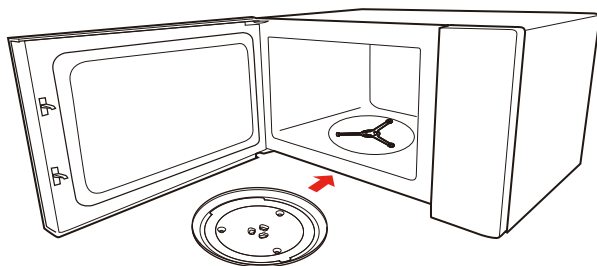

NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

 
COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

- 1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - a. The minimum installation height is 85cm.
 - b. The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

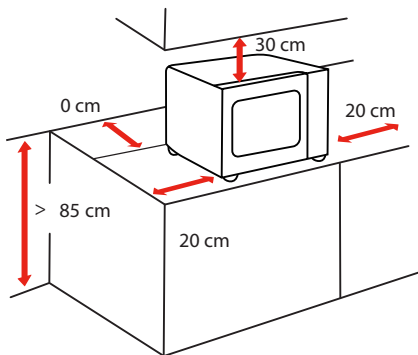


SIDE	DISTANCE CM
Top	30cm
Left	20cm
Right	20cm
Behind	0cm
Front	Open

- 2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



NOTE

 - Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

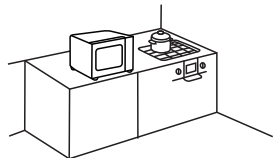

The accessible surface may be hot during operation

INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME

It is normal that the oven may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**PRODUCT SAFETY**" beforehand.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.



NOTE


- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION



CONTROL PANEL AND FEATURES



1. STANDBY MODE

- a When the microwave oven is plugged into an outlet, "0:00" will display, and the oven will enter the standby mode.
- b During the setting, if  is pressed or if there is no operation within 1 minute, the setting is invalid. And then the oven will enter the standby mode.

2. SETTING THE CLOCK



- a Press  twice and then "00:00" will display.
ตั้งเวลา / นาฬิกา
TIMER / CLOCK
- b Press the number keys to enter the time.
Example: To set the clock to 12:10, please press "1,2,1,0" in turn.
- c Press  to confirm. The clock is set.
ตั้งเวลา / นาฬิกา
TIMER / CLOCK



NOTE

- The clock is a 12-hour display. And if the clock is not set, it will not work when powered.
- To reset the clock, please repeat step a to step c.

3. SETTING THE KITCHEN TIMER

- a Press  once and then "00:00" will display.
ตั้งเวลา / นาฬิกา
TIMER / CLOCK
- b Press the number keys to set the desired time.
The maximum time value is "99:99".
- c Press  to confirm. The timer starts counting down.
เริ่มทำงาน / +30 วินาที




NOTE

- The kitchen timer is a timer.
- Any other program can't be set during the kitchen timer.

4. MICROWAVE COOKING

11 power levels are available


LEVEL	POWER	DISPLAY
1	100%	PL10
2	90%	PL9
3	80%	PL8
4	70%	PL7
5	60%	PL6
6	50%	PL5
7	40%	PL4
8	30%	PL3
9	20%	PL2
10	10%	PL1
11	0%	PL0

a Press  once and then "00:00" will display.



b Press the number keys to set the cooking time.
The maximum time value is "99:99".



c Press  once and then "PL10" will display.



d Press the number keys to set the power level.
The 11 power levels are available.



e Press  to start cooking.





NOTE

- Opening the oven door or pressing หยุด/ยกเลิก
STOP
CANCEL
eco during operation will interrupt the current mode.
- If "PLO" is selected, the oven will work with a fan for no power. You can use this level to remove the odor of the oven.

5. SPEEDY COOKING

- a In standby mode, press เริ่มทำงาน /+30 วินาที
START
+30SEC. to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "99:99".

เริ่มทำงาน /+30 วินาที
START
+30SEC.

- b In standby mode, pressing the number keys 1 to 6 lets you quickly select a cooking time from 1 to 6 minutes. Then you can press เริ่มทำงาน /+30 วินาที
START
+30SEC. to increase the cooking time. The maximum time value is "99:99".

1	2	3
4	5	6



NOTE

- In the microwave cooking state and defrosting by time state, each more press on เริ่มทำงาน /+30 วินาที
START
+30SEC. can increase the cooking time by 30 seconds (except defrosting by weight, and the auto menu).


6. DEFROST BY WEIGHT

- a Press  once and then “dEF1” will display.



- b Press the number keys to set the weight of the food.
The range of weight is 100 to 2000g.



- c Press  to start defrosting.



- The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.


7. DEFROST BY TIME

- a Press  once and then “dEF2” will display.



- b Press the number keys to set the desired defrost time.
The maximum time value is “99:99”.



- c Press  to start defrosting.





- The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.
- The defrost power is PL3 and it cannot be changed.

8. MULTI-STAGE COOKING

Example: Defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes.


a

Press  once and then “dEF2” will display.



 



b


Press “5”, , and  to set the desired defrost time to 5 minutes.




c

Press  once and then press “7”, , and  to set the cooking time.







d

Press  once and then press the number key  to select PL8.







e


Press  to start cooking.





- Two cooking stages can be set in multi-stage cooking.
- If you set the defrost function, it will work automatically in the first stage.
- The auto menu, the kitchen timer, and the speedy cooking cannot be set as one of the multi-stage.

9. AUTO MENU








- a
- In standby mode, press the corresponding menu key repeatedly to select the weight of the food you want.
Example: Press  once and then “250g” displays.



- b
- Press  to start cooking.



Auto Menu Chart

Menu	Weight	Display	Power
 อาหารจานเดียว DINNER PLATE	250g	250g	PL10
	350g	350g	
	500g	500g	
 มันฝรั่ง POTATO	1(about 230g)	1	PL10
	2(about 460g)	2	
	3(about 690g)	3	
 เครื่องดื่ม BEVERAGE	1 Cup (120ml)	1	PL10
	2 Cups(240ml)	2	
	3 Cups(360ml)	3	
 ป๊อปคอร์น POPCORN	50g	50g	PL10
	100g	100g	
 พิซซ่าแช่แข็ง FROZEN PIZZA	100g	100g	PL10
	200g	200g	
	400g	400g	
 ผักแช่แข็ง FROZEN VEGETABLE	150g	150g	PL10
	350g	350g	
	500g	500g	
 เนื้อสัตว์ MEAT	250g	250g	PL8
	350g	350g	
	450g	450g	

10. MEMORY FUNCTION

You can save the settings for a dish in the memory and call it up again.

- a

Press the number key

0
บันทึก
MEMORY

 repeatedly to select memory 1-3 procedure. "1", "2" and "3" will display in order.

0
บันทึก
MEMORY
- b

If the procedure has been set, press

เริ่มทำงาน /+30 วินาที
START
+30SEC.

 to start working. Otherwise, please continue to set.

เริ่มทำงาน /+30 วินาที
START
+30SEC.
- c

After finishing the setting, press

เริ่มทำงาน /+30 วินาที
START
+30SEC.

 once to save the procedure.

เริ่มทำงาน /+30 วินาที
START
+30SEC.

Example: Set memory 2 (cook food with 80% microwave power for 3 minutes).

- a

In standby mode, press the number key

0
บันทึก
MEMORY

 twice.

0
บันทึก
MEMORY
- b

Press

ตั้งเวลา
ทำอาหาร
TIME COOK

 once and then press the number keys "3",

0
บันทึก
MEMORY

 , and

0
บันทึก
MEMORY

 in order.

ตั้งเวลา
ทำอาหาร
TIME COOK

→

3

0
บันทึก
MEMORY

0
บันทึก
MEMORY

c

Press

ระดับความร้อน
POWER

 once and then press the number key

8
On/Off

 .

ระดับความร้อน
POWER

→

8
On/Off

d

Press

เริ่มทำงาน /+30 วินาที
START
+30SEC.

 once to save the setting, and then "2" will display.

เริ่มทำงาน /+30 วินาที
START
+30SEC.


NOTE

• The auto menu, and the defrosting cannot be set as a memory function.


EN-26

11. LOCK FUNCTION FOR CHILDREN

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.


- a To activate the lock:
In standby mode, press and hold  for three seconds.
A beep sounds and the locked icon will display.



- b To deactivate the lock:
In the locked state, press and hold  for three seconds.
A beep sounds.





12. ECO FUNCTION

- a To enter ECO mode:
In standby mode, and the oven door is closed, press  once.
The screen will turn off.
- b To cancel ECO mode:
In ECO mode, pressing any key, or opening the door will cancel it.





 
 
13. INQUIRING FUNCTION

- a If the clock has been set, the current time will display for three seconds by pressing  in the cooking state.
- b In the microwave cooking state, press  to inquire about the power level. It will display for three seconds.



14. MUTE MODE

- a To activate the mute mode:
In standby mode, press and hold  for 3 seconds.
A beep will sound and "OFF" will display.
When you press the key, it does not make a sound.
- b To deactivate the mute mode:
In mute mode, press and hold  for 3 seconds.
A beep will sound and "ON" will display.



CLEANING AND MAINTENANCE

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



WARNING

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Wash new sponge cloths thoroughly before use.

Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges

 


Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

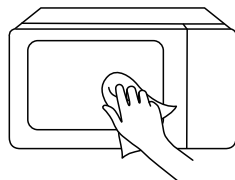

APPLIANCE FRONT WITH STAINLESS STEEL

Hot soapy water:

 
Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

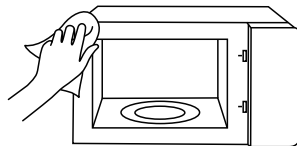

COOKING COMPARTMENT MADE OF STAINLESS STEEL

Hot soapy water or vinegar solution:

 
Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

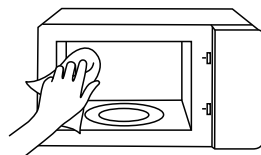

RECESS IN THE COOKING COMPARTMENT

Damp cloth:

 
Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

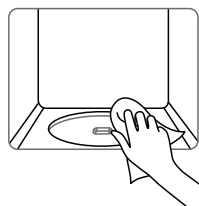

TURNTABLE AND ROLLER RING

Hot soapy water:

 When placing the turntable back into its recess, it must engage properly.

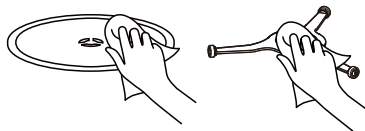

DOOR PANELS

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem.
If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with soft damp cloth.
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level
Improper defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

#DetailsMatter

Contact Information
TOSHIBA CONTACT CENTER 0-2511-7777
www.toshiba-lifestyle.com/th

