 


# TOASTER OVEN INSTRUCTION MANUAL TL-MC40EZF(GR)

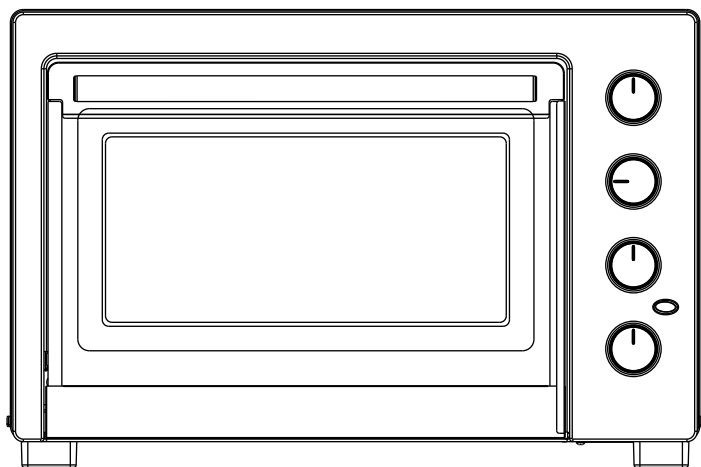

**TOSHIBA**

# Contents

## **Safety Warning**

Prohibited, forced, attention .....	EN-2
Precautions for placement .....	EN-3
First use .....	EN-3

## **Operating Manual**

Structure description .....	EN-4
Enclosure description .....	EN-4
Introduction to control panel .....	EN-5
Use flow .....	EN-6

## **Cleaning and Maintenance**

Precautions for cleaning .....	EN-7
--------------------------------	------

## **Service Guide**

Product parameters .....	EN-7
Maintenance service regulations .....	EN-8
Post-sales services .....	EN-8





## Safety Warning



### Refer to [Prohibited] contents

- This product is for home use only. It is strictly forbidden to use the toaster oven for food heating or thawing.
- The product is strictly prohibited to be operated by children during use, and should be placed in a place that children cannot touch.
- It is strictly forbidden to place any items on the top of the toaster oven when it is working to prevent fire.
- It is strictly forbidden to place flammable materials such as paper or plastic in the furnace, or store other items in the furnace, which may cause a fire.
- It is strictly forbidden to place closed containers in the toaster oven for heating, which may cause an explosion.
- It is strictly forbidden to pull the power cord. Please unplug the power cord before moving the toaster oven. It is strictly forbidden to immerse the power cord, plug and toaster oven in water or other liquids to prevent electric shock.




### Refer to [Forced] contents

- After using or not using the toaster oven for a long time, please turn off the toaster oven and unplug the power cord.
- This product appliance cannot be operated in the form of an external timer or an independent remote control system. (Non-intelligent product requirements)
- When this product is used, if the circuit is overloaded, the toaster oven may not work properly. The toaster oven should use a separate line.
- The supporting accessories provided by the manufacturer shall be used correctly, and the accessories not provided by the manufacturer should not be used to avoid fire or injury caused by human operation.
- When heating food, there shall be enough space in the container to prevent the liquid from boiling and overflow. When using glass or metal containers, take special care to prevent danger or burns.
- When moving or cleaning the toaster oven, unplug the power cord and wait for the oven to cool before proceeding. Please clean the toaster oven regularly to prevent the residual grease from catching fire.
- If the power cord or the product is damaged, in order to avoid the risk of electrical leakage, it must be repaired or replaced by the manufacturer, its maintenance department or similar department. Do not replace the power cord or disassemble it to prevent electric shock.

 


### Refer to [Attention] items that may cause minor injuries or property damage

- **Notes:** High temperature surface . When the toaster oven is in operation or just after use, the external surface temperature is high. Please do not touch. The toaster oven will heat up during use. Be careful not to touch the heating unit in the oven.
- **Warning:** The accessible part may get hot during use and the children should be kept away. The temperature of some surfaces is high while the appliance is in operation.
- Surfaces marked with "high temperature surface" marks will become hot during use. The temperature of the outer surface may be very high for a period of time after the end of the working state. Please do not touch or move at will.

## Precautions for Placement

- Place the toaster oven on an insulated surface and keep a distance of at least 10-15cm around the toaster oven.
- The toaster oven shall be placed in a dry environment and shall not be used outdoors.
- In order to avoid the soot in product work polluting furniture or the heat causing fire, the product should be kept at a certain distance from walls and cabinets.
- It is strictly forbidden to place the toaster oven near flammable materials or heat sources. Keep it away from curtains or the like to prevent fire.

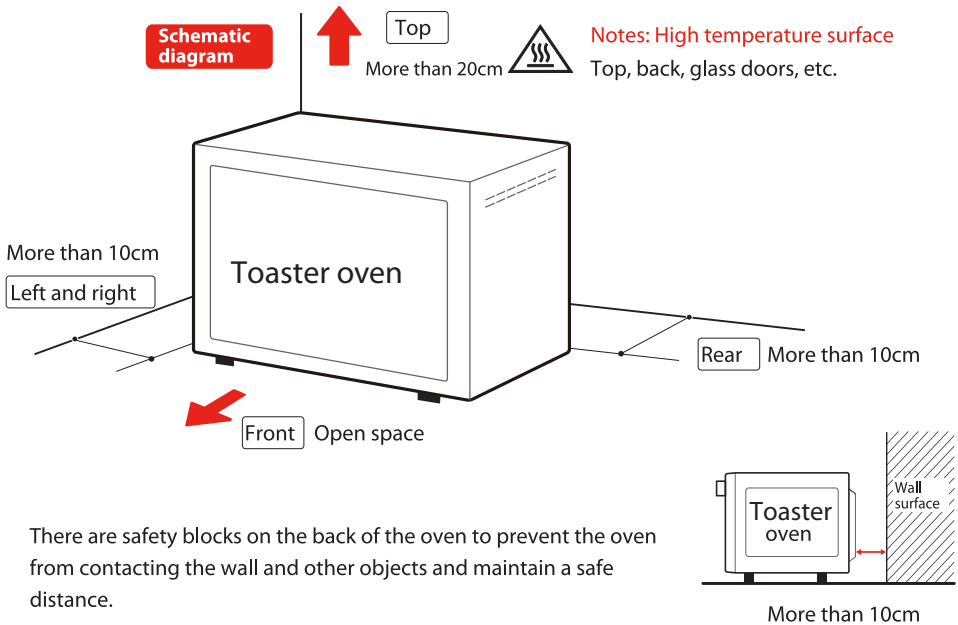

## First Use

 
**Empty burning tips:** Burn empty for 15 minutes before first use, to remove the anti-corrosion protective coating in the heating tube and the chamber.

- Operation methods:**
- 1 Wipe the oven once with a damp cloth in power-off state (do not wipe the heating tube).
  - 2 Put the baking tray and grill into the oven and plug in.
  - 3 Use the upper and lower tube functions and adjust the temperature to the highest level to burn empty for 15 minutes.

**Notes:** It is normal to have odor or smoke during empty burning.

**End of empty burning:** Unplug the power cord and fully open the oven door for quick heat dissipation. After the oven has cooled down completely, remove the baking tray and the grill for normal use.


## Structure Description

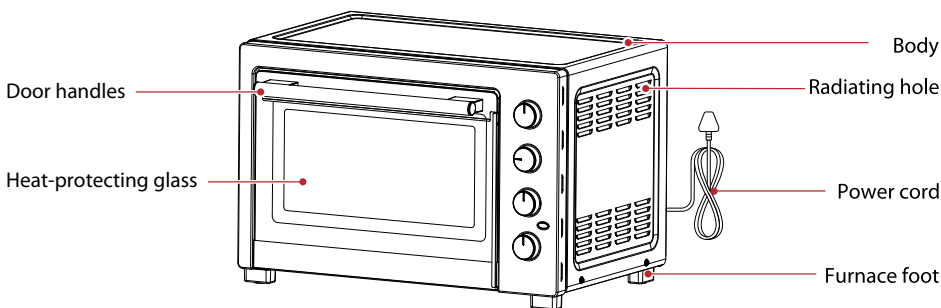

## Enclosure Description


### Notes

 - As the product is constantly updated, if the real object does not match the picture, please refer to the real object.




#### **Baking tray**

 It is used to put fat food or receive food fat when grilling. Advice: Use with tin foil




#### **Grill**

 Used for toasting bread or making other dishes as well as carrying metal containers



#### **Crumb tray**

 Used to receive the residue of baked food. Please use it under the heating tube



#### **Remover holder**

Used to take baking trays and grills



#### **Rotisserie Fork**



#### **Rotisserie Kit**



**NOTE**

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

## Introduction to Control Panel

### Upper tube temperature adjustment knob

Adjust the upper tube temperature  
Please do not rotate to less than 70 °C during cooking. The adjustable temperature range is 70 °C -230 °C. The upper tube temperature can be adjusted under the upper and lower tube function.

### Function selection knob

#### Select cooking function

- ☐ Lower tube works
- ☐ Upper tube works
- ☐ Upper and lower tubes work simultaneously
- ☒ Upper and lower tubes with convection
- ☐ Rotisserie
- ☐ Fermentation

### Lower tube temperature adjustment knob

Adjust the lower tube temperature  
Please do not rotate to less than 70 °C during cooking. The adjustable temperature range is 70 °C -230 °C. The lower tube temperature can be adjusted under the upper and lower tube function.

 
### Work state indicator light

During the use after the task is started, the working state indicator light is always on; The task ends and the indicator light is off.

### Time adjustment knob

#### Adjust cooking time

If the timing is less than 10 minutes, turn the time knob to more than 10 minutes, then turn the time knob back to the desired time position.

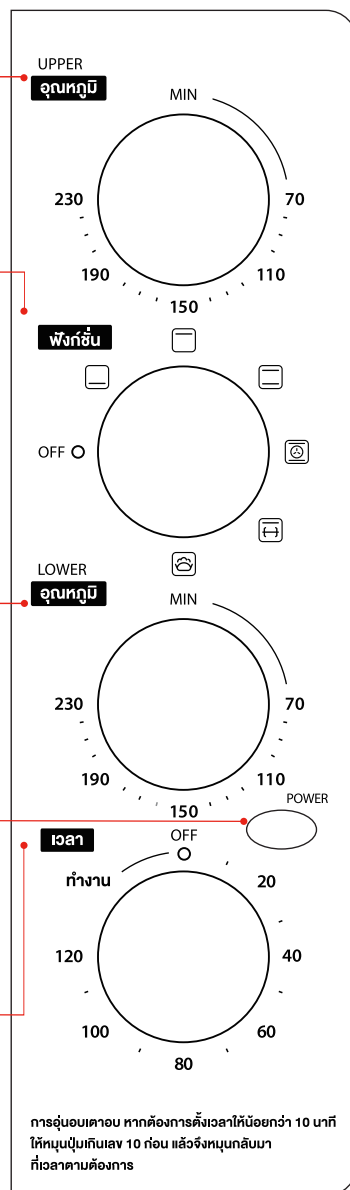

## Use Flow

### Notes

 
- The oven works on the principle of intermittent heating. During the working process, the heating tube turns red and dark, which is normal.
- The heating tube is coated with a layer of anti-corrosion protective coating. There may be odor or soot when used for the first time, which is normal.
- When the "Long Pass" gear is selected, the toaster oven is in a long-pass state and the power indicator light is lit; To end the work, manually turn the time knob back to the "OFF" gear. Otherwise the oven will keep working and may cause a fire if it works too long.
- Products in the enamel furnace chamber may have slight sound during the use, which is normal.

- 1 Plug in the power supply** 230-240V AC. Note that it shall be placed at least 15cm away from the surrounding walls or furniture
- 2 Preheating (optional)** Select preheating temperature and time according to the recipe. Preheating can make the food more delicious.
- 3 Add the ingredients** Place the food on the baking tray or grill and select the barbecue position according to the height of the food.
- 4 Select function** Lower tube/ upper tube/ upper and lower tubes/ upper and lower tubes with convection/rotisserie
- 5 Adjust temperature** Set according to food attributes and personal preferences
- 6 Set time** Set according to food attributes and personal preferences. The oven starts cooking
- 7 Cooking completed** Use a remover holder or insulated gloves to remove the baking tray or grill and food. Please pay attention to anti-scalding

### Precautions for Cleaning

#### Note

- Do not use sharp cleaning tools, bristle brushes or corrosive cleaning products to avoid damaging the baking tray and the grill.
- It is strictly forbidden to immerse the toaster oven in water or other liquids to prevent damage to the oven.
- Please do not wipe the heating tube at will. If the metal heating tube is not used for a long time, please wipe the surface of the heating tube with a small amount of cooking oil before.

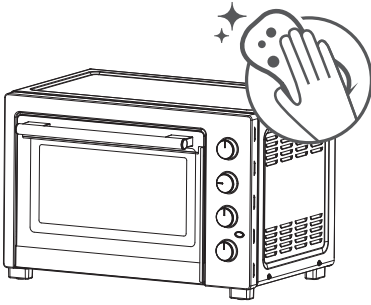

- 1 Before cleaning, remove the plug and wait for the oven to cool down before proceeding.
- 2 Clean all accessories, including the grill and the baking tray, with a mild detergent and wipe the inside of the oven with a soft damp cloth.

### Product Parameters

#### Note

- The order of product dimensions is length X depth X height, which are approximate numbers. Please refer to the real object for the specific dimensions.
- Boundary dimensions: The depth value includes the door handle (if there is a handle), the length of the rear plate bracket, and the height value includes the furnace foot.
- As our products are constantly improved, the physical parameters may be different from the labels. Please refer to the real object for the specific dimensions.

Model	TL-MC40EZF(GR)
Volume	40L
Boundary dimensions	535x424x358 mm
Net weight	11.75 kg
Rated voltage /frequency	230-240V~ 50Hz
Rated power	1650-1800W

## Notes

- If you find any changes to the content of this document, please contact us immediately if you have any questions. Telephone: 02-511-7777
- This product is for home use only. Any problem arising out of non-domestic use is a non-normative operation and should be borne by the individual
- If you find that the product needs service, please contact local special service outlets directly or our service hotline directly.
- If you write, please leave your contact number so that you can get a reply as soon as possible.
- To ensure your interests, please keep a valid warranty card for your warranty.

## **Maintenance Service Regulations**

### **Toshiba Toaster Oven will strictly follow the national policy of "three guarantees" for warranty service.**

- In the case of normal use of the product, the warranty is in accordance with the national "new three guarantees", and "one year warranty for the whole machine. For non-home use (such as: business, commercial, corporate collective) products, the whole machine enjoys free warranty for six months." This product adopts carry-in service; Other matters are implemented in accordance with the national "new three guarantees".
- The valid purchase invoice and warranty card must be presented during the repair. The warranty period is calculated from the date the invoice is issued. When the user loses the purchase invoice, the warranty period of the product is calculated according to the date of production.
- Parts repaired and replaced during the warranty period are owned by the company, and parts repaired and replaced outside the warranty period are owned by the user.
- Any of the following conditions is not covered by the warranty:
  - (1) Toaster oven accessories (baking tray, grill, grilling fork, grilling shaft, crumb tray, remover holder, remover bracket, etc.) and gifts.
  - (2) Damages caused by improper handling, use, maintenance and storage by the user.
  - (3) Damages caused by using voltages below 187 volts or above 240 volts.
  - (4) Damages caused by failure to use, repair or maintain the product according to the Operating Manual.
  - (5) It is not dismantled or repaired not by professional service personnel of the company.
  - (6) Damages caused by force majeure (such as lightning, fire, earthquake, flood and other natural disasters).
  - (7) The product is out of warranty.
  - (8) The model or number recorded on the invoice or warranty card does not match the physical product.
- In the above situation, our company will implement fee-based maintenance. The types of fees include maintenance fee and spare parts fee, and the specific cost standard is within the scope allowed by relevant departments.
- Additional services and additional non-original configuration gifts promised by agents, distributors and retailers are the responsibility of the original agents, distributors and retailers.

## **Post-sales Services**

For non-human faults of the product during the warranty period from the date of purchase, the company provides free maintenance service by invoice. If the product is damaged due to improper use, out of warranty period or poor maintenance, our company will still provide the service, but a certain maintenance fee will be charged. Please do not tear off the product barcode on the product so that the maintenance personnel can verify the record. For other matters, please refer to the maintenance service regulations.

**#DetailsMatter**