 


VACUUM CLEANER INSTRUCTION MANUAL

VC-CL550M(B)

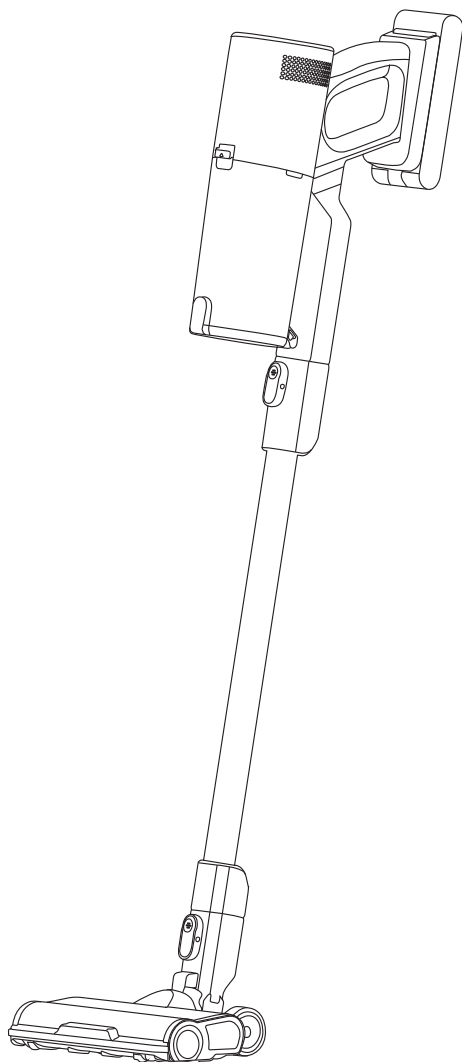

TOSHIBA

EN

CONTENTS

PRODUCT SAFETY

Safety instructions..... 3

INSTRUCTION FOR USE

Product overview 5

Installation instructions 6

Nozzle attachment 7

Cleaning 8

Operation instructions 9

Maintenance guide11

Troubleshooting15

 
Correct disposal of this product 16




Before using your new Toshiba product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

- This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions invalidates the given warranty.
- This appliance complies with international safety standards.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the adapter or the appliance itself is damaged, do not use it. Contact an authorised service centre.
- Prevent damage to the power cable by not squeezing, bending, or rubbing it on sharp edges.
- Do not touch the appliance or its plug when it is plugged if your hands are damp or wet.
- Do not pull the power cable when unplugging the appliance.
- Do not vacuum flammable materials and when vacuuming cigarette ash, make sure that it has cooled down.
- Do not vacuum water or other liquids.
- Protect the appliance from rain, humidity and heat sources.
- Never use the appliance in or near places where combustible or flammable environments are present.
- Unplug the appliance before cleaning and maintenance.
- Do not immerse the appliance in water for cleaning.
- Do not attempt to dismantle the appliance.
- Use the original parts or parts recommended by the manufacturer only.
- Do not attempt to vacuum particles such as cement, plaster and compressed paper in order to prevent the filter from being clogged and the motor being damaged.
- If the adapter is damaged, it must be replaced by the manufacturer or its agent or similarly qualified person in order to avoid hazard.
- Use the appliance only with the power adapter supplied.
- Do not use the appliance without filters fitted, otherwise it can get damaged.
- If you keep the packaging materials, store them out of the reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.
- The adapter must be removed from the socket-outlet and the battery pack must be removed from the appliance before cleaning or maintaining the appliance.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the vacuum cleaner.
- The battery must be removed from the appliance before it is scrapped.
- Please dispose of used batteries according to local laws and regulations.
- This appliance contains batteries that are only replaceable by skilled persons.
- The supply terminals are not to be short-circuited.

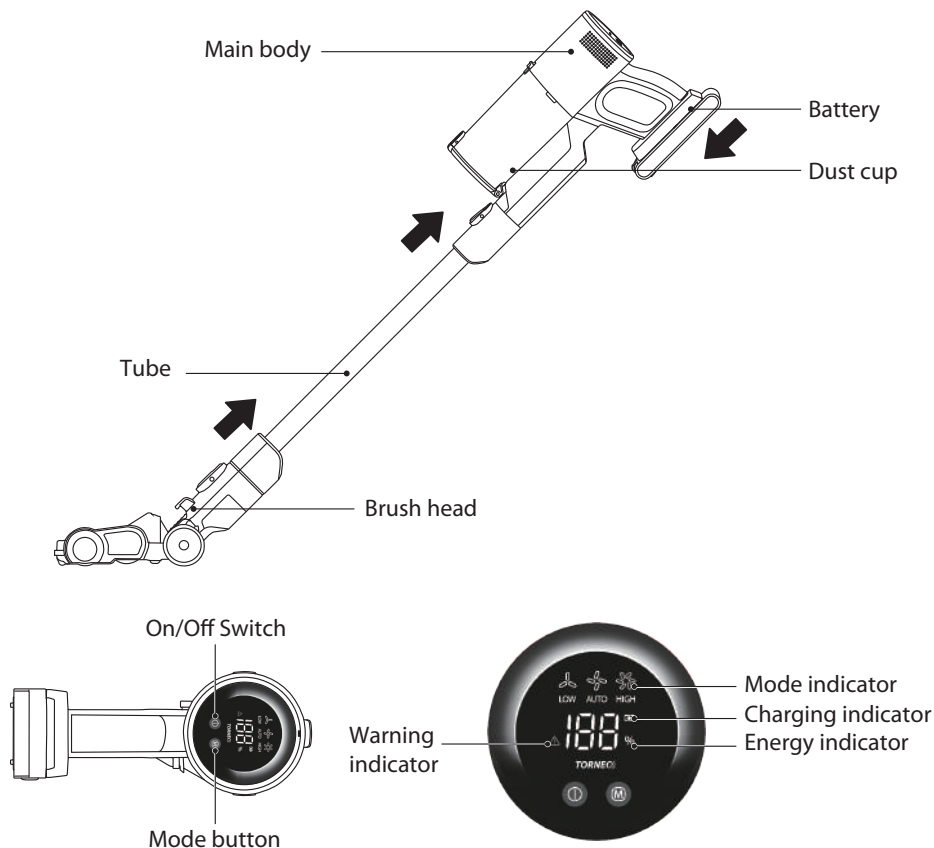

Accessories list

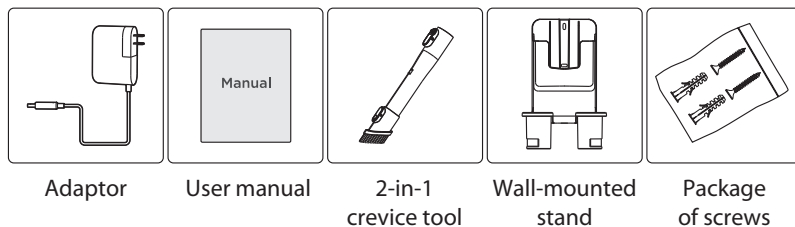


Tips:

When cleaning the high places, please assemble the accessories on tube.


Install and disassemble the battery :

 Insert the battery into the vacuum as the direction shown in the diagram.
When disassembly, press the battery release button, and then pull the the backward to remove it.

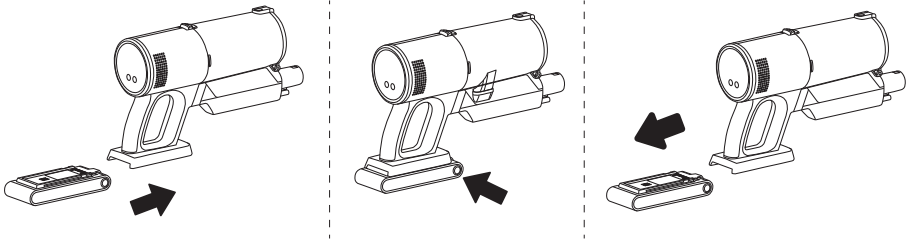


Install Tube:

 Attach the Tube and body along following direction until a clicking sound is heard.

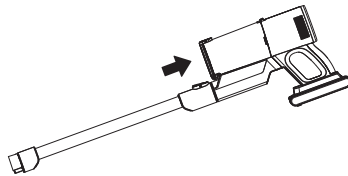

Install Brush head :

 Attach the brush head to the bottom of the tube until a clicking sound is heard.

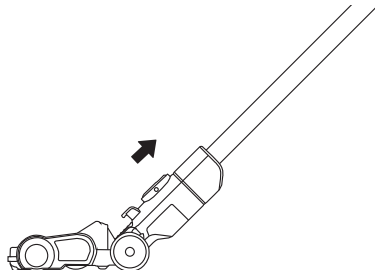


Nozzle attachment

HOW TO USE 2-IN-1 CREVICE TOOL


Tips:

It is recommended to use the 2-in-1 crevice tool instead of the floor brush to clean narrow gaps, wall corners, and similar areas.


1. Press button and take off the brush head.

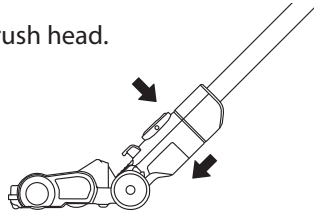


2. Attach the 2-in-1 crevice tool to the tube in the direction shown in the diagram. Until a clicking sound is heard.

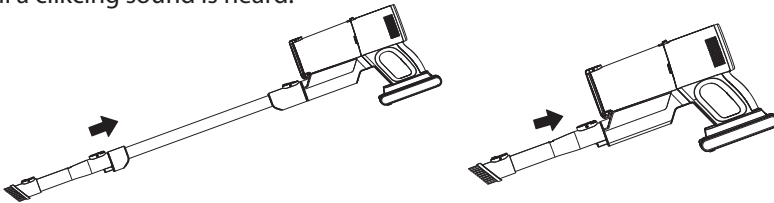**Note:**

 Press the button to up/down the side bristles to switch between the crevice tool and dusting brush.

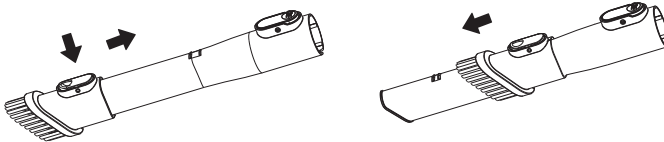


3. Press the button to remove the 2-in-1 crevice tool, then reattach the brush head to the vacuum.

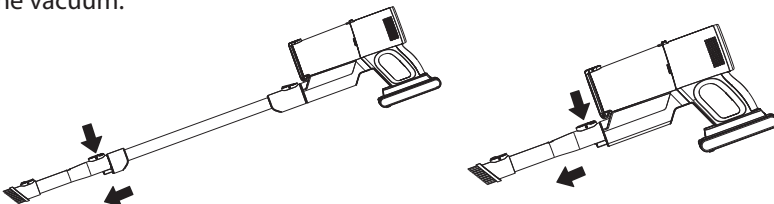

On/Off Switch and Mode button operation

 1. Press the "On/Off Switch" to start vacuum in Auto mode.
2. Press the "On/Off Switch" again to stop the vacuum.
3. Press the "Mode button" to cycle through HIGH / LOW / AUTO modes.

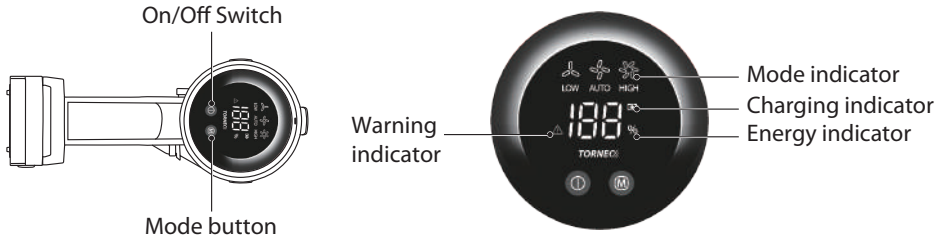

Dust indicator lights

 
When the vacuum is working in AUTO mode, the color of light ring is changed, which represents the suction power automatically changed following the amount of dust.



4. When the battery level is below 10%, the battery icon on the display will flash as a reminder. Please charge it immediately.



5. Once the vacuum is completely blocked, it will shut down for protection, and the screen will flash a red triangle symbol. Please remove the blockage from areas such as the brush, tube, or 2-in-1 crevice tool. After clearing the blockage, press the "On/Off" switch to restart the vacuum.

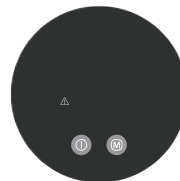


Operation instructions

INSTRUCTION FOR USE

INSTALLATION AND USE OF WALL MOUNT


1. The wall seat needs to be installed on a solid, flat wall to avoid tipping and damage to the vacuum.

 2. Install the wall mount assembly according to the step-by-step instructions shown in below diagram.

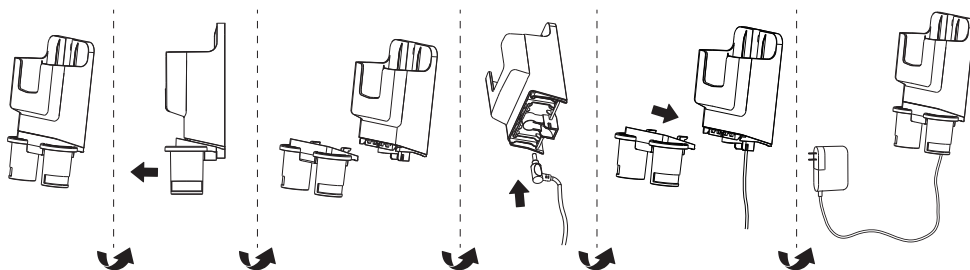


3. Use the included expansion screws to fix firmly, using other fixing methods may lead to falling.

 4. Connect the plug of the charging adapter to the power outlet.

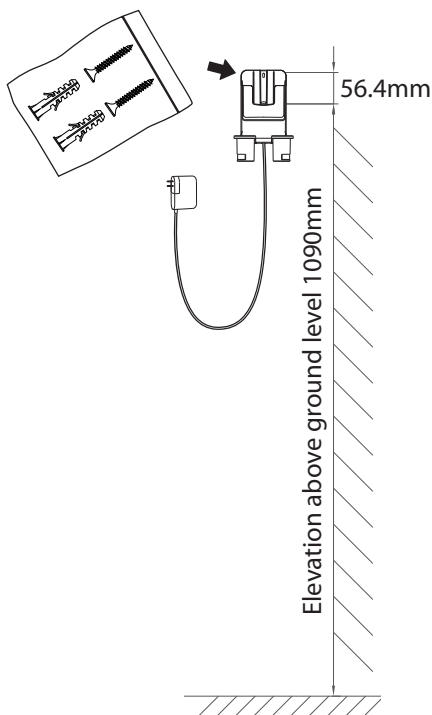

 5. Place the vacuum with battery be installed into the wall mount gently to avoid damaging it. The battery will start charging as soon as the vacuum be inserted into the wall mount.

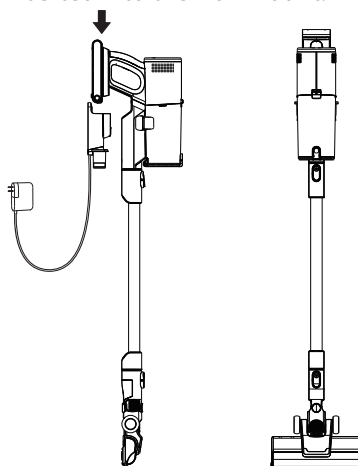

Operation instructions

INSTRUCTION FOR USE

BATTERY CHARGING

 
Tips:

The battery is not full state when leaving the factory, please ensure the battery is fully charged before initial use for better performance.


There are 3 battery charging methods can be chosen.

1. You can charge the battery by hanging the vacuum on the wall mount as shown in former page.

2. Place the vacuum on a horizontal surface. Connect the adapter to the charging port on the battery pack and plug the adapter into the socket.

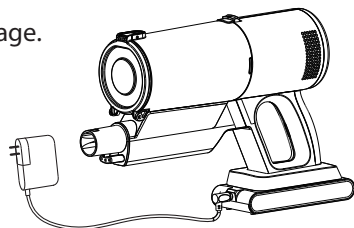

 3. The battery pack can be charged separately. When charging, the charge indicator on battery will flash continuously. After being fully charged for 1 minute, the charge indicator will turn off.

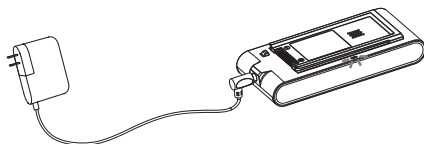

Note:

When starting charging, the orange light ring will be flashing. During the first 30 seconds. The energy percentage gradually increases as the charging progresses. Once the battery is fully charged, The green light ring will turn on 30 seconds.

Charging time: 3~5h

Running time:

High Mode: 15 mins

Auto Mode: 30 mins

Low Mode: 60 mins




Maintenance guide

DUST CUP DISASSEMBLY AND CLEAN


Tips:

To keep the suction power of vacuum, Empty the dust cup in regularly.


1. Hold the main body over a trash by vertical, press the locker button to open the bottom cover and release debris.

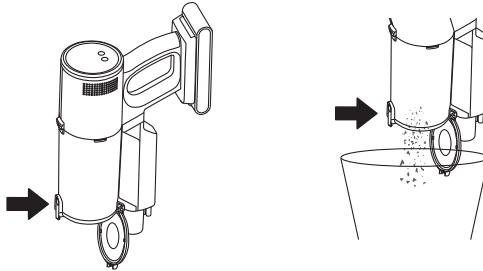

 2. Press the dust cup release button, Remove the dust cup from the main body.

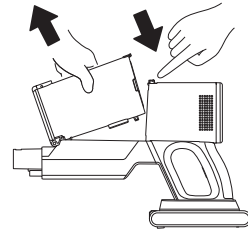

 3. Disassemble cyclone and clean, all parts are washable.

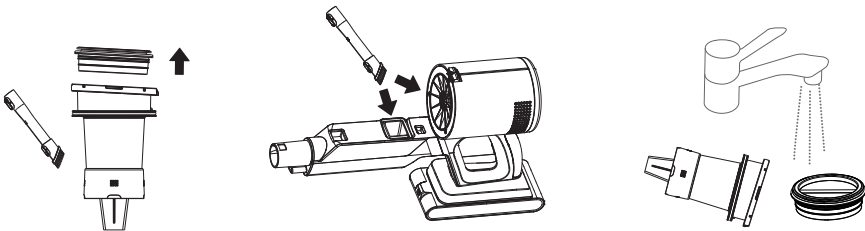

4. Please thoroughly dry all filter parts in a cool and ventilated place, and then reassemble to vacuum according to disassembly steps above.

Maintenance guide

 
 
INSTRUCTION FOR USE

CLEAN THE OUTLET AIR FILTER



Tips:

To keep the suction power of cleaner, please clean the outlet air filter in regular.

1. Rotate the outlet cover counterclockwise from lock to unlock.
2. Turn down to open the outlet cover.

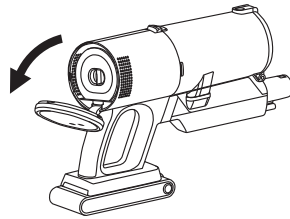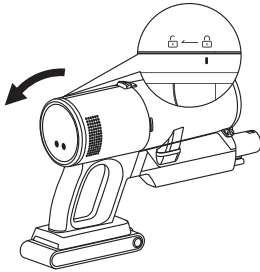

  3. Remove the outlet air filter assembly to clean it.
4. Install it back in reverse order.

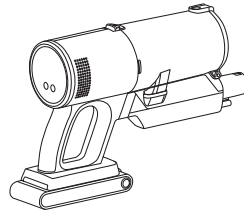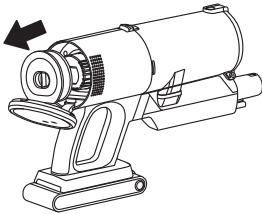

Maintenance guide

 
INSTRUCTION FOR USE

CLEAN AND MAINTAIN MOTORIZED BRUSH HEAD





Note:

To avoid affecting the normal operation of the brush head, clean the roller and wheels if they are entangled or dusty. Disconnect the power supply before disassembling or installing the main brush head.

1. Press release button to take off the brush head.

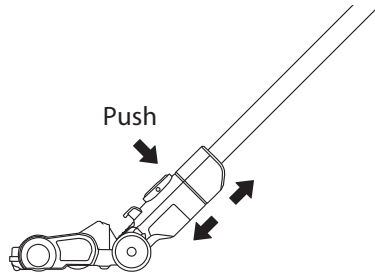

    2. Press and hold the unlock button with one hand while holding the brush head with the other. Rotate it 20° clockwise to unlock the latch, then gently pull out the brush head.

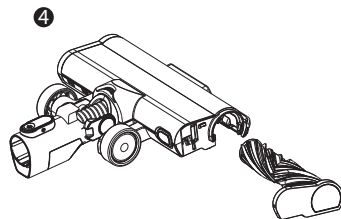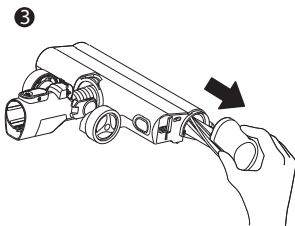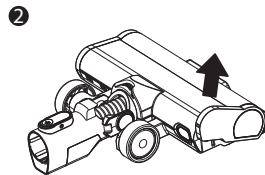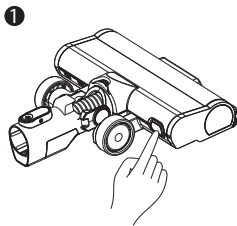

Maintenance guide


INSTRUCTION FOR USE

CLEAN AND MAINTAIN MOTORIZED BRUSH HEAD





Tips:

Don't wash whole brush assembly, otherwise water may flow into the internal electrical components and cause safety issues. Only the detachable roller can be cleaned under water.

3. Clean the brush head completely and let it air dry in a cool shaded place. Use scissors or a hook tool to remove tangled hair.

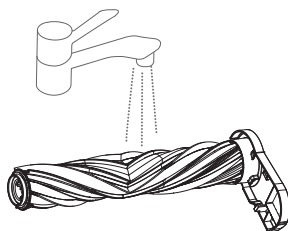

  4. Reinstall the brush head by referring to the image below.

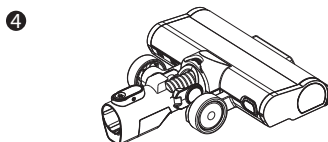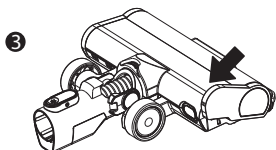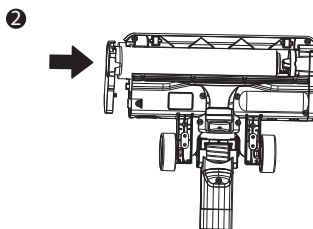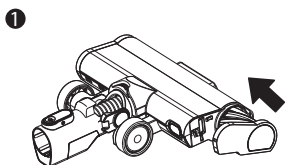

TROUBLESHOOTING

Check each of these options and fix the problem before using the appliance again. If you are unable to identify the cause of the problem, take the appliance to your nearest service centre. Never use the appliance if the suction power is low, as this could irreparably damage the motor.

Problem	Cause	Remedy
The vacuum doesn't work	Product has powered off or battery is low.	Please charge the product before use.
	Product suction port is blocked.	Cleaning product suction mouth.
Suction is too weak	Dust barrel & filter assembly is dusty or full.	Clean the dustbin and filter material.
	Rolling brush is wrapped around the hair and other objects.	Clean the roller brush.
	Tube has an obstruction.	Carefully clean and check for blockages.
Different motor operation sound	The tube is partially blocked.	Carefully clean and clear.
	Filter assembly is blocked.	Thoroughly clean the filters.
	Filter components are not reinstalled after cleaning.	Reinstall the filter assembly into the vacuum.
Product can not be charged	The charger is not properly connected.	Please check connections.
	Mains supply is not switched on.	Check the mains supply is switched on.
	The battery temperature is too high.	Charge it after the battery cools down.

Note:

If there are other unrepairable issues, please contact your local after-sales service center.

E1	Brush malfunction
E2	Motor malfunction
E3	Battery pack malfunction
E4	Hardware malfunction

Rated Power: 550W

Rate Voltage: 28.8V 

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



TOSHIBA