洗碗機

使用說明書

型號:

DWS-34ATW

在使用之前，請仔細閱讀，並妥善保管。



TOSHIBA

安全說明

請仔細閱讀並遵守所有說明。

- 此類說明用意在提供預防措施，防止用戶發生嚴重受傷或死亡以及財產損失的風險。

標示	
⚠ **警告**	警告表示嚴重受傷的可能性很高（*1）或可導致用戶死亡。
⚠ **注意**	注意表示傷害（*2）或財產損失（*3）的可能性很高。

(*1) 嚴重受傷 – 需要住院治療、長期治療的傷害或失明、冷熱皮膚燒傷、觸電、骨折或中毒。

(*2) 受傷 – 不需要住院或長期治療的傷害、皮膚燒傷或觸電。

(*3) 財產損失 – 房屋、傢俱、家畜或寵物的損失。

符號	
禁止	**⃠禁止！表示為禁止的行為。** 詳細說明將在圓圈內表示，或圍繞該符號以圓形或書面形式標示
重要	**●重要 說明強制性操作。** 詳細說明將在圓圈內表示，或圍繞該符號以圓形或書面形式標示
注意	**△注意 建議採取的預防措施** 詳細說明將在三角形內部標示，圍繞該符號以圓形或書面形式標示

⚠ 警告

遠離兒童	● 本電器不預期提供生理、感知、心智慧力、經驗或知識不足之使用者（包含兒童）使用，除非在對其負有安全責任的人員之監護或指導下安全使用 。 ● 孩童應受監護，以確保孩童不嘻玩電器。 ● 包裝材料可能對兒童有危險。
禁止改裝	● 請勿拆卸或改裝洗碗機。 以免導致火災、觸電或故障，並造成傷害。 如需維修，請聯繫東芝售後服務。
觸電	● 根據洗碗機銘牌上所示的功率大小選擇合適的電源。 否則將引起火災或觸電。使用不合適的電源可能導致電源插座過熱，引起火災。

 拔下電源插頭	● 在清潔或維護洗碗機之前，應先拔下電源插頭。
 禁止濕手碰觸	● 請勿用濕手插上或拔下電源插頭。 否則可能引起觸電或故障，造成受傷。
 觸電	● 請勿使用已經損壞的電源線、電源插頭或已經鬆動的電源插座。 否則可能引起觸電或故障，造成受傷或火災。
 請勿破壞電源線	● 切勿破壞電源線。 切勿破壞、切割電源線或過分用力彎曲、拉扯、扭擰或捆綁電源線。 此外，切勿猛拉電源線的金屬部分、線上上放置重物或夾住電源線。 否則可能導致電源線破損，發生火災或觸電。 如果電源線破損，必須由專業電工人員或維修人員進行更換。 以避免發生危險。
 禁止淋水	● 請勿將水直接淋到洗碗機主機身各個部位上。 否則可能引起觸電、短路等事故。
 遠離易燃物品	● 請勿將以下易燃物品放入洗碗機內。 不要將煤油、汽油、揮發油、稀釋劑、酒精等易燃物品及沾有這些物質的餐具放入洗碗機內。否則會引起爆炸或火災。
 擦掉灰塵	● 擦掉電源插頭上堆積的灰塵或污垢。 堆積的灰塵或污垢可能引起火災。
 禁止	● 機器運轉期間或停止運轉後的30分鐘內，請勿觸摸機體內部或蒸氣噴孔。 以免燙傷。
 安全取出時間	● 於停止運轉30分鐘後才可取出碗盤餐具或清潔濾網。 以免燙傷。
 禁止使用延長電源	● 請勿使用延長電源。 以免因熱力而引起火災。
 發現異樣時	● 如果發現有噴臂無法運轉、冒煙或有異味等，請立即拔下電源插頭，並停止使用洗碗機。 請聯繫東芝售後維修進行檢查或維修。 否則可能有觸電、漏電而引起火災或短路的危險。

插入插頭	● 將電源插頭牢固地插入插座，並讓電源線方向向下。 如果電源線向上或插頭未完全插入，可能會因漏電或發熱而導致火災。
禁止放入易燃物品	● 請勿將易燃物品（例如毛巾和布料）放入洗碗機內。 以免引起火災。
避開熱源	● 請與瓦斯爐等熱源相隔至少15公分。 以免發生火災和變形。
禁止機上放置物品	● 請勿在主機上放置任何物品。 請勿在主機頂部放置重物或發熱物品，例如裝載液體之容器或熱水、加熱裝置、玻璃、 電器產品，餐具等。 打開或關閉機門時，機頂物品可能會墜落造成傷害。另外，溢出的水可能會使絕緣體變質並導致漏電和火災。
遠離易燃物品	● 請勿讓洗碗機靠近火源。 ● 請勿將點燃的蠟燭或香煙放在洗碗機上，否則會引起火災。
小心安裝	● 確保洗碗機安置在排水良好的位置。 使用排水不良的洗碗機可能導致水回流到機器中，引起觸電或火災。
正確接地	● 洗碗機必須接地。 接地時電流電阻最小，這樣可以在機器發生故障時減少電擊的危險。 洗碗機配備的電線，帶有接地線以及接地插頭。 接地線連接錯誤會導致電擊危險。 如果發生E3故障，請從插座上拔下電源插頭， 請讓專業電工人員或維修人員檢查。
禁止擅自拆卸修理	● 請勿擅自更改插頭。 當插頭與插座不匹配時，應由專業電工人員安裝合適的電源插座。

⚠ 注意

禁止強拉	● 從插座上拔掉電源插頭時，切勿強拉電源線。 應握住電源插頭拔出。否則可能引起觸電或故障，造成傷害。
禁止使用	● 禁止使用肥皂、洗衣粉或其它洗手液。只能使用自動洗碗機適用的洗碗粉。 否則可能引起機器故障。
禁止洗滌	● 禁止洗滌塑膠器具。 只可清洗標註有可用於洗碗機或其它類似標示的塑膠容器。對於沒有標註的塑膠器具，請查閱器具生產商的建議。
使用環境	● 僅供室內使用。 該家電為家庭使用，例如: - 商店、辦公室和其它工作環境中員工廚房內和使用; - 農舍; - 在飯店、汽車飯店和其它住宅類型的環境中提供客戶使用; - 旅館類型的環境。
禁止攀爬	● 請勿在洗碗機的碗盤架或閘上坐或站立。 否則可能存在因變形、破損引起受傷的危險。
拔除電源插頭	● 長期不使用洗碗機時，請將電源插頭從插座上拔除及關上機門。 否則會因絕緣材料的劣化而引起觸電或短路。
注意開門	● 機門不應處於敞開狀態，以防絆倒。 ● 當洗碗機啟用時，請勿開啟機門。熱水可能會造成燙傷。
注意安全	● 當放入餐具進行洗滌時: 1. 小心安放尖銳器皿以防劃破機門密封條。 2. 警告：刀具及其它尖銳器具必須放置在籃子裡，且尖端朝下或水平置放。
注意清潔	● 請用溫和清潔液浸濕軟布進行擦拭，然後用乾布擦拭。
注意	● 洗滌程序完畢之後，檢查洗碗粉是否清空。 ● 請先確認控制台沒有顯示出現問題或異常才使用洗碗機。 ● 安裝機器時，請使用新的接水軟管，不要沿用舊的接水軟管。 ● 最大進水壓力為1MPa。 最小進水壓力為0.04MPa。

裝載容量	● 洗滌容量：34件（湯盤X1 + 美耐皿碗 X1 + 美耐皿甜點盤 X1 + 甜點盤 X5 + 甜點碗 X2 + 馬克杯 X2 + 玻璃杯 X3 + 茶杯 X1 +茶托 X1 + 刀 X3 + 湯匙X3 + 茶匙 X3 + 甜點勺 X3 + 叉 X3 +分菜叉 X1 + 長柄勺 X1）
禁止暴力對待機器	● 不要猛力地開門和推動主機，勿將身體倚靠在主機或支撐在門上。 機體跌落可能會造成傷害。
小心夾手	● 請小心開關機門，不要夾到手指。
禁止觸碰排水口	● 請勿觸碰排水口。 高溫蒸氣或熱空氣可能會引起灼傷。
小心燙手	● 使用洗碗機時或使用後，請注意熱水排出。 可能會流出高溫熱水，有燙傷的危險。
禁止敲擊拍打	● 禁止敲擊或拍打洗碗機。 觸電、漏電或短路可能引起火災。
正確使用過濾器	● 正確設置過濾器。 殘渣堵塞會造成故障。
禁止放置過小餐具	● 請勿放入輕和細小的器皿，如塑膠容器。 如果細小器具被水力沖落機器底部，可能會卡住並導致故障。
禁止	● 請勿用於洗餐具以外的用途。 可能會導致故障。
正確擺放水平平面	● 把機體放置於堅固的水平表面。 否則可能無法正常操作或會導致漏水。
指令	● 務必固定排水管與機體的連接處。 否則可能會導致漏水。

處理

- 請妥善處理洗碗機包裝。
- 所有包裝為可回收利用材料。
- 塑膠部分標有國際標準的縮寫。



PE	聚乙烯，比如成片包裝材料
PS	聚苯乙烯，比如填充材料
POM	聚甲醛或聚氧乙烯，比如塑膠夾
ABS	聚合物，比如控制台
PP	聚丙烯，比如內壁

⚠警告

- 包裝物料可能會對兒童造成危險!
- 包裝和機器的棄置需要交給回收處理。
- 機器不使用時，請切斷電源，並關閉機門。
- 包裝紙箱是用再生紙製作，應回收後再利用。
- 產生的廢物如未能妥善處理，會危及環境及人類健康，應進行合法處理以防潛在威脅。



⚠警告

- 更多有關產品回收的詳細資訊，請聯繫當地政府相關部門或家庭廢物處理部門。
- 處理：請勿將本產品未經回收直接以垃圾丟棄，對於不同回收廢棄物需要分別進行特殊處理。

此警告標示用於預防對您及其他人造成的傷害。
請嚴格遵守。
閱讀完畢之後，請妥善存放以便不時之需。

目錄

使用洗碗機前請仔細閱讀本使用手冊，這樣可有助於認識產品的使用及保養。

01 **快速使用指南** 09

02 **認識洗碗機**
- 洗碗機特點 11
- 配件 12
- 控制面板 13

03 **使用洗碗機**
- 安裝洗碗機碗籃 15
- 將洗碗粉倒入添加處 19

04 **設置程序**
- 洗滌程序表 20
- 啟動機器 21
- 更改程序表 21
- 加入餐具 21
- 在洗滌程序結束時 22
- 強制排水 22

05 **清洗與保養**
- 過濾器 23
- 清洗過濾器 24
- 洗碗機保養 25

06 **安裝**
- 安裝前的準備 26
- 擺放位置 26
- 連接電源 26
- 連接排水管 27

07 **故障排除**
- 聯絡顧客服務中心前 28
- 錯誤代碼 30
- 產品規格 31


08 如何連接到Toshiba Tsmartlife APP 32
- Tsmartlife APP 功能指引 35
- Toshiba Tsmartlife APP 故障排除 37

快速使用指南

詳細操作方法，請仔細閱讀使用手冊相關內容。

連接電源


額定電壓：110V AV 60Hz
電源插座規格：10A 110V AC
連接排水管：將排水管的末端放入水槽或水桶中。

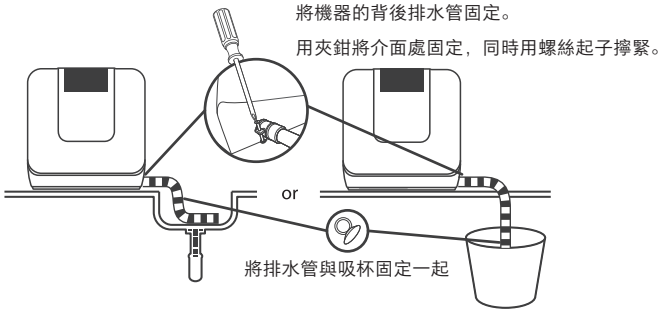

將水加入洗碗機水箱

注意：在加水前，請先按下電源按鈕，啟動洗碗機。

加水的方法有兩種：
❶進行排水管連接安裝，將進水管連接到水龍頭上；
❷打開蓋子，手動加水至洗碗機水箱。

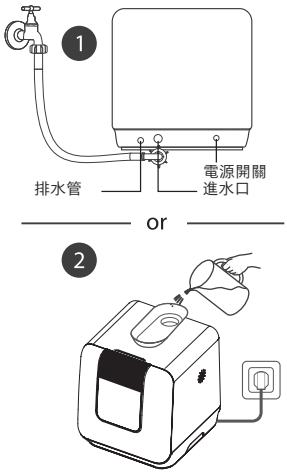


有兩種方法可以確保水箱裝滿水

1.開始前：
水箱裝滿水後，機器會發出3秒的嗶嗶聲。

2.開始後：
水量不足時，指示燈亮起；
水量足夠時，指示燈熄滅並發出3秒嗶嗶的提示聲。

去除較大的食物殘渣


在碗碟放入前，請去除較大的食物殘渣。

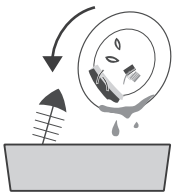



打開機門並放入碗碟的洗碗粉

放置時按尺寸從兩側向中間擺放。最好將餐具傾斜擺放，以達到較理想的清潔效果。


餐具的擺放位置不當會導致清洗中斷及清潔效果不理想。

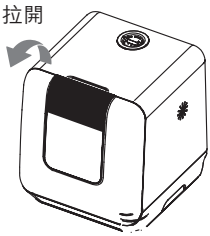

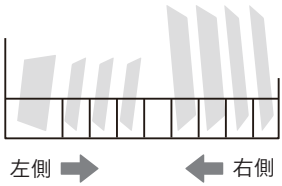

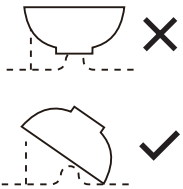



餐具擺放方向不當也會影響清潔效果。
盡量將較髒的一面朝向噴臂。

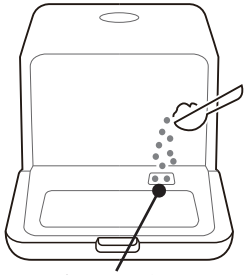

洗碗粉放入位置

關閉機門，啟動洗碗機，選擇程序，再按 ⏯ 按鈕

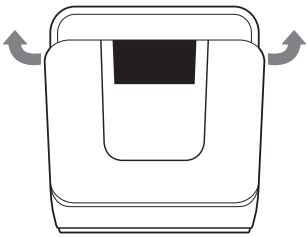


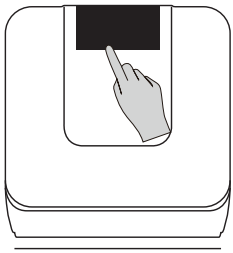

注意：
- 機器在低溫環境中運轉時，門外底部有少量水滴，為正常現象，用毛巾擦拭即可。
- 機器在低溫環境中運轉時，透視窗會有一層薄霧，為正常現象，不影響使用。

認識洗碗機

洗碗機特點

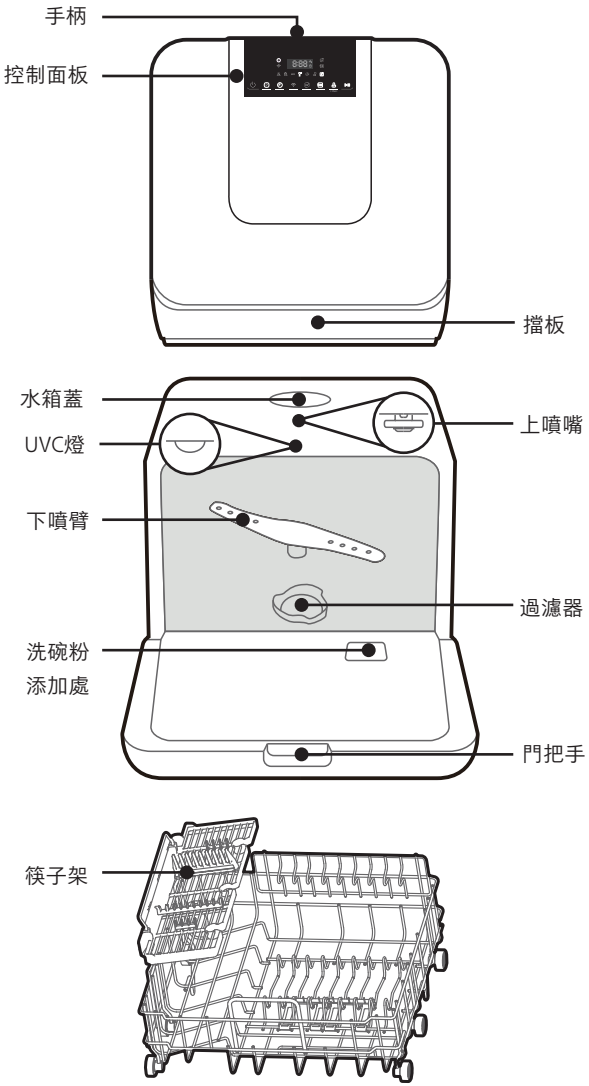


注意：

- 當機器處於啟動或活動狀態時，如果開門，閃燈會自動打開。若門打開或關閉超過5分鐘，閃燈將自動關閉。
- 當機器處於工作狀態時，如果操作面板上的按鈕，閃燈會自動打開，若5分鐘內無操作，閃燈會自動關閉。

配件

接水盤、入水壺、籃架、水箱蓋、排水管、進水管、過濾裝置、上噴嘴、下噴臂。

控制面板

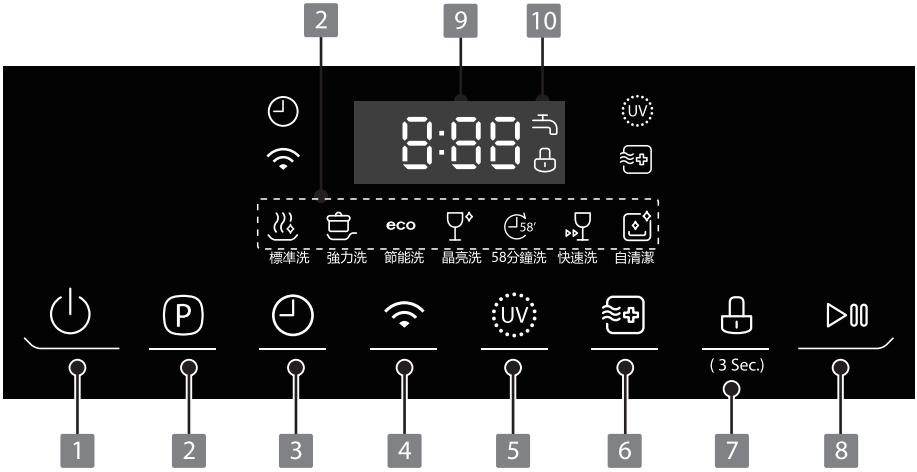

1	電源	開關/電源
2	程序	
	HYGIENE **標準洗**	用於通常污染的餐具，並去除盤子和玻璃器具上的細菌。建議日常清潔使用。
	INTENSIVE **強力洗**	用於帶有油污和特別髒污的烹飪用具和餐具。
	eco **節能洗**	用於一般髒污程度的餐具及用具（例如鍋、碟子、玻璃杯）。
	GLASS **晶亮洗**	用於輕微髒污的餐具及玻璃器具。
	58 MIN **58分鐘洗**	用於需要快速清洗的普通髒污餐具及器具。
	RAPID **快速洗**	用於輕微髒污的餐具，清洗時間相對較短。
	SELF CLEAN **自清潔**	此程序可以有效地自行清洗洗碗機。

3	預約開始	按下按鈕增加預約開始時間。以1小時為單位，最多預約24小時。
4	Connect 無線網路	按下按鈕3秒鐘，會發出提示聲和圖示開始慢慢閃爍，正處於網路與應用程式鏈接的狀態。 網路連接成功後，指示器會亮起。
5	UV	按下按鈕選擇UV功能，並同時選擇”標準洗、強力洗、節能洗、晶亮洗、58分鐘洗”
6	加強烘乾	熱風乾燥功能會間歇向內槽輸送熱風，使餐具吹乾。 熱風乾燥功能不能用於快洗和自清潔程序。
7	兒童保護鎖	按下按鈕3秒鐘，可啟動兒童保護鎖功能。 此功能可鎖定控制面板上除電源鍵外的按鈕。 目的使兒童不會因按下其他功能按鈕而誤操作洗碗機。
8	啟動/暫停	用於啟動或暫停洗碗機的洗程。
9	顯示	 顯示剩餘時間、預約時間和錯誤代碼等。
10	警告指示燈	 水量不足指示燈。

使用洗碗機

安裝洗碗機碗籃

建議

- 購買適用洗碗機的餐具。
- 使用洗碗機專用的洗碗粉 。
- 對於特殊器具，請盡量選擇溫度較低的洗滌程序。
- 程序結束後，請勿立即將玻璃餐具取出，以免損壞。

合理使用洗碗機

不適合用於:

- 木製，象牙，瓷製或珍珠母製柄刀具
- 非耐熱塑料製品
- 膠水黏合部分非耐熱的陳舊刀具
- 帶黏性的刀具或餐具
- 錫或銅製器具
- 水晶玻璃
- 生鏽鋼製品
- 木製器具
- 合成纖維製品

限制使用:

- 經過幾次清洗，部分玻璃器具會變暗啞
- 銀或鋁製品在清洗過程中容易變色
- 光滑的餐具可能會因經常清洗而褪色

碗籃安裝前後的注意事項

（為使洗碗機發揮最佳使用性能，請遵循以下說明。）
請先清除較大的食物殘渣。軟化鍋上殘留的燒焦食物殘渣。無須先用水沖洗餐具。
按照以下方式將餐具放於洗碗機內:

- 杯子、玻璃杯、鍋等器具朝下擺放。
- 對於弧形或凹凸器具，應斜放以便於水流出。
- 所有餐具均須妥善放置，切勿翻倒。
- 所有餐具的擺放應確保噴臂在洗滌時可以自由旋轉。

⚠ 注意


細小物件容易從籃子中掉下，不應放進洗碗機。


- 擺放中空器具（如茶杯，玻璃杯，鍋子等）時開口應面朝下，以免水容易留在容器或凹槽內。
- 餐具和刀不能放在其他器具內，也不能重疊。
- 為防止破損，請勿將玻璃貼緊擺放。
- 對於較長刀具，直立擺放是非常危險的。

- 長形或尖銳的刀具（如切肉刀）應水平擺放在籃內。
- 請勿超負荷地使用您的洗碗機，這樣可獲得更好的使用效果。

使用碗籃


小型的餐具會從籃中掉出來，並阻礙噴臂的旋轉。
請將餐具架向內翻轉以固定小型餐具。

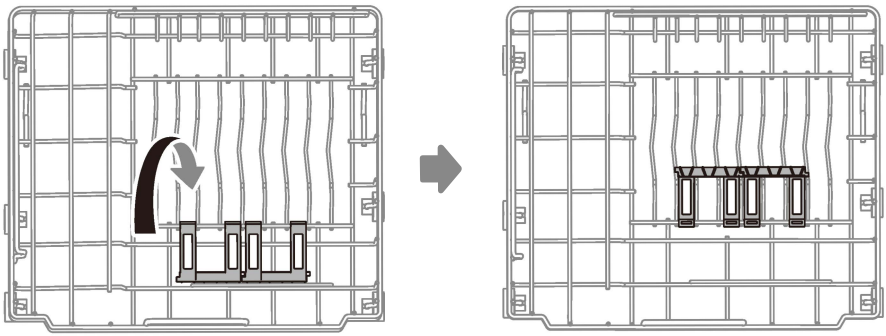

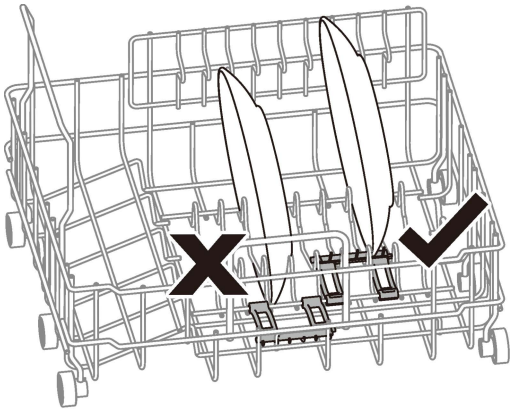


最適的碗碟擺放方式

妥善放置碗碟和餐具，以免被水流沖走。
為了讓噴射水柱能夠清潔表面，需將髒污面放在中間的位置。

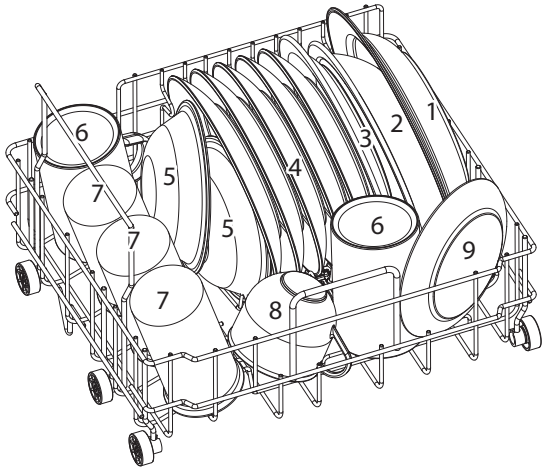

號碼	餐具
1	碗盤
2	美耐皿碗
3	美耐皿甜點盤
4	甜點盤
5	甜點碗
6	馬克杯
7	玻璃杯
8	茶杯
9	茶托

筷子及餐具的裝載方式

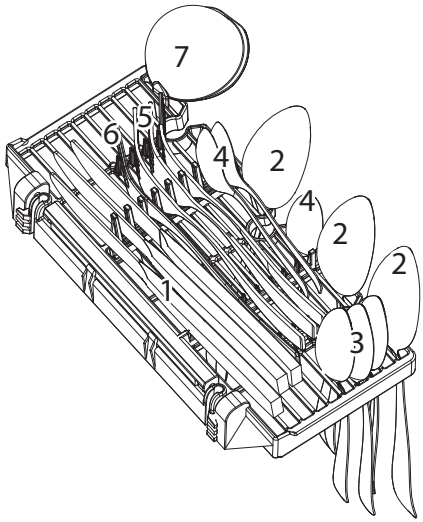

號碼	餐具
1	刀
2	湯匙
3	茶匙
4	甜點匙
5	叉子
6	分菜叉
7	湯勺

為了人身安全和最佳的清潔，請確保按照以下擺放建議將餐具放入碗籃:

- 物件並不重疊在一起
- 放置餐具時將手把向下
- 放置刀和其他有潛在危險的器具時，應將手把向上擺放。

將洗碗粉倒入添加處

⚠ 注意

- 只能採用洗碗機專用的洗碗粉。
  嚴禁採用其它洗碗粉，以免對機器造成損害。
- 洗碗粉具有腐蝕性！將洗碗粉放在兒童觸碰不到的地方。



濃縮洗碗粉

根據不同的化學成分，可分為兩種基本類型：

- 傳統的鹼性洗碗粉，帶有腐蝕成分。
- 弱鹼性濃縮洗碗粉，帶有天然酶。

正常洗滌程序配合濃縮洗碗粉可以減少污染及減低餐具的損壞。


清潔片劑

不同品牌的清潔片劑溶解速度不同。因此，採用短時間清洗程序時，會存在某些清潔片劑無法完全溶解，不能完全發揮效用的情況。故此使用清潔片劑時需要採用長時間清洗程序，確保完全去除清潔片劑。

洗碗粉

在每一次洗滌程序前，按照洗滌程序表(第20頁)所提供的說明重新加入洗碗粉。洗碗機使用的洗碗粉量需少於傳統洗碗機。一般在正常清洗及一般髒污的餐具僅需一勺洗碗粉。較髒污的餐具需要加入更多的洗碗粉。請勿事先加入洗碗粉，建議在啟動洗碗機前加入洗碗粉，否則會受潮不易溶解。

添加洗碗粉

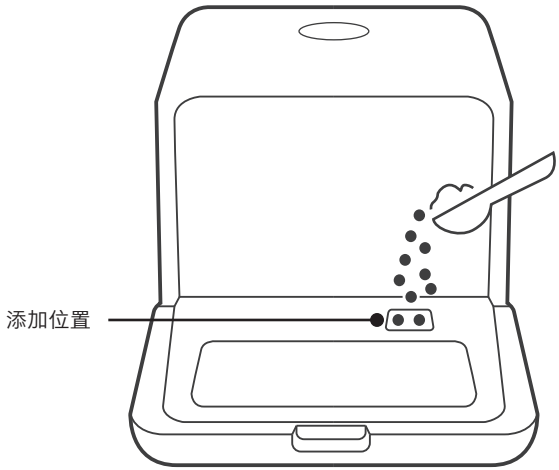

設置程序

洗滌程序表

下表列出了食品髒污程度對應的最佳清洗程序，以及需要的洗碗粉劑量。同時列出了相關程序資訊。
僅顯示除ECO程序外的消耗值和程序持續時間。

程序	最高水溫	洗碗粉（克）	時間（分鐘）	能源（千瓦時）	水（公升）
標準洗70℃	72℃	11	118	0.560	6.0
強力洗	70℃	11	180	0.550	6.0
eco 節能洗（*EN60436）	70℃	11	175	0.460	6.0
晶亮洗	65℃	11	90	0.390	6.0
58′ 58分鐘	55℃	11	58	0.400	6.0
快速洗	45℃	11	30	0.300	6.0
自清潔	70℃	11	65	0.420	6.0

eco (*EN60436)：eco程式適用於清潔一般髒污程度的餐具，從該用途的綜合能量消耗和耗水量來看，能效最高，其還用於評估是否符合歐盟生態設計法規。

⚠ 注意

上述程序數據僅供參考。測試條件如下：

- 洗滌容量：34件（湯盤X1 + 美耐皿碗 X1 +美耐皿甜點盤 X1 + 甜點盤 X5 + 甜點碗X2 + 馬克杯 X2 + 玻璃杯 X3 + 茶杯 X1 + 茶托 X1 + 刀 X3 +湯匙X3 + 茶匙 X3 + 甜點匙 X3 + 叉子 X3 + 分菜叉 X1 + 湯勺 X1）
- 關機模式的功耗和待機模式的功耗均為0.49瓦。

啟動機器

啟動洗滌程序:
將插頭插入插座。電源為 110V AC 60 Hz，插座規格為 10A 125VAC。選擇洗滌程序前，按下電源關 / 開按鈕，開啓洗碗機。選擇指定洗程，相應指示燈將亮起。然後按 " 啟動 / 暫停 " 按鈕，洗碗機啟動。

⚠ 注意

當您在洗滌過程中按 " 啟動 / 暫停 " 按鈕啟動時，出現洗碗機每 60 秒鐘發出嘟嘟聲，請再次按下 " 啟動 / 暫停 " 按鈕重新啟動。

更改程序表

如果洗碗機才剛啟動運作 (約 5 分鐘內)，您可以進行修改洗滌程序。
若以清洗一段時間，洗滌劑可能已經釋放，並且已經排出洗滌水，在這種情況下，建議必須重新啟動循環。

當門關閉時，按 " 啟動 / 暫停 " 按鈕暫停機器。
按程序按鈕超過三秒鐘機器將處於待機狀態，然後您可以將程序變更爲所需的循環設置 (參見 " 開啟機器 " 一節)。

「時間顯示」說明;
a) 顯示版顯示 "-:--" ----------> 待機;
b) 顯示版顯示 "H:MM" 且不閃爍 ----------> 暫停;
c) 顯示版顯示 "H:MM"，只有 ":" 在閃爍 ----------> 運行;
d) 顯示版顯示 "END" ----------> 結束。

⚠ 注意

如果您在清洗時打開門，機器會暫停。當您按下 " 啟動 / 暫停 " 按鈕時，機器將在 10 秒鐘後繼續工作。

您的型號具有自動歸復功能，洗碗機重新通電後會從斷電前所處洗滌階段重新運行。

忘記放餐具?

在洗碗機程序開始運行之前，可以隨時加入遺漏的餐具。如清洗過程中，需加入遺漏的餐具，請按照以下說明進行操作：

1. 按下啟動 / 暫停按鈕，暫停洗滌程序。
2. 等待 5 秒，然後打開機門。
3. 放入遺漏的餐具。
4. 關上機門。
5. 按啟動 / 暫停按鈕，待 10 秒後，洗碗機將再次啟動。



在洗滌程序結束時

當洗滌程序結束時，洗碗機顯示 “End”，蜂鳴器鳴響 8 秒。如果想立即停止運作，按開 / 關按鈕，等待幾分鐘後才打開門及清空洗碗機，以免燙傷。
請注意此時餐具仍然很熱。

- 關閉洗碗機

按開 / 關按鈕關閉洗碗機。

- 小心打開機門

燙熱的餐具較易破碎，應該讓餐具冷卻約 15 分鐘，再從洗碗機中取出。

- 清空洗碗機

洗碗機內部仍然有水濕屬正常的現象。

⚠ 警告

洗滌進行時打開機門是十分危險的，可能會因熱水造成燙傷。

強制排水

在待機模式下，可以同時按下 “ 預約開始 ”+“WIFI” 按鈕 3 秒，將水排出水箱。


清洗與保養

過濾裝置

⚠ 警告

- 請勿使用沒有裝置過濾器的洗碗機!
- 確保 3 個過濾器已正確裝配。
  否則洗碗機的清洗效果可能受到影響，餐具和器具也可能會受損。

過濾器可有效地從洗滌水中去除食物殘渣，其可在洗滌程序期間再循環。
為獲得最佳性能和效果，必須定期清潔過濾器組件。
因此，在每個洗滌程序之後，將過濾器和杯子放在水流下沖洗，去除過濾器中較大的食物殘渣。定時保持清潔能使過濾器更長久使用。若要卸下過濾器，請向上拉動杯柄。

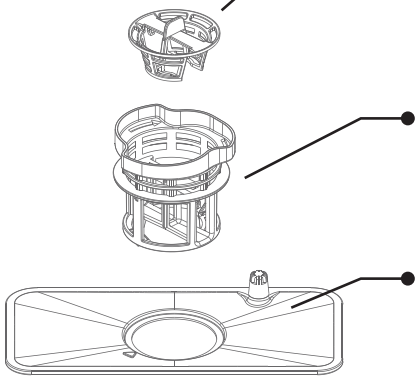

粗濾器

過濾較大的食物殘渣，例如可能堵塞排水管的骨頭或玻璃。要清除過濾器攔截的食物殘渣，請輕輕擠壓過濾器頂部的塞子，然後提起即可。


精濾器

精濾器將污垢和食物殘渣保留在儲存區，防止其在洗滌程序期間殘存在盤上。


主濾器

主過濾器適用於截取食物殘渣和顆粒，這些顆粒通過下噴臂特殊噴嘴所噴出水流，沖碎殘渣後被排出。未沖碎的殘渣會流向粗濾器。


步驟 1：逆時針旋轉過濾器組件（A、B 和 C）並整個提起。

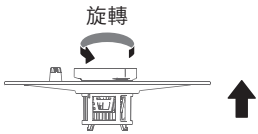

步驟 2：從 A 中提起 B 和 C。

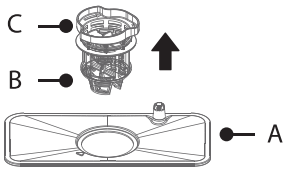

步驟 3：將 B 和 C 分開。

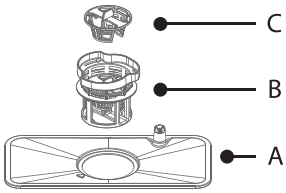

⚠ 注意

整個過濾裝置應每週清潔一次。從步驟 1 到步驟 3 進行操作，過濾裝置將被拆下。反之，過濾裝置將被安裝。

- 每次使用洗碗機後，請檢查過濾器是否堵塞。
- 旋出粗濾器，可卸下過濾裝置。取出所有食物殘留物，並在水流下清潔過濾器。

清洗過濾器

請使用清潔劑清潔粗濾器和精濾器。如本頁所示，重新組裝過濾器部件，並將整個組件重新裝入洗碗機中，定位在其底座並向下按壓。

⚠ 注意

清潔過濾器時，請勿敲打。否則，過濾器可能會扭曲變形，影響洗碗機的清洗效果。

洗碗機保養

控制面板可以用微濕的布來擦拭。清潔後，請確保將其徹底乾燥。

切勿在洗碗機的任何位置使用鋒利的物品、磨砂海棉或粗糙的清潔劑清潔。

⚠ 警告

- 請勿使用噴霧清潔劑清洗門板，否則可能會損傷門鎖和電器零件。
- 請勿使用研磨劑或粗糙的紙巾，否則可能會在不鏽鋼表面會留下劃痕或斑點。


水管連接

將冷水軟管連接到水龍頭 3/4(英寸) 螺紋接頭上，確認已擰緊。若連接新的軟管或長時間未使用的軟管，請先開啟水龍頭，讓水先留到乾淨為止，以確保水是乾淨的。此目的是為避免進水口堵塞及設備損壞。

此時請先不要將進水管接於機器上。

清洗進水管的過濾裝置

在進水管端與水龍頭之間有一個過濾系統，可以去除水中的雜質。隨著時間的推移，越來越多的雜質可能堵塞管道。建議每月檢查過濾器裝置的狀態，用鉗子將進水管上的過濾器拆下，用自來水清洗雜質。

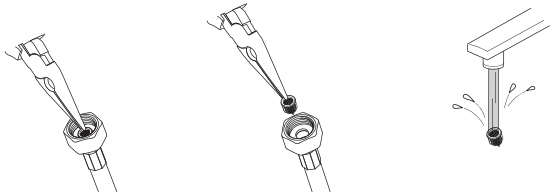

安裝

⚠ 警告



觸電危險
請確保電源切斷後再安裝洗碗機，否則可能導致觸電或死亡。
使用前，請確保正確接地。

安裝前的準備

洗碗機須安裝在現有水龍頭，排水口及插座附近。

應選擇靠近水槽的一側，方便洗碗機排水管的連接。

放置位置

將機器放置在適當的位置上。背部應靠在其後面的牆壁上，側面沿著相鄰的櫥櫃或牆壁。洗碗機配有進水管和排水軟管，可以將進水管和排水軟管定位在左側或右側，以方便正確安裝。此外，除了向水箱中加水外，還可使用進水管。若有疑問可與東芝售後服務中心聯繫。

連接電源

⚠ 警告

觸電

- 請勿在本機上使用延長線或接續插頭。
- 在任何情況下，請勿切斷或拆除電源線的接地連接。


電力要求

請查看額定值規格以了解額定電壓，並將洗碗機連接到合適的電源上。使用所需的 10 安培保險絲，推薦延時保險絲或斷路器，並採用僅供本機使用的獨立電路。

連接電器

請確保電源的電壓和頻率與銘牌上的電壓和頻率相對應。只能將插頭插入正確接地的電源插座。如果機器必須連接的電源插座不適合本機插頭，請更換插座，切勿使用！可能會導致電源插座或電源供應器過熱或燃燒。

連接排水管

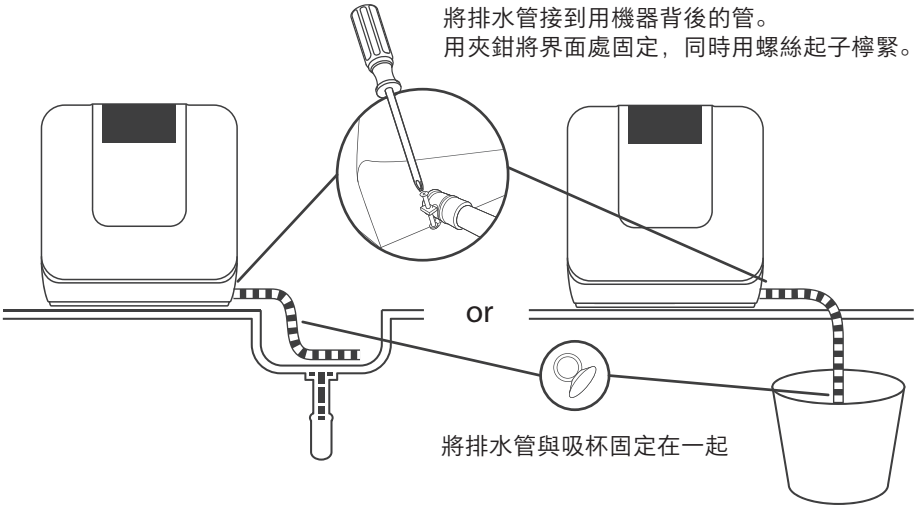

排水管連接：將排水管末端接入水槽或水桶

從軟管中排出多餘的水

機器比水槽低造成無法順利排水，若要排除多餘水分，建議先找可盛水容器並低於機器高度，以利排水。

出水口

連接排水軟管。排水軟管必須正確安裝，以免漏水。
確保排水軟管沒有扭曲或被壓扁。

延長軟管

如您需要延長排水軟管時，請務必使用相同的排水軟管。" 不得超過 "400 公分，否則會降低洗碗機的清潔效果。

故障排除

聯絡顧客服務中心前

查看以下頁面的圖表，可能會免去您聯繫客服的麻煩。

問題	可能的原因	如何處理
洗碗機不能啟動	保險絲焰斷或電路跳電。	更換保險絲或重置斷路器。拆除與洗碗機使用同一電路的任何其他電器。
	未接通電源。	確保洗碗機開啟並且門已牢固關閉。確保電源線已正確插進牆上插座。
	洗碗機門未關好。	確保正確關門。
洗碗機排水不順暢	排水管打結或堵塞。	檢查排水管。
	過濾器堵塞。	檢查粗濾器。
	廚房水槽堵塞。	檢查廚房水槽，確保排水良好。如果發現是廚房水槽無法排水，您可能需要維修水槽的排水系統。
內膽仍有泡沫	洗碗粉使用不正確。	為了避免產生泡沫，只能使用洗碗機專用的洗碗粉。如果發生這種情況，請打開洗碗機門，讓泡沫揮發。 如果泡沫過多，可以運行任何洗滌程序進行清洗。
	洗滌劑溢出。	立刻擦拭溢出的清洗劑。
內壁著色	使用具有著色劑的洗碗粉。	確保洗碗粉沒有著色劑。
內壁有白色薄膜	硬水礦物質。	要清潔內部，請使用帶有洗碗機專用洗碗粉的濕海綿，並戴上橡膠手套。不要使用洗碗機專用洗碗粉以外的任何清潔劑，否則可能會引起起泡或產生泡沫。
餐具上有鏽漬	生鏽的餐具容易被腐蝕。	避免在洗碗機中洗滌不耐腐蝕的餐具。
在洗碗機內有撞擊聲	碗籃中的餐具阻礙噴臂的轉動。	中止程序，並重新擺放阻礙噴臂轉動的餐具。

問題	可能的原因	如何處理
洗碗機內有雜音	洗碗機餐具鬆動。	中止程序並重新擺放餐具。
水管中發出敲擊聲	這可能是安裝地點或管道的橫截面引起的。	這對洗碗碟機功能沒有影響。如有疑問，請聯繫專業的水電師傅。
餐具清洗不乾淨	餐具未正確擺放。	請參閱“碗籃”説明（第 18 頁）。
	該程序不夠強力。	選擇更強的程序。
	沒有放入足夠的洗碗粉。	使用更多的洗碗粉，或更換洗碗粉。
	餐具擺放影響噴臂的轉動。	重新擺放餐具，使噴臂可以自由轉動。
	過濾器組件不清潔或未正確安裝在洗碗機底座中。這可能阻礙噴臂。	清潔或正確安裝過濾器，並清潔噴臂。
玻璃器具灰暗	軟水中添加過多洗碗粉。	如果使用軟水，請使用較少的洗碗粉，並選擇較短的洗滌程序來清洗玻璃器具。
餐具或玻璃器具上出現白點	硬水可能會產生水垢沉積。	添加洗碗粉。
餐具上出現黑色或灰色印記	鋁製器具與餐具相互磨擦。	使用温和的擦洗劑消除這些痕跡。
洗碗粉殘留在添加處	餐具放置阻礙洗碗粉添加處。	重新正確擺放餐具。
餐具沒有完全乾燥	擺放不當。	請參閱裝載方法的説明（第 18 頁）。
	餐具太早取出。	程序運行完畢後不要立即取出餐具。稍微打開洗碗機門，放出蒸氣，待餐具冷卻後才取出。
	程序選擇錯誤。	當使用較短時間洗滌程序，洗滌温度較低，清洗效能下降。應選擇洗滌時間較長的程序。
	使用的餐具表面處理不佳。	這類餐具會令排水比較困難，不適合在洗碗機中清洗。

錯誤代碼

發生故障時，顯示以下錯誤代碼。

錯誤代碼	代碼名稱	可能出現的原因
E1	進水異常	流量計、排水閥或抽水泵發生故障，需找專業人員進行維修。
E3	加熱異常	加熱管或熱敏電阻異常，需將電源插頭拔掉並找專業人員進行維修。
E4	溢流或水箱異常	如果機器發生溢流或水箱浮子異常，需找專業人員進行維修。
E9	操作鍵運作異常	按鍵位置有水或其他材料會導致操作鍵運作異常，需找專業人員進行維修。
Ed	通訊異常	需找專業人員進行維修。

⚠ 警告

- 發生溢流時，請在聯繫客服前關閉主供水。
- 如底盤因溢水或漏水而積水，應在重新啓動洗碗機前，先除去水份。
- 如果有無法解決的錯誤代碼，請聯繫東芝售後服務中心。

產品規格

型號	DWS-34ATW
產品尺寸（公分）	42（寬）x 47（高）x 44（深）
額定電源	110VAC
額定頻率	60 Hz
額定功率	640 W
耗水量	6 公升
耗電量	0.480 千瓦小時
控制模式	電子式
防水等級	IPX1
餐具盛載量	洗滌容量：34 件（湯盤 X1 + 美耐皿碗 X1 + 美耐皿甜點盤 X1 + 甜點盤 X5 + 甜點碗 X2 + 馬克杯 X2 + 玻璃杯 X3 + 茶杯 X1 + 茶托 X1 + 刀 X3 + 湯匙 X3 + 茶匙 X3 + 甜點匙 X3 + 叉子 X3 + 分菜叉 X1 + 湯勺 X1）
總重	17 公斤
淨重	14 公斤

如何連接至東芝 TSMARTLIFE 應用程序

Toshiba TSmartLife 應用程式的連接說明

在開始之前，請確保：

1. 您的智能手機已連接到家庭無線網路，並且知道網路登入密碼。
2. 您在機器旁連。
3. 您的無線路由器的頻率為 2.4GHz（建議）。
4. 啟動手機藍牙裝置，讓應用程式找到您的手機。

❶ 下載 TSmartLife 應用程式

掃描下方二維碼，或在 Google play (Android 系統) 或 App Store (ios 系統) 搜索 TSmartLife, 並且下載應用程式。



❷ 註冊或登入帳戶


請打開應用程式並且註冊，如您已有帳戶，只需進行登入。



❸ 將您的設備連接到 TSmartLife

請確保您的手機已連接到家庭無線網路，如沒有連接，進入設置，然後打開無線連接，選擇並連接到無線網路。並請打開您手機的藍牙連接，如未打開，請進入設置並打開藍牙。

1. 點擊進入 APP

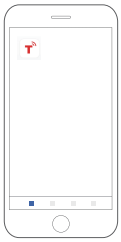

2. 閱讀並同意**隱私政策和軟體許可以及用戶服務協議**



3. **點擊登錄按鈕**



4. 選擇國家或地區



5. **點擊註冊按鈕**



6. 輸入郵箱并發送驗證碼



如何連接至東芝 TSMARTLIFE 應用程序

7. 輸入電子郵件和確認碼。同意**隱私政策**、**軟體許可和使用者服務協定**。按一下 " 下一步 " 按鈕。



8. 設置密碼。然後按一下**提交**按鈕。



9. 進入主頁。按一下**添加設備**按鈕。



10. 長按 3 秒，指示燈閃爍。



11. 選擇一個設備。再選擇洗碗機。或者直接點擊添加可連接設備。



12. 選擇 DWS-34ATW 型號。



13. 選擇無線網絡介面。



14. 如果您以前沒有授權定位，請在設置中允許訪問，打開精確定位。按一下 " **轉到設置** " 按鈕。



15. 進入 " **設置** " 頁面。按一下 " **定位** " 按鈕。



中文

如何連接至東芝 TSMARTLIFE 應用程序

16. 選擇 “ **使用應用程式時** ”。



17. 返回到 **TSmartLife** 輸入無線網路密碼。按一下 “ 下一步 ” 按鈕。



18. 等待連接。



19. 已成功添加。按您的意願命名。然後按一下 “ **完成** ” 按鈕。



20. 返回主頁。




⚠ 注意

- 確保您的設備處於通電狀態。
- 將網路連接到設備時，讓您的手機離設備足夠的近。
- 將您的手機連接到家裡的無線網路，並確保您知道無線網路密碼。
- 檢查您的路由器是否支援 2.4 GHz 的無線網路頻段，並將其打開。如果您不確定路由器是否支持 2.4 GHz 頻段，請聯繫路由器製造商。
- 該設備無法連接到需要認證的酒店、餐館等公共區域的無線網路。請連接到不需要認證的無線網絡。
- 建議使用僅包含字母和數位的無線網路名稱。如果您的無線網路名稱包含特殊字元，請在路由器中修改。
- 將網路連接到設備時，請關閉手機的 WLAN+（安卓）或 WLAN Assistant（iOS）功能。
- 如果您的設備之前已連接到無線網路，但需要重新連接，請在應用程式主頁上按一下 “+”，然後根據應用程式上的說明按設備類別和型號重新添加設備。
- APP 插件在無線網路環境下會自動升級至最新版本。

Tsmartlife APP 功能指引

應用軟體操作介面

❶ 點擊開機，進入洗碗機主頁

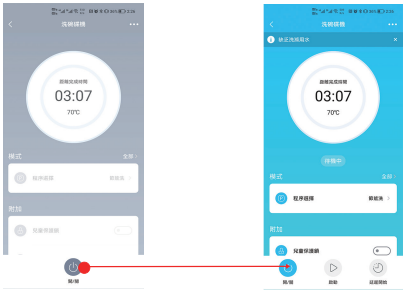


❷ 點擊“程序選擇”選擇程序，點擊“確認”返回主介面




❸ 將螢幕滑到底部，在“附加”中選擇所需的附加功能，選擇完成後按一下“開始”，開始運行。



❹ 按一下“ 延遲 ”設置延遲啟動。進入下一介面後，再次點擊“ 延時 ”選擇你想要的啟動時間，點擊“ 程序選擇 ”選擇所需要的程序，也可以選擇其他功能。設置完畢後，點擊“ 確認 ”跳轉到預約介面進入倒計時，點擊“ 開始 ”直接運行程式。

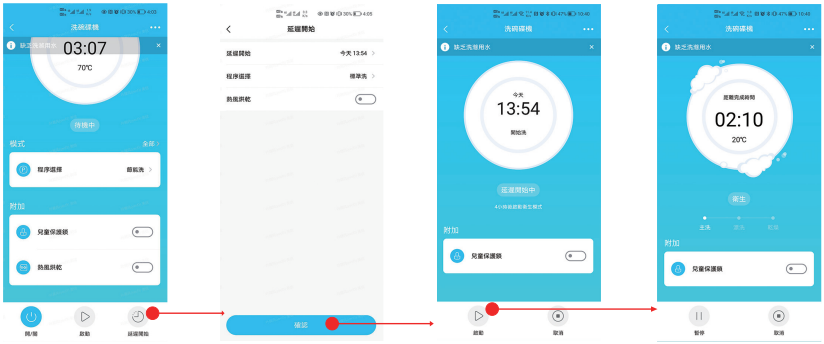

❺ 點擊“ 童鎖 ”開啟童鎖功能，再次點擊可取消此功能。
您可以在機器運行的時候開啟或取消此功能。

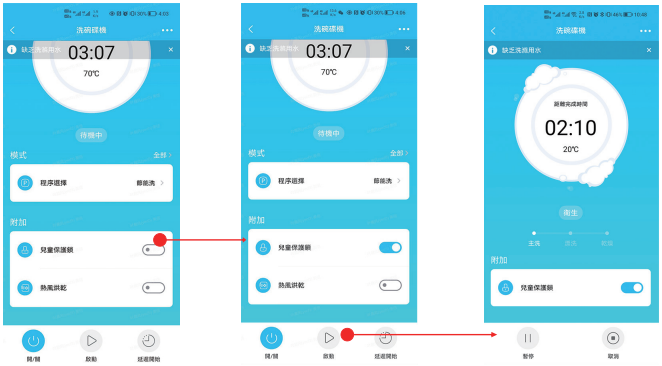

Toshiba Tsmartlife APP 故障排除

在當前環境下	檢查 • 原因
如最初無法加入網路時	• 無法查看 SSID 家庭網路: ◦ 信號很弱 .... 由於設備無線電視變頻帶，因此 2.4 GHz 不是由設備接收信號。即使無線網絡信號通過電話被識別，設備無線也不一定能夠識別。路由器與設備之間的距離較長或屏障過多時，信號可能會大幅降低。重新定位路由器可能會稍微改善情況。更好的解決方案是使用無線網絡轉發器或更高質量的路由器。 所有無線網絡路由器的傳輸功率受聯邦法規限制，但高質量的路由器可以全方位均勻傳輸信號，並可更好地處理弱信號，及使用高質量的軟體來大幅減低掉線機會。 • SSID 網路已顯示，但無法加入: ◦ 需要認證的網路 ... 經常使用餐廳或酒店的公共網路。 因產品無法接受加入網路所需的法律協議，切換到不需要認證的網路。 ◦ 加密不足 ... 出於網路安全考慮，Toshiba 不建議使用未加密或加密不足的網路 (例如 WEP 加密)。 ◦ 密碼長度 ... 出於網路安全考慮，Toshiba 建議使用有強大密碼的網路，但支援最大密碼長度為 32 個字符。 ◦ 密碼不正確 ... 如果嘗試加人與電話當前使用不同的網路，則電話設定的網路密碼可能不正確。 這種情況下，需要提供新的憑證。 ◦ SSID 名稱不正確 ...Toshiba 應用程式接受任何 SSID 名稱，但使用特定非字母數字或外語字符加入網路時，可能會發出警告。 • WLAN+(Android) 或 WLANA ssistant (iOS) 功能已開啟 , 請關閉並重新連接到網路。

在當前環境下	檢查 • 原因
可以加入網路， 但連接不穩定	• 檢查是否傳輸線路過長，或在傳輸線路之前存在障礙物導致信號弱 • 檢查無線網路是否穩定
如果設備離線， 請檢查連接狀態。	• 設備是否正常供電 • 網絡信號是否穩定 • 無線網路名稱或密碼是否已更改，如果更改，請重新添加設備。

產品運作頻率：

RF	發送頻率	最大發送功率
BLE	2402-2480MHZ	<10dBm
2.4GHz	2412-2472MHz	<20dBm

註：此產品適合在 4-40℃的環境下使用。

[警語內容]

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

名稱：洗碗機			型號 (型式)：DWS-34ATW			
單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr^{+6})	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
外殼	○	○	○	○	○	○
開關	○	○	○	○	○	○
加熱管	○	○	○	○	○	○
電路板	○	○	○	○	○	○
電源線	○	○	○	○	○	○

備考 1. " 超出 0.1 wt %" 及 " 超出 0.01 wt %" 係指限用物質之百分比含量超出百分比含量基準值。

備考 2. "○" 係指該項限用物質之百分比含量未超出百分比含量基準值。

備考 3. "-" 係指該項限用物質為排除項目。

進口商:台灣美芝消費電器股份有限公司
地址:台灣台北市松山區健康路156號9樓
電話:+886-2-27609390
製造商:Foshan Shunde Midea Washing Appliances MFG CO., LTD.

USER MANUAL

DISHWASHER
DWS-34ATW



TOSHIBA

SAFETY INSTRUCTIONS

All instructions described should be carefully read and followed.

- These instructions are precautions to prevent the risks of serious injury or death of the user, and any damages to property.

MARKINGS	
⚠ WARNING	WARNING indicates high possibility of serious injury (*1) or death of the user.
⚠ CAUTION	CAUTION indicates high possibility of injury (*2) or property loss (*3).

(*1) Serious injury – injury which requires hospitalization, lengthy treatment, or blindness, hot and cold skin burn, electric shock, broken bones or poisoning.
(*2) Injury – injury, skin burn or electric shock which does not require hospitalization or lengthy treatment.
(*3) Property loss – extended loss of houses, furniture, domestic animals or pets.

SYMBOLS	
⃠ PROHIBITED!	⃠ **PROHIBITED! Indicates prohibited actions.** Detailed instructions would be indicated on the inside of the circle or around the symbol in figures or in writing.
● IMPORTANT	● **IMPORTANT Indicates mandatory actions.** Detailed instructions would be indicated on the inside of the circle or around the symbol in figures or in writing.
△ CAUTION	△ **CAUTION Recommends to take precautions.** Detailed instructions would be indicated on the inside of the triangle or around the symbol in figures or in writing.

⚠ Warning

Away from children	● Do not allow below people to operate the dishwasher The dishwasher cannot be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. ● Take care of children and ensure they will not play with the dishwasher. ● The packing material may be dangerous to children.
No modification	● Do not dismantle or modify the dishwasher. This may cause fire, electric shock or fault, and cause injuries. If repair is required, please contact with the vendor of the dishwasher.
Electric shock	● Use suitable power source according to the power indicated on the dishwasher nameplate. It will cause fire or electric shock. The use of improper power source may cause the socket overheated and cause fire.

 Disconnect power plug	● Before cleaning or maintaining the dishwasher, disconnect the power plug first.
 No touch by wet hand	● Do not connect or disconnect the power plug by wet hand. This may cause electric shock or fault and cause injuries.
 Electric shock	● Do not use damaged power lines, power plug or loose power socket. This may cause electric shock or fault, and cause injuries or fires.
 No dis-assembly and repair without permission	● Do not damage power line. Do not damage, cut, process power line or bend, pull, twist or bind power line. Besides, do not yank the metal part of the power line, or put weights on the line or clamp the power line. The power line may be damaged and cause fire or electric shock. If the power line is damaged, the damaged line must be replaced by the manufacturer or its service agent or personnel having similar qualification, so as to prevent dangers.
 No water spraying	● Do not spray water directly onto the parts of the main body of the dishwasher. This may cause accidents of electric shock or short circuit.
 Away from flammable materials	● Do not put flammable materials into the dishwasher. Do not put flammable materials of kerosene, gasoline, volatile oil, diluent, ethyl alcohol etc. as well as dishes having such matters into the dishwasher. It will may cause explosion or fire.
 Wipe off dust	● Wipe off dust or dirt accumulated on the plug of power line. The accumulated dust or dirt may cause fire.
 Prohibit	● Do not touch the inside of the cabinet, steam jetsfor during operation or 30 minutes after operation. There is a fear of burning.
 Instruction	● Take out the dishes, clean filters, handle it more than 30 minutes after operation. There is a fear of burning.
 Prohibit	● Do not use extension cord. It may cause fire due to heat.
 Instruction	● It there is abnormality such as the spray arm is not moving, smoke or strange smell, immediately unplug the power plug and stop using the dishwasher. Please ask the agent you purchased for inspection / repair. There is a danger of electric shock, fire by electric leakage or short-circuiting.

English

Insert plug	● Insert the power plug securely to the base and let the cord go downward. If the cord goes upward or if the plug is incompletely inserted, it may cause fire due to electric leakage or heat generation.
Prohibit	● Do not operate by putting easily combustible items such as towels and cloth inside the cabinet of the dishwasher. There is a fear of fire.
Instruction	● Separate from the heat source such as gas stove 15 cm or more. There are fears of fires and deformations.
Prohibit	● Do not place anything on the main unit Do not place heavy objects or hot objects on top of the main unit, such as containers of water or hot water, heat appliances, glasses, electric products, cutlery etc. Falling by opening and closing the door may cause injury. Also, spilled water may deteriorate insulation and cause electric leakage and fire.
Away from flammable materials	● Do not place the dishwasher near fire. ● Do not put the burning candle or cigarette on the dishwasher. It may cause fire.
Careful installation	● Make sure the dishwasher can be set at a smooth drainage location. The use of dishwasher having poor drainage may cause water to flow back to the dishwasher and cause electric shock or fire.
Correct grounding	● The dishwasher must be grounded. The current resistance are minimum after grounding, and this can reduce the danger of electric shock when the dishwasher become fault state. The electric wires of this dishwasher have grounding wire and grounding plug. Fault connection of the grounding wire will cause electric shock. If E3 failure occurs, please unplugging the power plug from the outlet, and needs to be repaired by professional electricians or service men. When it is difficult to confirm the correctness of grounding, please call for professional electricians or service men for inspection.
No dis-assembly and repair without permission	● Do not change the plug without permission. When the plug does not match the socket, proper power socket shall be installed by professional electricians.

⚠ Caution

No pulling by force	● When disconnecting the plug from the socket, do not pull the power line by force. Pull out by grasping the power plug. It may cause electric shock or fault and cause injuries.
No use	● Do not use soap, washing powder or other hand sanitizer. Only dishwashing powder suitable for automatic dishwasher. It may cause machine fault.
No washing	● Do not wash plastic utensils. For plastic utensils, only those marked with safety for the dishwasher or other similar situations, can be washed by the dishwasher. For the plastic utensils without marks, check details with the utensil manufacturer.
Application environ-ment	● Only for indoor use. Such home appliance is for household use, e.g.: - Applications in staff kitchen of shop, office and other working environments; - Farmhouse; - Use for customers in hotel, car hotel and other residence environments; - Environments of inns
No climbing	● Do not sit or stand on the dish rack or door of the dishwasher. It may cause dangers of injuries due to deformation or damage.
Pull off power plug	● When the dishwasher is not used for long time, pull off the power plug from the power socket and close the dishwasher door. Electric shock or short circuit may be caused due to the degradation of insulating material.
Care about the door	● The door shall keep close, to prevent stumble. ● It is very dangerous to open the door during washing, and hot water may cause scald.
Care for safety	● When install the items (dishes, utensils etc) into the dishwasher: 1. Be careful to put sharp utensil to prevent it from scratch the door sealing strip. 2. Warning: the cutters and other sharp tools must be put in the basket, and the sharp end is put downwards or horizontally.
Care for cleaning	● Moisten the soft cloth by mild cleaning solution, then wipe the machine, and wipe it dry by dry cloth.
Attention	● After washing, check if the dishwashing powder is emptied. ● Firstly, confirm that there is no error or abnormality notification on the panel before using the dishwasher. ● When installing the dishwasher, use new water hose. Do not use the current water hose. ● Maximum inlet water pressure is 1MPa. Minimum water inlet pressure is 0.04MPa.

English

Loading capacity	● Washing capacity(60436): 34 pcs (Soup plate X1 + Melamine bowl X1 + Melamine dessert plate X1 + Dessert plate X5 + Dessert bowl X2 + Mug X2 + Glass X3 + Cup X1 + Saucer X1 + Knife X3 + Soup spoon X3 + Teas poon X3 + Dessert spoon X3 + Fork X3 + Serving fork X1 + Gravy ladle X1)
Prohibit	● Do not strongly push open door and main body, nor put the downward pressure to the door. Falling may cause injuries.
Attention to pinching of fingers	● Be careful not to pinch fingers when opening and closing the door. There is a risk of getting hurt while pinching fingers.
Prohibit	● Do not get close to the exhaust port. Steam or hot air may cause the burns.
Attention to burn	● While using or after using the dishwasher, pay attention to hot water drained out. High temperature hot water may come out, there is a risk of burns.
Prohibit	● Prohibit to hit or tap the dishwasher. Electric shock, electric leakage short circuit may cause fire.
Instruction	● Set the filters correctly. Residues clogs, causing breakdown.
Prohibit	● Do not put light and small dishes such as plastic containers. If it is dropped by water pressure of the water spray, it may cause malfunction due to clogging the dishwasher.
Prohibit	● Do not use for purposes other than dishwasher dryer. It may cause a malfunction.
Instruction	● Make the main unit a solid level surface. Normal operation may not be possible. It may cause water leakage.
Instruction	● Fix the connection of drainage pipe certainly. It may cause water leakage.

Treatments

- Handle the package of the dishwasher with extreme care.
- All packages are recyclables.
- Plastic parts are marked with abbreviation of international standard;



PE	Polyethylene, e.g., tableted package material
PS	Polystyrene, e.g., packing material
POM	Polyacetal or polyox, e.g., plastic clip
ABS	Acrylonitrile Butadiene Styrene , e.g., control panel
PP	Polypropylene, e.g., inner wall

⚠Warning



- The packing material may be dangerous to children!
- The disposal of package and machine shall be submitted to the recycle center.
- When the machine is not in service, please switch off the power and close the machine door.
- The cardboard package is made by recycled paper and shall be collected for recycling.
- If the generated rubbish cannot be treated properly, they will be harmful to the environment and human health, and they shall be properly disposed to prevent potential threat.

⚠Warning

- For more details of product recycle, please contact relevant departments of local government or the service center for domestic refuse management.
- Treatment: Please do not treat the product as unclassified municipal refuses. Different refuses have to be subject to special treatment separately.

Such warning sign is used to prevent dangers to you and others.
Please follow it strictly.
After reading, please store it properly for use just in case.

English

Contents

Please carefully read the instruction manual before using the dishwasher, and this is helpful for the use and maintenance of the product.

01 **Quick instruction manual** 09

02 **Recognize the dishwasher**
Dishwasher features 11
Accessories 11
Control panel 13

03 **Use the dishwasher**
Install dishwasher bowl basket 15
Put the dishwashing powder into the addition place 19

04 **Program Setting**
Washing program 20
Start up 21
Change the program 21
Put additional dishes in 22
End of washing program 22
Forced drainage operation 22

05 **Cleaning and care**
Filter 23
Filter cleaning 24
Care and maintenance 25

06 **Installation**
Preparation before installation 26
Where to place 26
Power connection 26
Water connection 27
Drainage pipe connection 28

07 **Troubleshooting**
Before connecting customer service center 29
Error code 31
Specification 32

08 **HOW TO CONNECT WITH TOSHIBA TSMARTLIFE APP** 33
INSTRUCTIONS TO FUNCTION WITH TSMARTLIFE APP 36
Toshiba TSmartLife Troubleshooting 38


Quick instruction manual

For detailed operation methods, read the manual carefully.

Connected to power supplies

The power supply is 110V AC 60Hz
the specification of the socket is 10A 110V AC


The connection of the drain pipe: Put end of the drain into a sink or bucket.

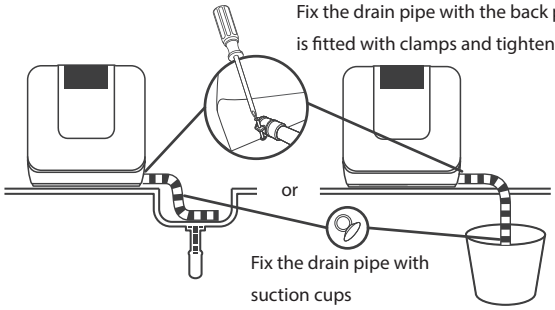


Add water into the dishwasher's tank

Note: Before adding water , you need to press power button to turn on the diswasher
There are two ways to add water into the tank:

1. Connect inlet hose to the tap;
2. Open the cap and add water into the dishwasher's tank manually

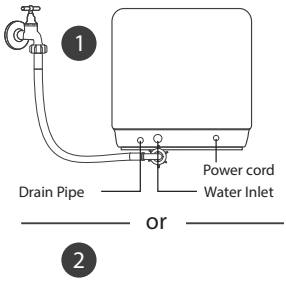


There are two ways of prompting the tank that full of water
1. Before starting:
When the tank is full of water, the machine will beep fleetly for 3 seconds.
2. After starting :
Water is not enough, light is on;
Water is enough, light will be off and the machine will beep fleetly for 3 seconds.

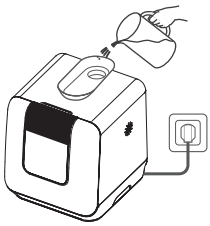

Remove the larger residue


Please remove the large residue before placing.

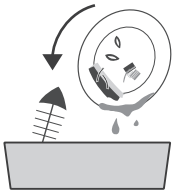



English

Open the door, put in the dishes and dishwashing powder


Place them from the two sides to the center according to the size. It is the best to place the dishes at a tilt angle to achieve a better cleaning effect. Improper placement will result in interruption of cleaning process and unsatisfactory cleaning results.

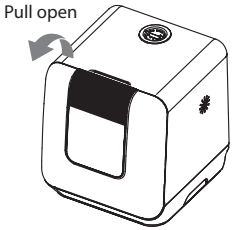

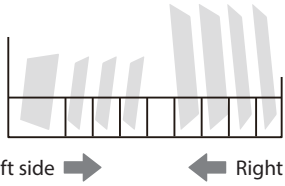

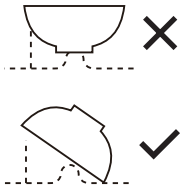



Improper orientation of dishes can also affect the cleaning.
Try to direct the dirty side toward the spray arm.

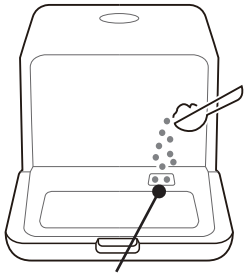

Put the dishwashing powder at the adding place

Close the door, turn on the dishwasher, select the program, and press ⏯ button

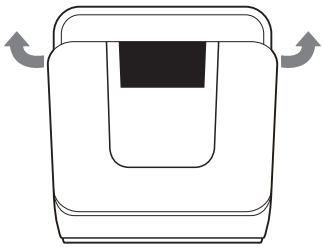

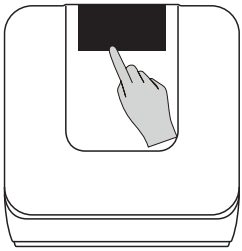

Note:


- When the machine is running at low temperature, it is normal for a small amount of water to drip at the bottom of the outer door, which can be wiped with a towel.
- When the environmental temperature at the low degree, there will be a layer of mist on the display window during machine operation. This is normal phenomenon and will not affect the normal use.

Recognize the dishwasher

Important:

Before using the dishwasher for the first time, read following instructions to ensure the best results.

Dishwasher features

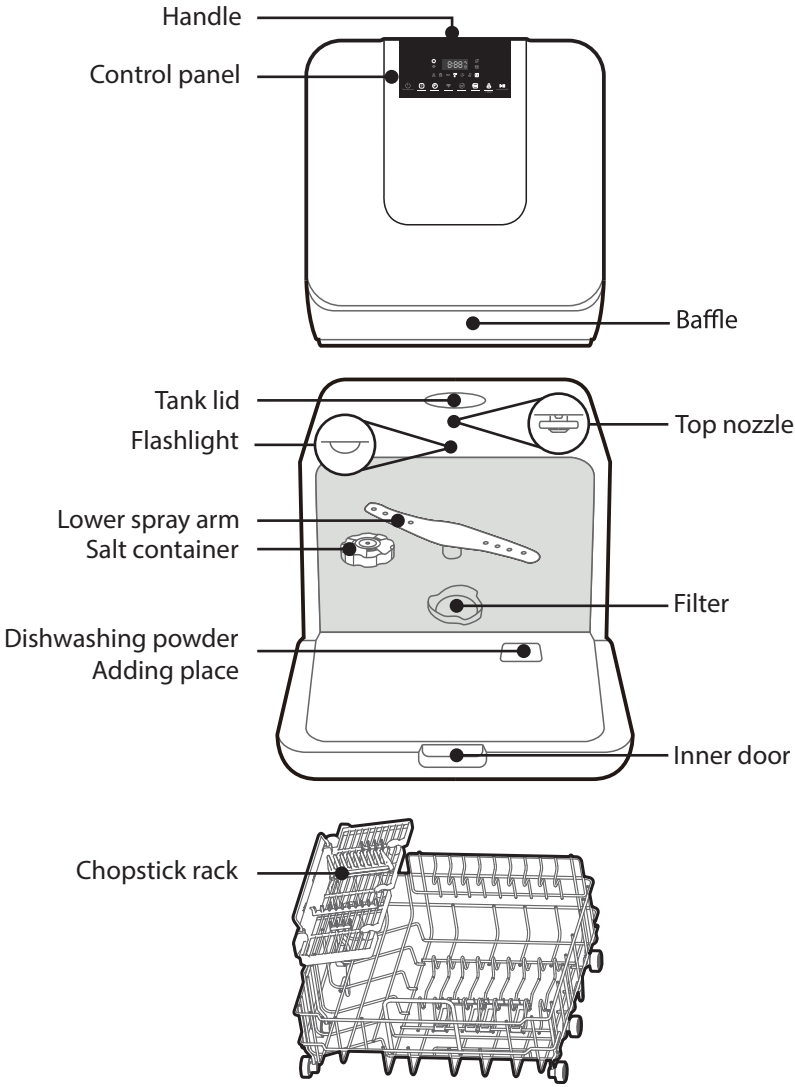


Note:

- When the machine in power-on or active state. If opening the door, Flashlight will turn-on automatically. If the door be opened or be closed for more than 5 mins, flashlight will turn off automatically.
- When the machine in working state. If you controlling button on the panel, and the flashlight will turn on automatically, if there no button controlling in 5 mins. The flashlight will turn off automatically.

Accessories

Water tray, Water kettle, Water tank lid, Drainage pipe, Inlet pipe.

Control panel

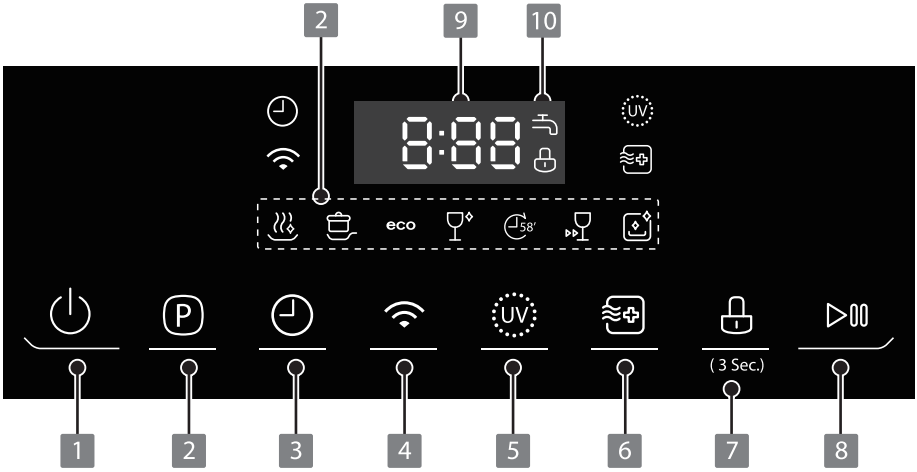

1 Power	Power on/off		
2 Program		HYGIENE 70°	Use to remove bacteria from your dishes and glassware. Maintains the water temperature at 70˚C.
		INTENSIVE	For dishes with oil stains and heavy dirty cooking utensils and dishes.
	eco	eco	This is standard program. For general dirty dishes and utensils (such as pots, plates, glasses, pans).
		GLASS	For slight dirty dishes and glasses.
	58'	58 MIN	For normally soiled loads that need quick wash.
		RAPID	For slight dirty dishes, the required cleaning time is relatively short.
		SELF CLEAN	This program provides an effective cleaning of the dishwasher itself.

English

3	Delay start	Press the button to increase the delay start time. Delay a cycle for up to 24 hours（H:01→H:24） in one-hour increments.
4	Wireless Network (*)	Press the button for 3 seconds. After a shout bleeping and the icon starts to blink slowly, it's in the network linking status to APP. When the network link is successful, the indicator will be lit.
5	UV	Press the Hot air button for 3 seconds to select the UV function , corresponding indicator (UV) will be lit. It can be used with Hygiene70°, Intensive, ECO, Glass, 58min.
6	Hot air	The hot air drying function can deliver hot air to the inner tank intermittently to dry the tableware. It can not be used with Rapid and Self-cleaning .
7	Child lock	Press the button for 3 seconds to select the Child lock function. This function allows you to lock the buttons on the control panel, so children cannot accidently start the dishwasher by pressing the buttons on the panel. Only the Power button remains active.
8	Start/Pause	To start or pause the washing process of the dishwasher.
9	Display	 To show the remaining time and delay time, error codes etc.
10	Warning Indicator	 Water insufficient indicator

(*) Please see page 35 for how to connect and use Wireless Network.

Use the dishwasher

Install dishwasher bowl basket

Suggestion

- Purchase dishes suitable for dishwasher.
- Use a suitable mild dishwashing powder. If necessary, consult the manufacturer for more information.
- For special appliances, try to select a washing program that with a lower temperature.
- Do not take out the glass dishes immediately after the program ends to prevent damage.

Use the dishwashing machine rationally

Not for:

- Wooden, ivory, porcelain or pearl shank tool
- Non heat-resistant plastic products
- Stale non heat-resistant cutters with glue adhesive part
- Cohesive knives or dishes
- Tin or copper vessels
- Crystal glass
- Rusty steel products
- Wooden utensils
- Synthetic fiber products

Limited use:

- After several cleanings, some glassware will become dull
- Silver or aluminum products tend to change color during cleaning
- Color of smooth dishes may fade out if often washed

Precautions before and after the bowl basket is placed

(For the best use of dishwasher, follow the instructions below. For different models, the characteristics and appearance of the basket will be different) Clear larger food residues. Soften the residue of burnt food left on the pan. It is not necessary to rinse dishes with water first. Place the dishes in the dishwasher as follows:

- Cups, glasses, pots and so on are placed face down.
- For curved or concave and convex vessels, place them diagonally so that the water flows out.
- All utensils should be placed safely and must not be overturned.
- All utensils should be placed that the arms can rotate freely during washing.

⚠Attention


For small objects, it is easy to fall out from the basket, which should not be placed in the dishwasher.


- The open of hollow tablewares (such as cups, glasses, pots, etc.) should face downward so that water does not easily remain in the container or grooves.
- Dishes and knives should not be placed in other utensils, and they can't overlaid each other.
- Do not place glass close to each other to avoid damage.
- For long knives, placing upright is very dangerous.

- Long or sharp knives (eg. meat cleavers) should be placed horizontally in the basket.
- Do not use the dishwasher overloaded so that you can get better cleaning performance.

Use of baskets


Small-size dishware will drop through the basket and block the rotation of spray arm.
Flip the dishware support inward to support the small-size dishware.

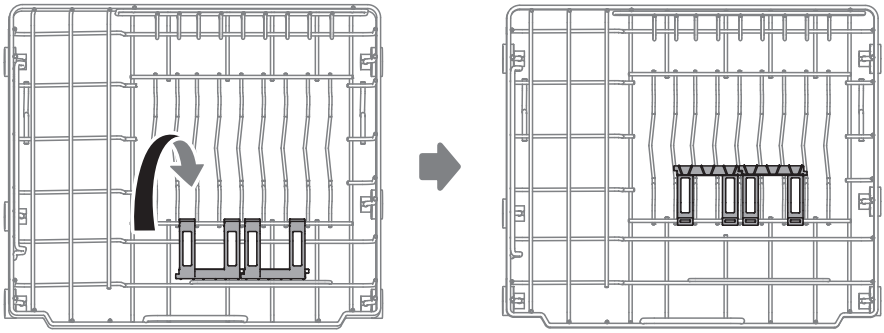

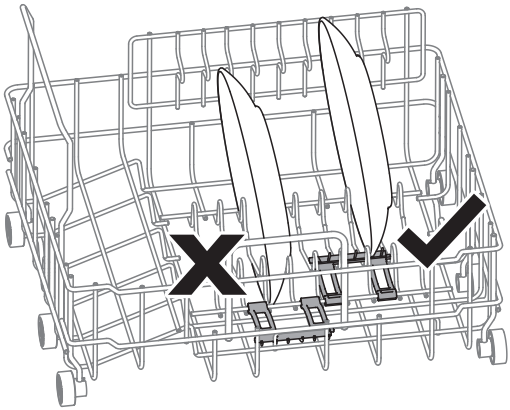


Loading the basket according to EN60436:

Place the dishes and utensils properly to avoid being moved by the water stream.
In order to allow the spray water column to clean the surface, the dirty surface must face inside.

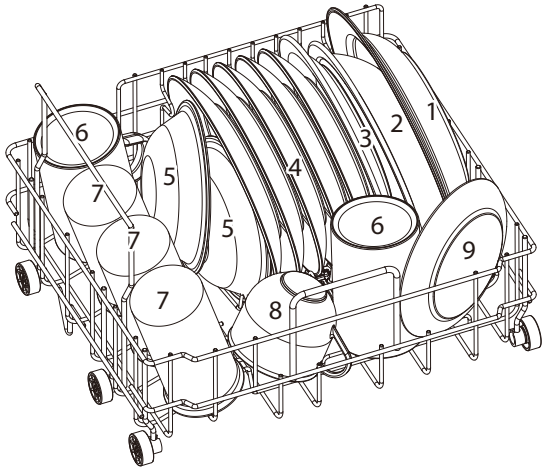

Number	Item
1	Soup plate
2	Melamine bowl
3	Melamine dessert plate
4	Dessert plate
5	Dessert bowl
6	Mug
7	Glass
8	Cup
9	Saucer

Loading the cutlery basket

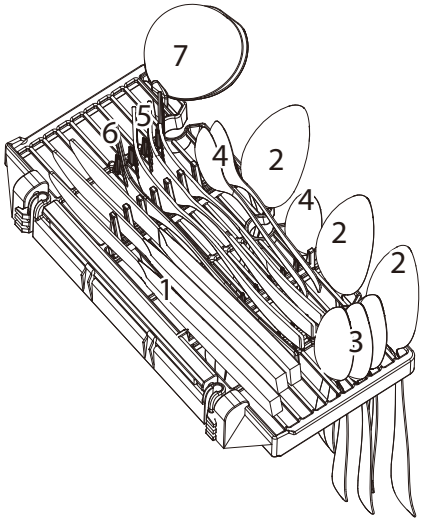

Number	Item
1	Knife
2	Soup spoon
3	Teas poon
4	Dessert spoon
5	Fork
6	Serving fork
7	Gravy ladle

For personal safety and a top quality clean, make sure place the silverware in the basket as follows:

- They do not nest together.
- Place silverware with handles-down.
- But place knives and other potentially dangerous utensils handles-up.

Put the dishwashing powder into the addition place

⚠Caution

- Only dishwashing powder is specially designed for dishwashers can be used. Do not use other dishwashing powders to avoid machine damage.
- The dishwashing powder which is corrosive! Keep the dishwashing powder in a place where children cannot reach.



Concentrated dishwashing powder

According to different chemical compositions, there are two basic types:

- Traditional alkaline dishwashing powder with corrosive ingredients.
- Concentrated weak alkaline dishwashing powder with natural enzymes.

Normal washing programs with concentrated dishwashing powder can reduce contamination and dishes damage.


Cleaning tablets

Different brands of cleaning tablets have different dissolution rates. When using a short-term washing program, there are certain cleansing tablets that cannot completely dissolve and fully function. Therefore, the use of cleaning tablets requires long-term washing programs to ensure complete removal of cleaning tablets.

Dishwashing powder

Prior to each washing program, re-add the dishwashing powder according to the instructions provided in the washing program table at page 17. Dishwashers use less dishwashing powder than traditional ones. In general, only one spoon of dishwashing powder is required for normal washing and general dirty dishes. Heavy dirty dishes need to add more powder. Please add dishwashing powder before starting the dishwasher, otherwise it will be damp and difficult to dissolve.

Add the dishwashing powder

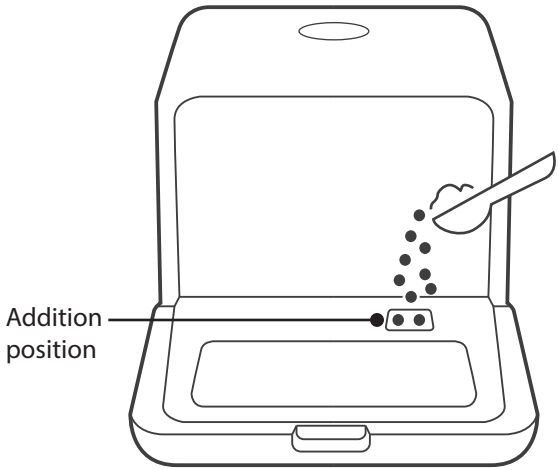

Program Setting

Washing program

The table below shows which programs are best for the levels of food residue on them and how much detergent is needed. It also show various information about the programs. Consumption values and program duration are only indicative except for ECO program.

Program	Highest Water Temperature	Dishwashing powder (g)	Time (min)	Power (kWh)	Water (L)
HYGIENE 70°	70℃	20	130	0.570	6.0
INTENSIVE	62℃	20	190	0.550	6.0
eco (*EN60436)	55℃	20	187	0.480	6.0
GLASS	50℃	20	97	0.350	6.0
58 MIN	45℃	20	58	0.300	6.0
RAPID	50℃	20	30	0.25	6.0
SELF CLEAN	60℃	20	80	0.45	6.0

eco (*EN60436) **:** The eco program is suitable to clean normally soiled tableware, that for this use, it is the most efficient program in terms of its combined energy and water consumption, and it is used to assess compliance with the EU eco design legislation.

⚠Attention

The above program data is for reference only. Test conditions are as follows:

- Washing capacity : 34 pcs (Soup plate X1 + Melamine bowl X1 + Melamine dessert plate X1 + Dessert plate X5 + Dessert bowl X2 + Mug X2 + Glass X3 + Cup X1 + Saucer X1 + Knife X3 + Soup spoon X3 + Teas poon X3 + Dessert spoon X3 + Fork X3 + Serving fork X1 + Gravy ladle X1)
- Power consumption at shutdown state and standby state similarly are 0.49w.

Start up

To start the program:
The plug shall be firstly plugged into the socket. Power supply shall be of 110V AC 60Hz type, with socket of 10A 110V AC. Before selecting a program, press "ON/OFF" button turn on the dishwasher. Press the button of desired program, the corresponding indicator will light up.
Then, press "Start/Pause" button to start.

⚠Attention

If you press "Start/ Pause" button in the process of washing, the dishwasher beeps at every 60 seconds until started up again by pressing the "Start/ Pause" button.

Change the program

Premise: You can modify the washing program, if the dishwasher just worked for a short time. Otherwise, the detergent may have already been released, and the appliance may have already drained the wash water in this case, the cycle must be restarted.

Press Start/Pause Button to pause the machine when the door is closed.
Press Program Button for more than 3 seconds the machine will be in stand-by state, then you can change the program to the desired cycle setting
(see the section entitled "Start up").

The Display window shows the state of the dishwasher:
a) Display window shows "-:--" ----------> stand by;
b) Display window shows "H:MM" and not blinking ----------> pause;
c) Display window shows "H:MM" and only " : " blinking ----------> run;
d) Display window shows "END" ----------> end.

⚠Attention

If you open the door during washing, the machine will pause. When you and press the Start/Pause Button, the machine will keep on working after 10 seconds.

If your model has broken remember function, the machine will go on to finish the selected program after the power cut.

Put additional dishes in

Additional dishes can be placed in at any time before dishwasher program start. If you want to reload dishes in the process of washing, please follow instructions below:

1. Press "Start/Pause" button to pause washing program;
2. Wait for 5 seconds to open the door;
3. Put the additional dishes in;
4. Close the door;
5. Press "Start/Pause" button and after 10 seconds, the dishwasher will start again.



End of washing program

After the program finishes, the machine show"End"and the buzzer beeps for 8 seconds. If you want to stop the machine immediately, press ON/OFF button. Then, wait a few minutes to avoid burns before open the door and clear the dishwasher. Be careful of hot dishes.

- Turn off the machine

Press ON/OFF button to turn off the dishwasher.

- Open the door carefully

Hot dishes are more likely to be damaged. The dishes shall be cool for about 15 minutes and then taken out from the dishwasher.

- Clear the dishwasher

It is normal that the dishwasher still remains wet inside.

⚠Warning

It is extremely dangerous to open the door in the process of washing as this may cause severe burn by hot water.

Forced drainage operation

In standby mode, you can press and hold "Delay start" button + "Wireless Network" button simultaneously for 3 seconds to drain the water tank.


Cleaning and care

Filter

⚠Warning

- Do not use dishwashers without filter!
- Make sure that 3 filters are properly
  Otherwise, washing performance of the machine may be affected, and utensils and dishes may also be damaged.

The filters can effectively remove food residue from the washing water, which can be recycled at washing state.
For optimum performance and effectiveness, the filter must be cleaned regularly. Therefore, when a washing program ends, filter and the cup shall be rinsed under water to remove large food scraps. Remove the filter and pull the cup upwards.

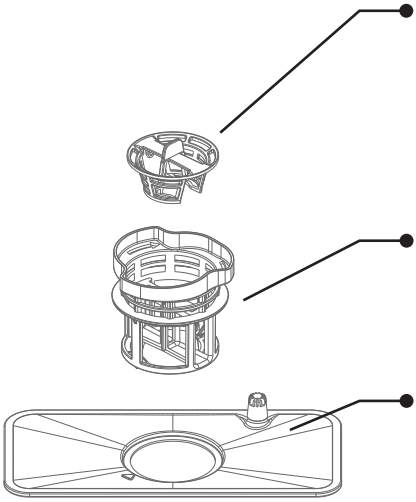

Coarse filter

It is suitable for large food residue, for example bone or glass which may block drainage pipe. To remove food residue from the filter, gently squeeze the plug on top of the filter and lift it up.

Fine filter


Fine filter is used to keep dirts and food residue in storage area, preventing it from remaining on the dishes in washing process.

Main filter


Main filter is applicable to intercept food residue and particles, which will be broken up and rinsed by water flow from special nozzles of lower spray arm, and then discharged. Non broken up residue will flow to coarse lter.

English


Step 1: Rotate the filters (A, B, and C) in counterclockwise direction and then lift them up

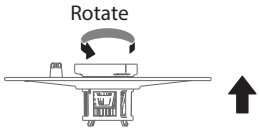

Step 2: Lift B and C from A.

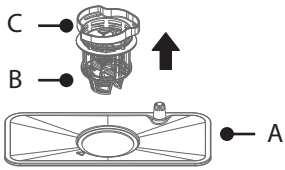

step 3: Separate B and C.

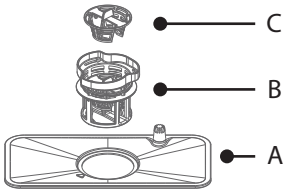

⚠Caution

The filters will be removed from Step 1 to Step 3 and installed from Step 3 to Step 1.
Entire filters shall be cleaned once a week.

- Check if the filters are blocked after each wash.
- Rotate coarse filter out to remove the filter. Remove all food residues and clean the filter under water.

Filter cleaning

Use detergent when cleaning coarse and fine filters. Reassemble the filters and reload entire assembly into the dishwasher and then position it on its base and press down as indicated in this page.

⚠Caution

Do not beat the filter in cleaning process. Otherwise, the filter may be twisted, and washing performance of the machine may be affected.

Care and maintenance

Control panel can be wiped with a slightly wet cloth. After cleaning, make sure it is completely dry.

Do not use Sharp tools, Scratch sponge, or Rough detergent anywhere in the machine.

⚠Warning

- Do not use spray detergent to clean the door, as it may damage the door lock and other electrical components.
- Do not use abrasives or rough paper towels, as it may leave scratches or spots on stainless steel surface.

Installation

⚠Warning



Electric Shock

The machine shall be installed after the power is off. If not, electric shock or death can be caused.

Please make sure the machine is properly grounded before use.

Preparation before installation

The machine shall be installed close to existing water tap, outlets and socket.

It should be close to drain to facilitate connection of drainage pipe.

Where to place

The back of the machine shall be against the wall and for lateral connection, it shall be arranged along adjacent cabinet or wall.

The machine is equipped with a drainage pipe, which allows to be positioned on the left or right side for easy installation. In addition, you may use a water supply pipe other than adding water to the tank. For details, please contact your agent.

Power connection

⚠Warning

Electric Shock

- Do not use an extension cord or power adapter on this machine.
- In any case, do not cut off or remove the grounding connection of power cord.

Power requirements

Please check the label of rated value of power supply system for knowing rated voltage and connect the machine to appropriate power supply. 10A fuse is required and time-delay fuse or circuit breaker is recommended. Only separate circuit is suitable for this machine.

Machine connection

Make sure that supplied voltage and frequency correspond to those on rating plate. Plug can only be connected to a properly grounded socket. If the socket that the machine must be connected to is not suitable for the plug, replace the socket, and do not use a power adapter that may cause overheating and burning.


Grounding Instructions

This appliance must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of electric shock by providing a path of least resistance for the electric current. This appliance is equipped with a cord having an equipment-earthing conductor and an earthing plug. The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local standards and requirements.

When connecting the Inlet pipe directly to the tap


Connect the cold water supply hose to a threaded 3/4(inch) connector and make sure that it is fastened tightly in place.

If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear. This precaution is needed to avoid the risk of the water inlet to be blocked and damage the appliance.

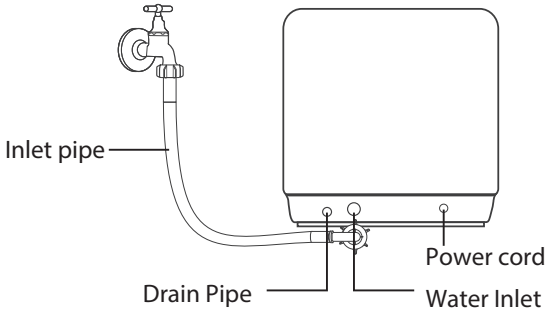


Clean the filter device of the water inlet pipe

There is a filtering system, which is located between the end of the water inlet pipe and the faucet, can remove impurities in the water. Over time, more and more impurities may clog pipe. Therefore, it is recommended to check the status every month, remove the filter from the water inlet pipe by using a plier and clean impurities with running water when necessary.

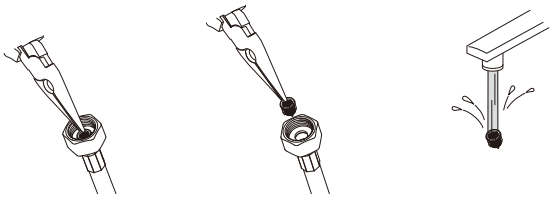

Drainage pipe connection

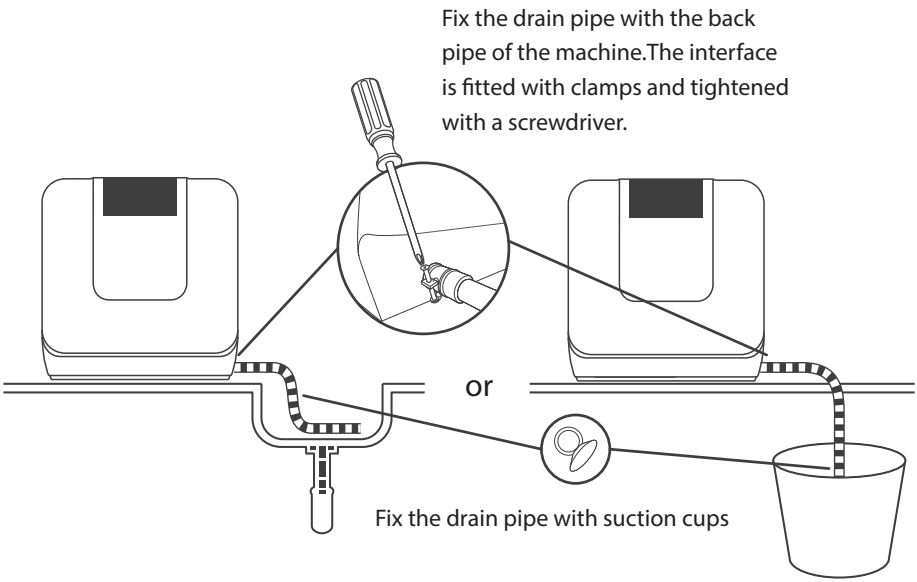

The connection of the drain pipe: Put end of the drain into a sink or bucket.

How to Drain Excess Water From Hoses

If the sink is more than1000 mm higher than the floor, the excess water in hoses cannot be drained directly into the sink. It will be necessary to drain excess water from hoses into a bowl or suitable container that is held outside and lower than the sink.

Water Outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure that the water drain hose is not kinked or squashed.

Extension Hose

If you need a drain hose extension, make sure to use a similar drain hose. It must be no longer than 4 metres, otherwise the cleaning effect of the dishwasher could be reduced.

Troubleshooting

Before connecting customer service center.

Please check the chart below before connecting customer service center

Problem	Possible cause	Solutions
The machine is not working	Fuse burn-out or circuit trip.	Replace fuse or reset circuit breaker Remove any other appliances that share same circuit with the dishwasher.
	Power is not connected.	Make sure that dishwasher is on and the door is firmly closed. Make sure power cord is properly plugged into the socket.
	Door is open.	Close the door.
Insufficient drainage	Drainage pipe has a knot or is blocked.	Check the drainage pipe.
	Filter is blocked.	Check coarse filter.
	Sink drian is blocked.	Check the sink drain to ensure good drainage. If the kitchen sink drain is not working properly, you shall ask a pipe technician for help rather than a dishwasher qualified serviceman.
Foam remains in liner	Improper dishwashing powder is used.	In order to avoid foaming, only dishwashing powder specially designed for dishwasher can be used. In such case, open the door and allow the foam to evaporate. In case of too much foam, start any washing program for cleaning.
	Detergent overflows.	Wipe off spilled cleaner immediately.
Colors on liner	Use dishwashing powder with coloring agent.	Make sure that dishwashing powder used is free of coloring agent.
White film on liner	Hard water minerals.	Use wet sponge with dishwashing powder and wear rubber gloves for interior cleaning. Do not use any detergent other than dishwashing powder as it may generate foam or bubble.
Rust on dishes	Dishes with rust are easily to be corroded.	Avoid washing dishes that are easily to be corroded in dishwasher.
Crush in dishwasher	Dishes in the rack prevents spray arm from rotating.	Suspend the program and reposition the dishes that prevent spray arm from rotating.

Problem	Possible cause	Solutions
Noise from dishwasher	Dishes are loose.	Suspend the program and reposition the dishes.
Beats in water pipe	This may be caused by site installation or cross section of pipelines.	It has no effect on operation of dishwasher. In case of any doubts, please contact qualified pipe technician.
Dishes remain dirty after washing	Dishes are not placed correctly.	Please see "Loading the basket" information for details (Page 18).
	The program is not powerful enough.	Select a more powerful program.
	Dishwashing powder is not enough.	Use more dishwashing powder or replace new detergent.
	Placement of dishes affects the rotation of spray arm.	Reposition the dishes so that spray arm can rotate freely.
	Filter assembly is dirty or not properly installed on the base, which may impede the rotation of spray arm.	Clean or properly install the filter and clean spray arm.
Glassware is not glossy	Add too much dishwashing powder under soft water conditions.	If soft water is used, use less powder and select a shorter washing program to clean the glassware.
White point on dishes or glassware	Hard water produces more scale.	Add dishwashing powder.
Black or grey imprints on dishes	Friction between aluminum utensil and dishes.	Use mild detergent to eliminate these imprints.
Dishwashing powder remains in adding position	Placement of dishes hinders the addition of dishwashing powder.	Place the dishes correctly.
Dishes are not completely dry	Placement is improper.	Please see "Loading the basket" information for details (Page 19).
	Dishes are taken out too early.	Do not take dishes out immediately after the program ends. Slightly open the door let the vapor out and wait until dishes are cool.
	Program is wrong.	When shorter washing procedures are used, washing temperature is lower and cleaning effectiveness is reduced. A longer program shall be selected.
	The dishes have poor drainage ability.	These dishes have poor drainage ability, which are not suitable to be washed in dishwasher.

Error code

When failure occurs, error code will appear to remind you:

Error code	Code name	Possible cause
E1	Long water intake time	Flow-meters, drain valves, or pump failures shall be repaired by qualified serviceman.
E3	Abnormal heating	Heating pipe or thermistor is at abnormal state, which needs to be unplugged the power plug from the outlet , and needs to be repaired by qualified serviceman.
E4	Overflow or water tank problem	If the power is not turned on, the machine cannot indicate that the water is full when adding water to the water tank. If you continue to add water after the water is full, it may cause the E4 to alarm when the water is turned on. The machine occur overflow or something wrong with the floater in the water tank, needs to be repaired by qualified serviceman.
Ed	Abnormal communication	Need to be repaired by qualified serviceman.

⚠Warning

- If overflow occurs, turn off the main water supply before calling a service.
- If there is water in the base pan because of an overfill or small leak, the water should be removed before restarting the dishwasher.
- If there is an error code that cannot be solved, please request professional assistance.

Specification

Model	DWS-34ATW
Dimension (cm)	42 (W) x 47 (H) x 44 (D)
Rated voltage	110V AC
Rated frequency	60 Hz
Rated power	640 W
Water consumption	6 L
Power consumption	0.430 kWh
Control mode	Electronic type
Water-proofing grade	IPX1
Washing capacity	Washing capacity : 34 pcs (Soup plate X1 + Melamine bowl X1 + Melamine dessert plate X1 + Dessert plate X5 + Dessert bowl X2 + Mug X2 + Glass X3 + Cup X1 + Saucer X1 + Knife X3 + Soup spoon X3 + Teas poon X3 + Dessert spoon X3 + Fork X3 + Serving fork X1 + Gravy ladle X1
Total weight	16.5 kg
Net weight	14 kg

HOW TO CONNECT WITH TOSHIBA TSMARTLIFE APP

Before you start,make sure that:

1.Your smartphone is connected to home Wireless Network,and you know the network password.

2.You are next to the appliances.

3.The frequency of your wireless router is 2.4GHz(preferable)or 5GHz.

4.Initiate your mobile phone's Bluetooth and allows the APP to find your phone.

Download the TSmartLife app

On an app market (Google Play Store, Apple App Store), search for "TSmartLife" and find the TSmartLife app. Download and install it on your phone. You can also download the app by scanning the QR code below.

TSmartLife

Download the app & activate product

Download on the App Store

GET IT ON Google Play


1. Download and install the app. Search for: TSmartLife in the mobile application market, download and install the APP.




Connect your devices to TSmartLife

1 Please make sure your mobile phone is connected to Wireless Network. If not, go to Settings and turn on the wireless connection, select and connect to a Wireless Network. Also please turn on the Bluetooth on your phone. If not, go to Settings and turn it on.

1. Click on the APP icon to enter the APP.

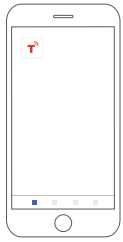

2.Read and agree on the **Privacy Policy and Software License and User Service Agreement.**

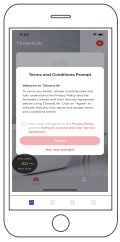


3. Click the button of **Login.**



4. Select region



5. Click the button of **Sign up>.**

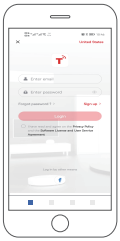

6. Enter email and send confirmation code.



English

HOW TO CONNECT WITH TOSHIBA TSMARTLIFE APP

7. Enter email and confirmation code. Agree on the **Privacy Policy and Software License and User Service Agreement.**Click the button of **Next.**



8.Set password.Then click the button of **submit.**



9.Enter the homepage. click the button of **Add device.**



10. Long press for 3 seconds, light flashes.




11.Select a device. Choose Dishwasher.Or click the Device that can be connected to jump to Step 13.




12.Select model DWS-34ATW.




13.Choose Wireless Network interface.

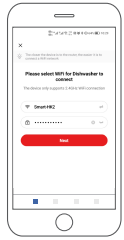

14. If you haven't authorized location before, please allow access in the settings the turn on the precise location. Click the button of **Go to setting.**



15.Enter **Setting** page. Click the button of **Location.**




HOW TO CONNECT WITH TOSHIBA TSMARTLIFE APP

16.Choose **While Using the App.**




17.Return back to the **TSmartLife.** Enter Wireless Network password. Click the button of Next.

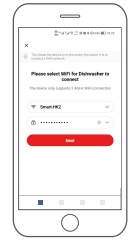

18.Wait for connecting.



19.Added successfully. Named it as your wish.Then click the button of **Done.**

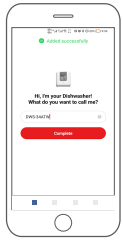

20.Back to the homepage.



Note


- Make sure your devices are powered on.
- Keep your mobile phone close enough to your device when you are connecting network to your device.
- Connect your mobile phone to the wireless network at home, and make sure you know the password of the Wireless Network.
- Check if your router supports 2.4 GHz Wireless Network band and turn it on. If you are not sure whether the router supports 2.4 GHz band, please contact the router manufacturer.
- The device cannot connect to the Wireless Network that requires authentication, and it usually appears in public area such as hotels, restaurants, etc. Please connect to a Wireless Network that does not require authentication.
- It is recommended to use a Wireless Network name that only contains letters and numbers. If your Wireless Network name contains special characters, please modify it in the router.
- Turn o˙ the WLAN+ (Android) or WLAN Assistant (iOS) function of your mobile phone when connecting network to your devices.
- In the case that your device connected to Wireless Network before but it needs to reconnect, please click "+" on app Home page, and add your device again by the device category and model according to the instructions on app.
- The APP plug-in will be automatically updated to the latest version in the wireless network environment.

English


INSTRUCTIONS TO FUNCTION WITH TSMARTLIFE APP

Application software operation interface


❶ Click power on to enter the home page of Dishwasher

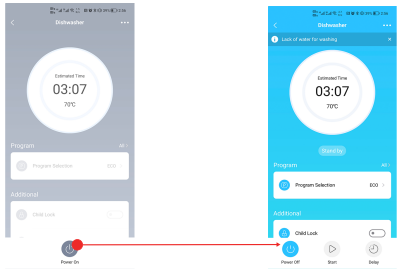


❷ Click "Program Selection" to select the program, click "Confirm" to return to the main interface

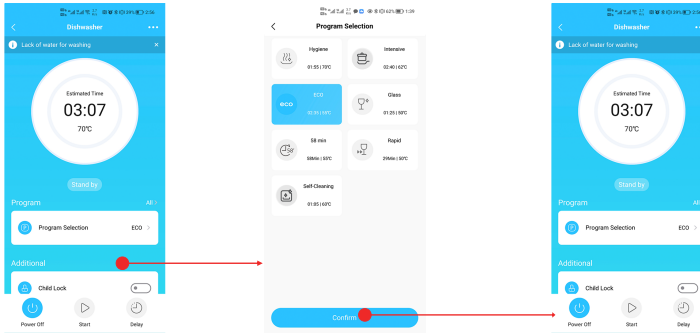


❸ Slide the screen to the bottom, select the additional functions you need in "Additional", and click "Start" to start running after the selection is complete.

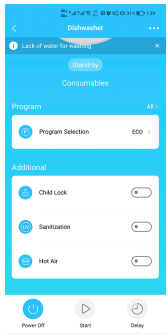

4 Click "Delay" to set delay start. After entering the next interface, click "Delay" again to select the startup time you want, click "Program Selection" to select the program you need, and you can also select additional functions. After setting, click "Confirm" to jump to the appointment interface, the device will enter the appointment countdown automatically. If you click start, the device will start the washing process directly.

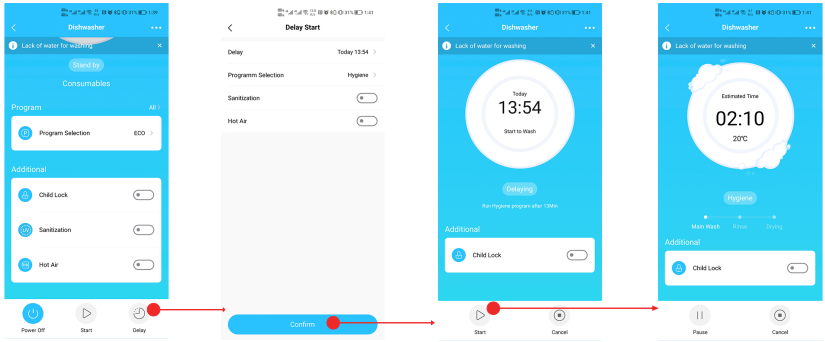

5 Click "Child Lock" to start the child lock function, click again to cancel。 You can start or cancel the function when the program is running

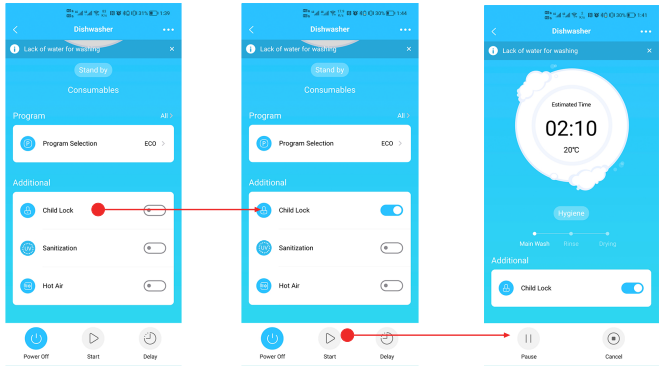

English

Toshiba TSmartLife Troubleshooting

Under this circumstance	Check · Cause
If unable to join network at the first time	Troubleshooting Problems: If unable to join network • Cannot see home SSID network: • Week signal ... Long distance between router and appliance or encountering too many barriers can reduce the signal level too much. Reorienting the router may improve the situation slightly. A better solution would be a wireless network repeater or a higher quality router that have more sensitive receivers to better handle weak signals. • SSID network seen but cannot join: • Networks requiring authentication ... often used with public networks at restaurants or hotels. Products cannot accept the legal agreement required to join the network. Please switch to a network that does not require authentication. • Insufficient encryption ... for cybersecurity reasons we does not recommend products to join non-encrypted or insufficiently encrypted networks (e.g. WEP encryption). • Password length ... for cybersecurity reasons we recommends networks to have strong passwords, but the maximum password length supported is 32 characters. • Incorrect password ... If trying to join a different network than the one the phone is currently using, then it is always possible that the network password in the phone is no longer correct. In this case, new credentials will need to be provided. • Illegal SSID name ... App accepts any SSID name, but the App may issue warning when attempting to join network with certain non-alphanumeric or foreign language characters. • WLAN+ (Android} or WLAN Assistant (iOS) functions are turned on, please turn off and reconnect to the Internet
If can join network but the connection is unstable	• Check if the distance between the router and appliance is too far or encountering too many barriers cause week signal • Check if the wireless network is ok and stable.
If your Device offline, check your connection status Please confirm that	• Whether the device is properly powered • Whether the network signal is stable • Whether the Wireless Network name or password has been changed, if so, please add the device again

Hereby, Foshan Shunde Midea Washing Appliances Mfg. Co., Ltd., declares that this dishwasher is in compliance with the essential requirements and other relevant provisions of RE Directive 2014/53/EU. A copy of the full DoC is attached.

Operating frequency of product :

RF	Transmit frequency	Maximum transmit power
BLE	2402-2480MHz	<10dBm
2.4GHz	2412-2472MHz	<20dBm

Note: The product is suitable to operating in the environment of 4~40℃

#Details**Matter**

https://www.toshiba-lifestyle.com/sg