


TWP-TSR75SHK(W) TWP-TSR75SHK(M) Quick Start Guide

First use instruction


- When using for the first time, it is specially stated that you need to feed water twice, and it takes about 7 minutes to produce water.

1. Open the package, place it on the level table, and install the water tray.

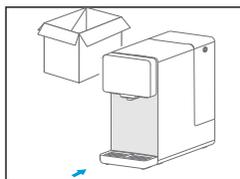


2. Steps of taking out the water tank:

- 2.1 Remove the water tank cover;
- 2.2 Lift the handle of the water tank and pull the water tank out, and then lift it out after it is disconnected from the base.

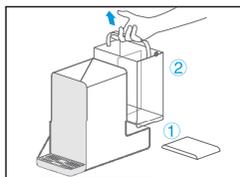


3. Fill water:

Add tap water to the raw water tank (the larger one).

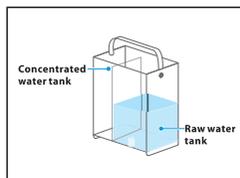


4. Install the water tank:

- 4.1 Align the water tank with the socket on the base and press it down;
- 4.2 After the water tank is pressed tightly, push the water tank to the side of the machine body;
- 4.3 Install the water tank cover, at this time, the top of the water tank cover is flush with the top of the machine body.

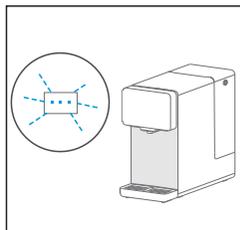


5. Start to produce water:

During the water production process, if the "Water Shortage" indicator is on, please pour out the remaining water in the water tank, fill the raw water tank with tap water, and repeat the above steps.

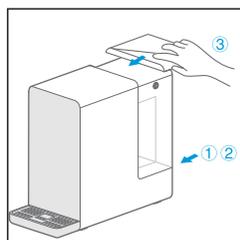


6. After the completion of water preparation, the internal pipeline is cleaned by emptying the internal water tank. Internal emptying: In the standby state, hold the " Ambient Water " and " Formula Milk " buttons at the same time for 3 seconds to enter the drainage mode; At this time, the Ambient water icon flashes, and other icons keep on. Press the Ambient water button or wait for 3 minutes after draining out water, it will automatically exit the drainage mode. When used for the first time, it is necessary to fill the raw water tank to clean the water purifier, repeated operation 3-5 times.

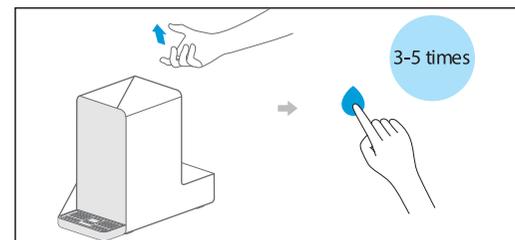

7. When first use the machine, after filling water in raw water tank, water purifier will repeat the above procedures until the purified water tank is full. That is normal. If there is fully filled purified water tank, machine will enter the standby state.


Take water :

1. Click any icon to light up the screen, the screen activation time is 3 mins.

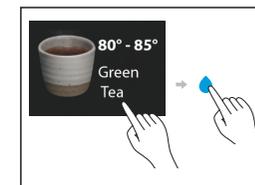

2. Ambient water

After the screen is on, the temperature is automatically selected as Ambient water, click the Water Outlet button to discharge the water.

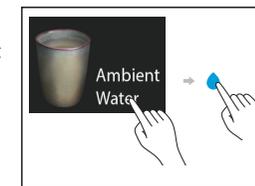

3. Other options

Select the corresponding temperature, and press the Water Outlet button to take water.

